 
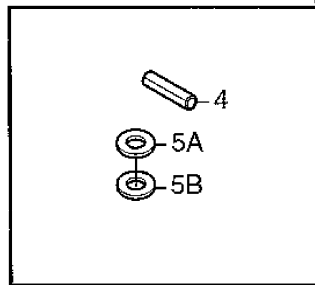 
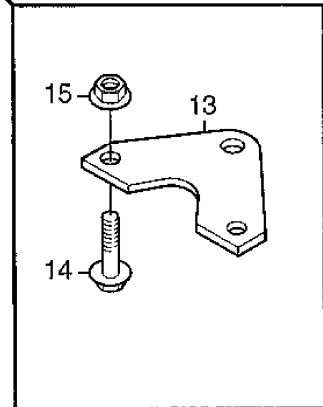 
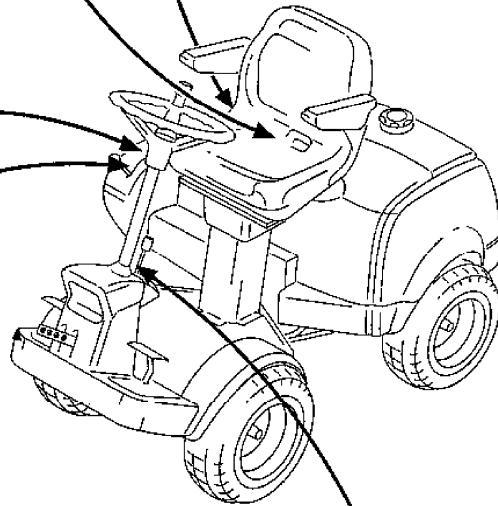 
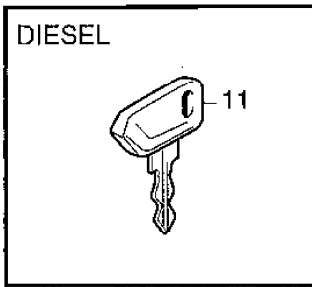 
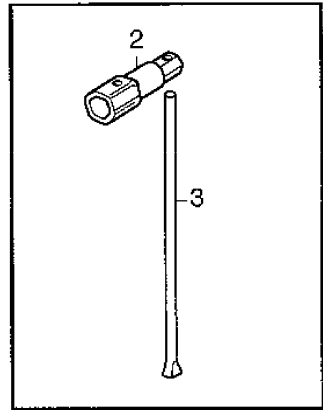 
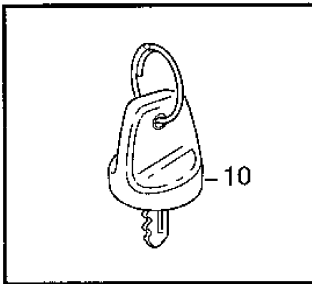 
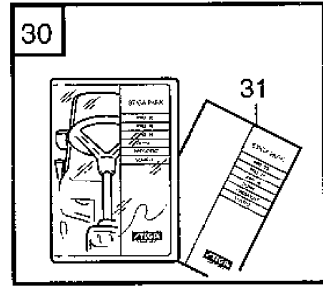 
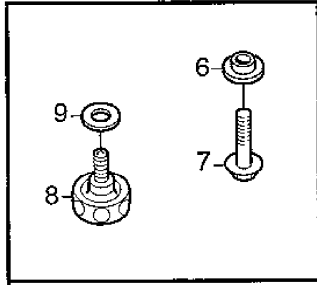 


Section: KANZAKI TRANSAXLE K46G

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
K46G						
3	1	1139-1321-01	Lower housing		s/n 012411-	
5	1	1139-1301-01	Tube			
6	2	1139-1336-01	Hose clamp			
8	1	1139-1150-01	Magnet			
9	1	1139-1240-01	Holder-magnet			
11	1	1139-1028-01	Spring			
12	1	1139-1251-01	Shaft-bypass			
13	1	1139-1189-01	Lever-bypass			
14	1	1139-1161-01	Ring			
15	1	1139-1275-01	Bore plug			
16	1	1139-1104-01	Snap ring			
19	2	1139-1117-01	O-ring			
20	1	1139-1119-01	Seal			
21	2	1139-1295-01	Tapping screw			
22	14	1139-0244-01	Tapping screw			
24	1	1139-1340-01	Center case assy		s/n 015419-	
24	1	1139-1273-01	Center case assy		s/n 010804-015418	
25	1	1139-1158-01	Pin			
26	1	1139-1063-01	Filter			
27	3	1139-1294-01	Bolt			
28	2	1139-1339-01	Valve			
29	2	1139-1243-01	Spring			
30	2	1139-1307-01	Filter			
31	1	1139-1159-01	Cylinder block assy			
32	1	1139-1245-01	Spring			
33	1	1139-1246-01	Pump shaft			
34	3	1139-1146-01	Ring			
35	1	1139-1110-01	Ball bearing			
36	1	1139-1157-01	Housing			
37	1	1139-1054-01	Bearing			
38	1	1139-1139-01	Cylinder block assy			
39	1	1139-1160-01	Washer			
40	1	1139-1247-01	Motor shaft		s/n 010804-015563	
40	1	1139-1353-01	Motor shaft		s/n 015564-	
41	1	1139-1021-01	Snap ring			
42	1	1139-1272-01	Motor gear			
43	1	1139-1286-01	Ball bearing			
44	2	1139-1296-01	Metal thrust			
45	1	1139-1067-01	Swash plate assy			
46	1	1139-1068-01	Bearing			
47	1	1139-1070-01	Thrust plate			
48	1	1139-1069-01	Thrust plate			
49	1	1139-1354-01	Control shaft		s/n 012411-	
49	1	1139-1315-01	Control shaft		s/n 010804-012410	
50	1	1139-1316-01	Fulcrum			
51	1	1139-1312-01	Spring			
52	1	1139-1314-01	Control arm			
53	1	1139-1325-01	Control lever			
54	1	1139-1250-01	Jerky plate			
55	1	1139-1102-01	Washer			
56	1	1139-1327-01	Pin		s/n 010804-012410	
56	1	1139-1355-01	Cotter pin		s/n 012411-	
57	1	1139-1329-01	Pin			
58	1	1139-1285-01	Pin			
59	2	1139-1115-01	O-ring			
60	1	1139-1127-01	Nut			
61	1	1139-1162-01	Differential gear k			
62	1	1139-1258-01	Final gear			
63	1	1139-1255-01	Collar			
64	1	1139-1256-01	Reduction shaft			
65	2	1139-1257-01	Washer			
66	1	1139-1267-01	Reduction gear			
67	1	1139-1259-01	Final pinion			
68	1	1139-1344-01	Axle shaft-left		s/n 014195-	
68	1	1139-1269-01	Axle shaft-left		s/n 010804-014194	
69	1	1139-1345-01	Axle shaft-right		s/n 014195-	








Section: KANZAKI TRANSAXLE K46G

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
K46G						
69	1	1139-1270-01	Axle shaft-right		s/n 010804-014194	
70	2	1139-1078-01	Thrust washer			
71	2	1139-1163-01	Ring			
72	2	1139-1080-01	Seal			
73	2	1139-1164-01	Bushing			
75	1	1139-1260-01	Brake shoe			
76	1	1139-1261-01	Brake arm			
77	1	1139-1320-01	Brake shaft			
78	1	1139-1263-01	Return spring			
79	1	1139-1264-01	Brake actuator			
80	1	1139-1282-01	Pin			
81	2	1139-1114-01	O-ring			
82	2	1139-1281-01	Pin			
83	1	1139-1248-01	Spline collar			
84	1	1139-1249-01	Pulley			
85	1	1134-4190-01	Fan			
86	1	1139-1266-01	Lock washer			
87	1	1139-1149-01	Snap ring			
89	1	1139-1302-01	Upper housing assy			
90	1	1139-1280-01	Pin			
91	1	1139-1303-01	Oil seal			
95	1	1139-1279-01	Pin			
99	2	1139-1103-01	Seal washer			
100	2	1139-1123-01	Bolt			
101	1	1139-1306-01	Adapter			
102	1	1139-1276-01	Collar			

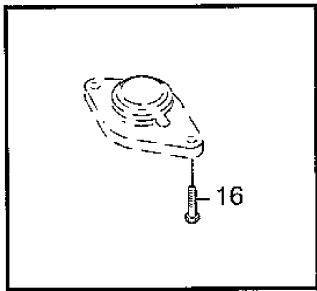

Section: PARK ACCESSORY BAGS

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	6112					
	6113	6114				
	6143	6216 6221 6231				
0			1 1134-4249-04	Assembly parts		
0	1	1	1 1134-4249-01	Assembly parts		
2	1	1	1 1134-4541-01	.Spark plug wrench	5/8" (16 mm)/21 mm	
3	1	1	1 1111-2113-01	.Rod		
4	1	1	1 9595-0262-00	.Locating pin		
5A	1	1	1 9699-0103-02	.Flat washer	0.5 mm	
5B	1	1	1 9699-0114-02	.Flat washer	1.0 mm	
6	2	2	2 1134-4185-01	.Flange washer		
7	2	2	2 9959-0820-16	.Screw		
8	2	2	2 1134-2609-01	.Knob		
9	2	2	2 9699-0062-02	.Flat washer		
10	2	2	2 1134-4734-01	.Ignition key		
11			2 1134-4909-01	.Ignition key		
13	1	1	1 1134-4003-01	.Towing plate		
14	2	2	2 9959-0820-16	.Screw		
15	2	2	2 9739-0831-22	.Nut		
16	2	2	2 9837-8914-12	.Screw	6112, 6113, 6143	
30	1	1	1 1134-3771-57	Folder w.manuals		
30			1 1134-3771-58	Folder w.manuals		
31	1	1	1 8211-0209-10	.Safety regulations		
31	1	1	1 8211-0276-04	.Owner's manual		
31	1	1	1 8211-0277-03	.Service book		
31	1	1	1 8211-0278-04	.Assembly instructi		
31			1 8211-0315-02	.Owner's manual		
31			1 8211-0322-01	.Service book		
31			1 8211-0325-02	.Owner's manual		
31	1	1	1 8211-2002-03	.Warranty card		
31	1	1	1 8211-0321-04	.EC-Declaration		

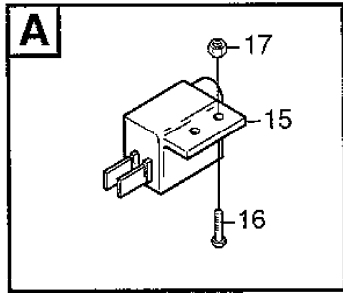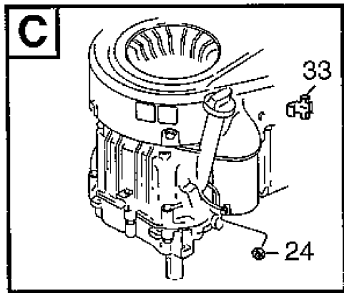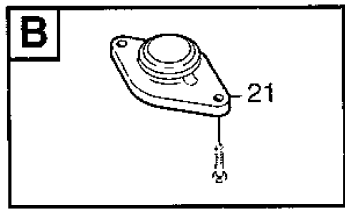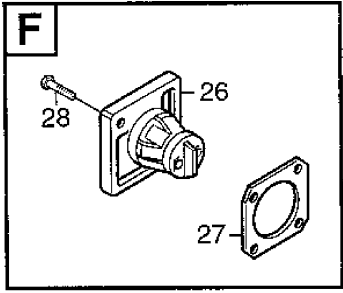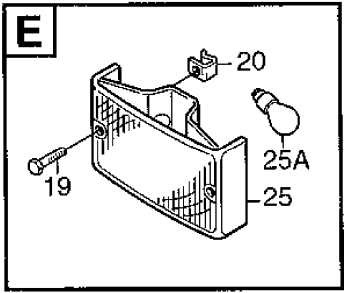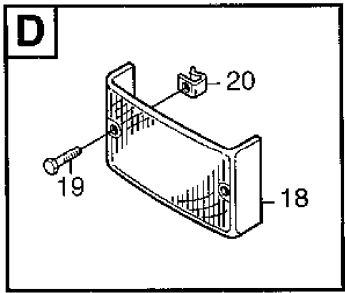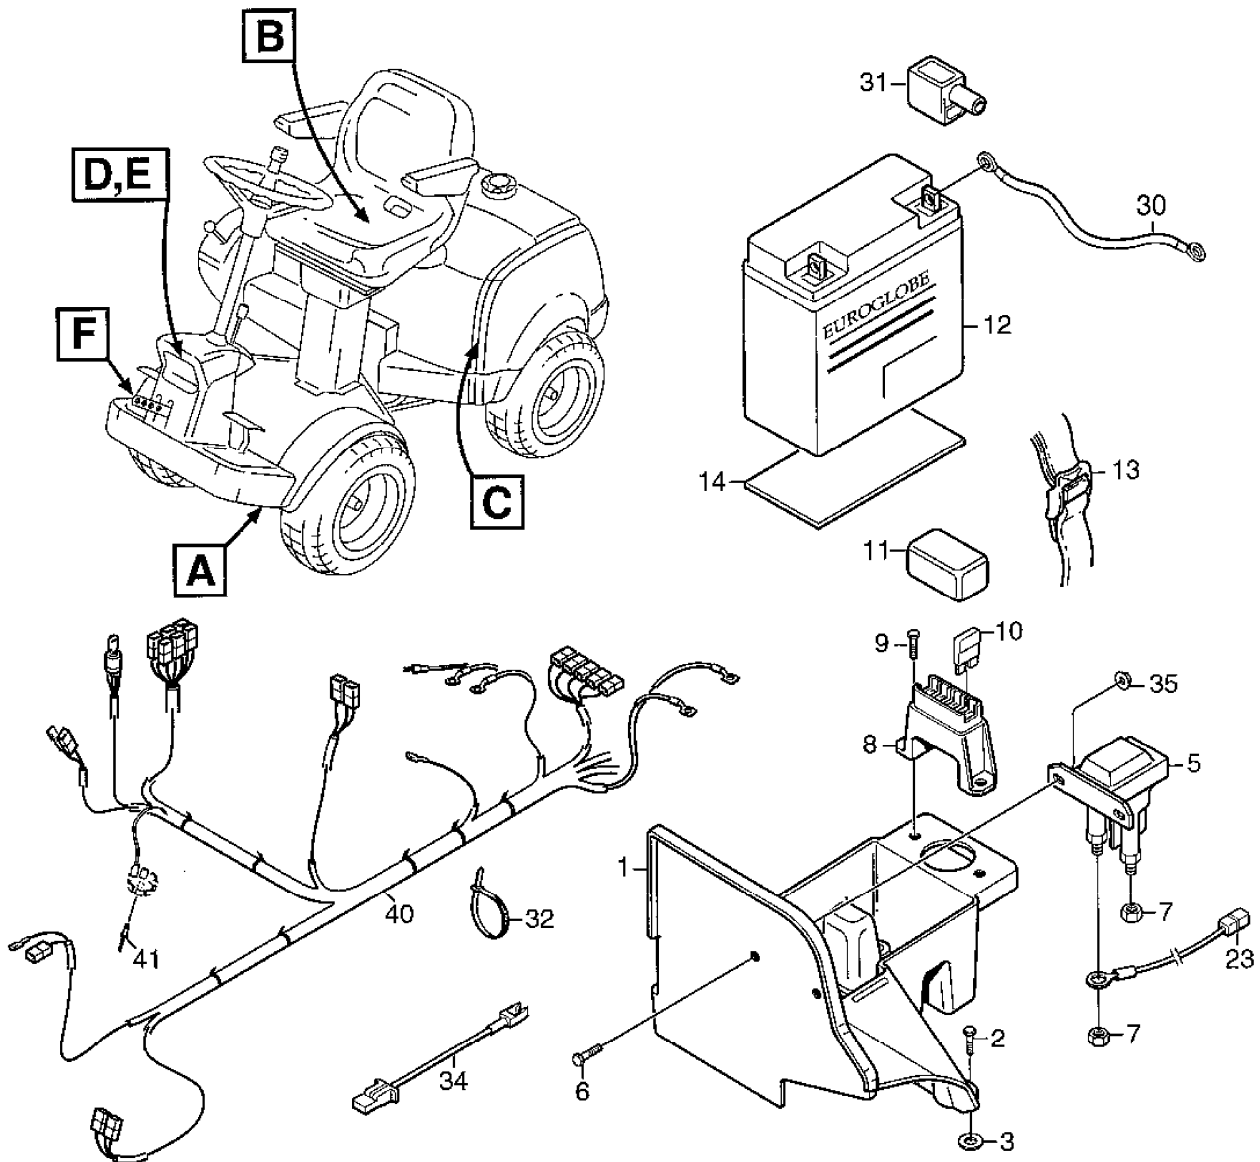       


STIGA
1378A
SPARE PARTS

Section: PARK EL. EQUIPMENT (Petrol engines)

Pos.	Quantity	Spare part No				Description	Kit	Notes	New
------	----------	---------------	--	--	--	-------------	-----	-------	-----

		6113		6216	
		6112	6143	6114	6221

1	1	1	1	1	1134-4806-01	Battery shelf		
2	3	3	2	2	9893-0616-16	Screw		
3	2	2			9699-0060-02	Flat washer		
5	1	1	1	1	1134-2962-01	Solenoid assy		Inkl. pos 7
6	2	2	2	2	9893-0616-16	Screw		
7	2	2	2	2	9794-5131-02	.Nut		
8	1	1	1	1	1134-3491-01	Fuse holder		
9	2	2	2	2	9838-9516-12	Screw		
10			1	1	1134-3496-01	Fuse		10A
10	1	1	1	1	1134-3496-06	Fuse		20A
10			1	1	1134-3496-07	Fuse		30A
11	1	1	1	1	1134-3631-01	Cover-fuse holder		
12	1	1	1	1	1134-4804-01	Battery		
13	1	1	1	1	9400-0064-02	Battery holder		
14	1	1	1	1	1134-5227-01	Battery pad		
15			1	1	1134-3399-01	Switch		
15	1	1			1134-3399-02	Switch		
16	2	2	2	2	9997-0520-16	Screw		
17	2	2	2	2	9747-0531-02	Nut		
18	1				1134-4173-01	Cover		
19	2	2	2	2	9849-7819-16	Screw		
20	2	2	2	2	1134-4177-01	Clips		
21	1	1			1134-4194-01	Seat switch		
23	1	1	1	1	1134-4970-01	Cable		
24	1	1	1	1	9795-3531-02	Nut		
25		1	1	1	1134-4172-01	Headlamp assy		
25A		1	1	1	9400-0293-01	.Bulb		12V - 21W
26			1	1	1134-4056-01	Female terminal		
27			1	1	1134-4052-01	Support washer		
28			2	2	9840-7716-16	Screw		
30	1	1	1	1	1134-0234-02	Battery cable (+)		
31	1	1	1	1	1134-2310-01	Guard cap		
32	15	15	15	15	9579-0003-00	Cable holder		6221 - 20 st.
33		1	2	2	9400-0231-00	Splicer		
34		1			1134-4994-01	Cable		6113-14, 6113-44
35	2	2	2	2	9739-0631-22	Nut		
40		1			1134-5085-01	Harness		6113-24, 6113-94
40	1				1134-4837-01	Harness		
40		1			1134-4838-01	Harness		6113-14
40			1		1134-4839-01	Harness		
40				1	1134-5086-01	Harness		6216
40				1	1134-5087-01	Harness		6221
41	1	1	1	1	9632-0522-00	Pop rivet		


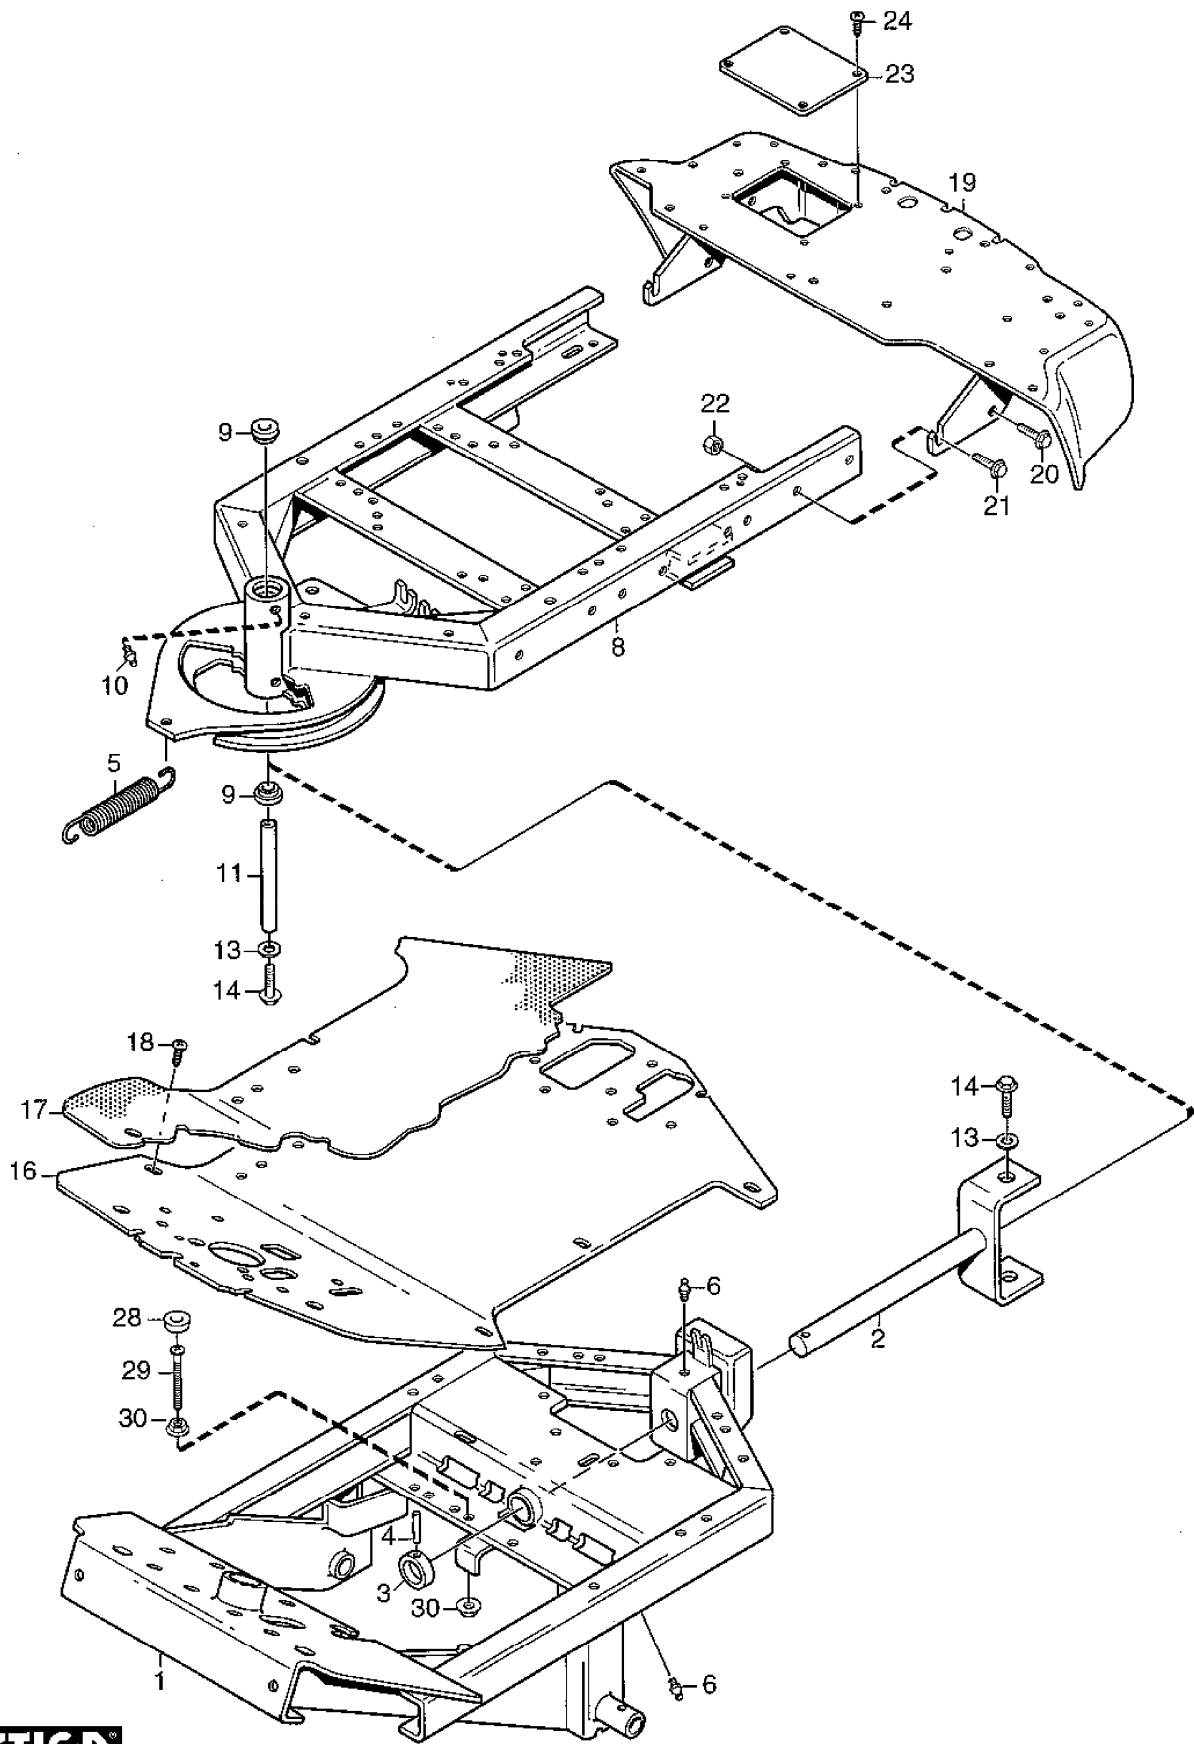 


Section: PARK FRAME (Petrol engines)

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	6112					
	6113	6113	6113			
	-14	-44	-94	6216		
	-24	6143	6114	6221		
1	1	1	1	1	1134-5103-01	Frame-front
2	1	1	1	1	1134-3963-02	.Clevis
3	1	1	1	1	1134-0031-00	.Pivot shaft stop
4	1	1	1	1	9595-0262-00	.Locating pin
5	1	1	1	1	1134-2171-01	Spring
6	2	2	2	2	9501-0500-00	Grease joint
8	1	1	1	1	1134-3966-01	Frame-rear
9	2	2	2	2	9547-0001-00	.Bearing
10	2	2	2	2	9501-0500-00	Grease joint
11	1	1	1	1	1134-3968-02	Centre shaft (188 m
13	2	2	2	2	9699-0035-02	Flat washer
14	2	2	2	2	9959-1020-16	Screw
16	1	1	1	1	1134-3965-01	Floor plate
17	1				1134-4062-01	Floor mat
17	1	1	1	1	1134-4061-01	Floor mat
18	2	2	2	2	9893-0616-16	Screw
19				1	1134-4833-01	Bumper-grey
19	1	1	1		1134-4833-02	Bumper-black
20	2	2	2	2	9945-0816-16	Screw
21	2	2	2	2	9959-0820-16	Screw
22	2	2	2	2	9739-0831-22	Nut
23	1	1	1	1	1134-4167-01	Cover
24	4	4	4	4	9840-8009-16	Screw
28	1	1			1134-4975-01	Rubber block
29	1	1			9950-0570-12	Screw
30	2	2			9739-0531-22	Nut


6112-14

  6113-14, 6113-24

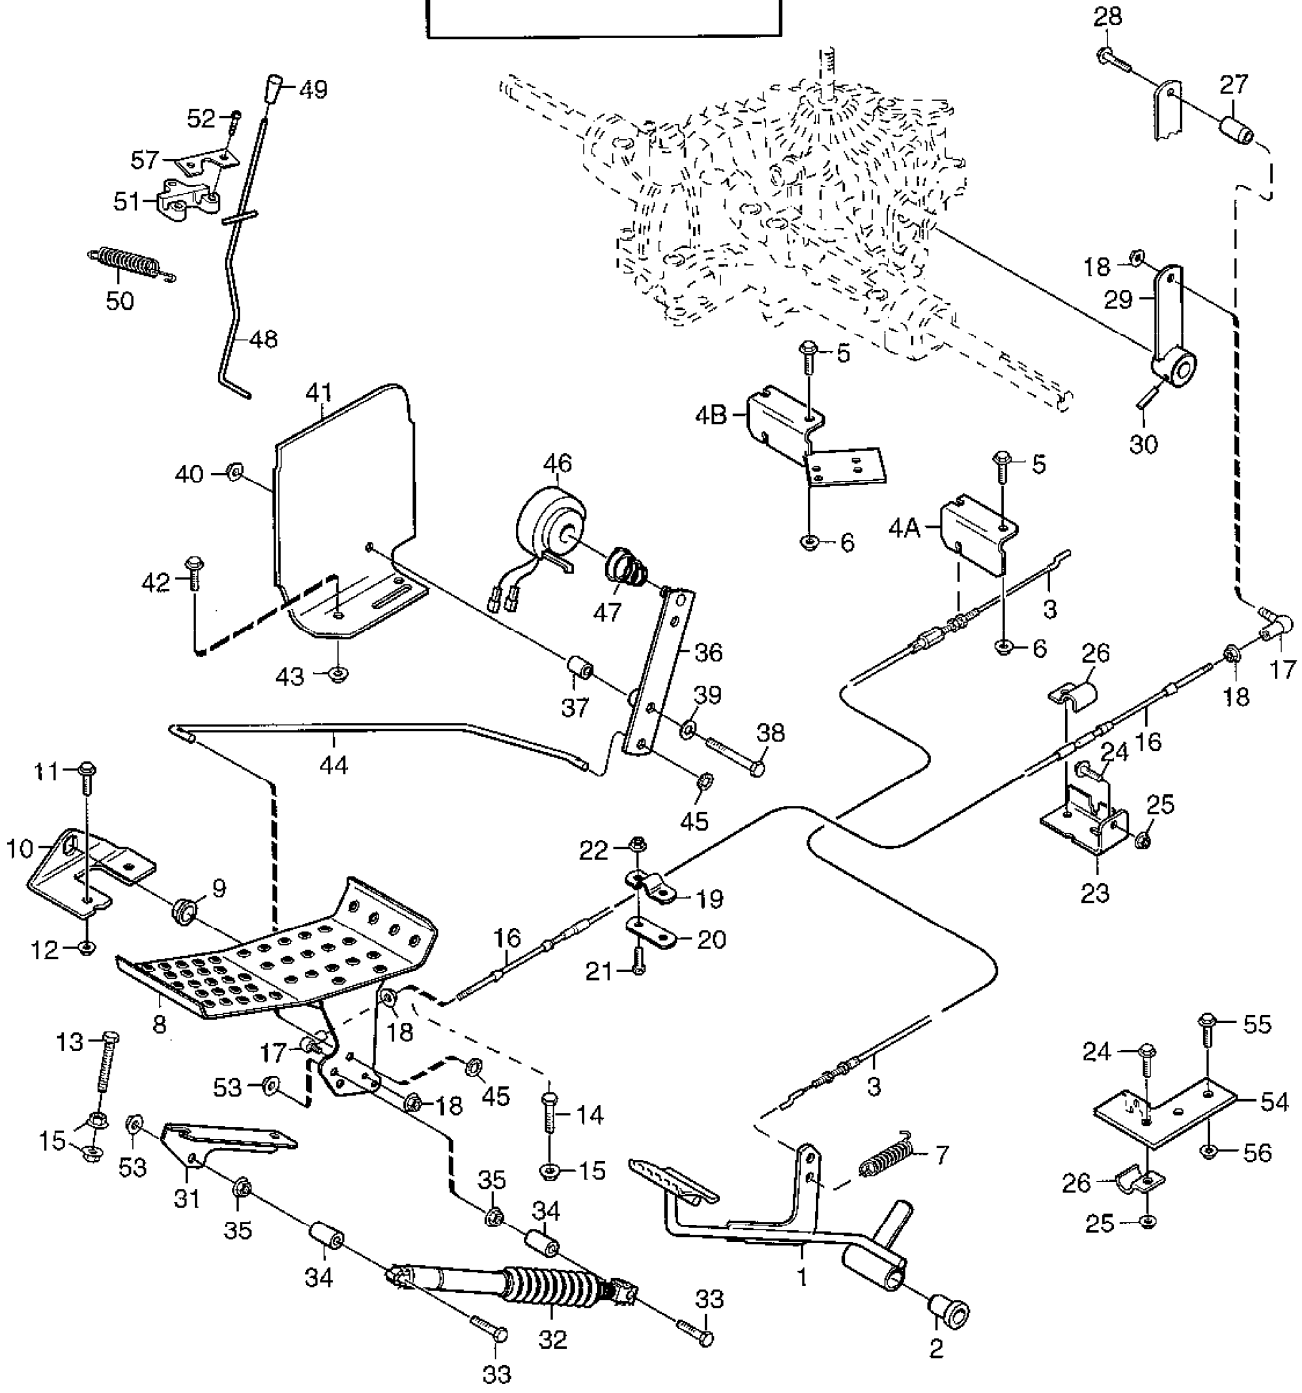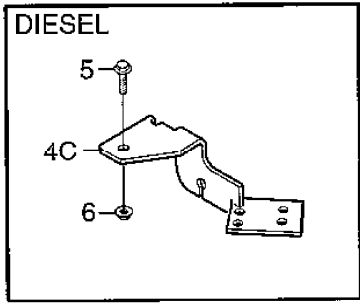


Section: PARK PRES.-COMFORT-ROYAL- PRO 16-PRO 20-DIESEL FOOT CONTROL

Pos.	Quantity	Spare part No				Description	Kit	Notes	New
	6113	6216							
	6143	6114	6221	6231					
1	1	1	1	1	1134-4247-01	Brake/clutch pedal			
2	1	1	1	1	1134-9024-01	.Bearing	Sats 4 st/kit of 4		
3			1	1	1134-3584-02	Brake/clutch cable			
3	1	1			1134-3584-03	Brake/clutch cable			
4A	1	1			1134-3906-01	Cable holder			
4B			1		1134-4760-01	Holder			
4C				1	1134-4927-01	Holder			
5	2	2	2	2	9959-0816-16	Screw			
6	2	2	2	2	9739-0831-22	Nut			
7	1	1	1	1	1134-3974-01	Spring			
8	1	1	1	1	1134-4008-01	Drive pedal			
9	2	2	2	2	1134-2780-01	Bearing			
10	2	2	2	2	1134-2700-01	Bracket			
11	2	2	2	2	9959-0820-16	Screw			
12	2	2	2	2	9739-0831-22	Nut			
13	1	1	1	1	9997-0870-16	Screw			
14	1	1	1	1	9959-0816-16	Screw			
15	3	3	3	3	9739-0831-22	Nut			
16			1	1	1134-2766-04	Speed control cable			
16	1	1			1134-2766-05	Speed control cable			
17	2	2	2	2	9570-0001-00	Elbow link			
18	3	3	4	4	9739-0531-22	Nut			
19	1	1	1	1	1134-0266-00	Attaching clamp			
20	1	1	1	1	1134-0267-00	Clamp plate			
21	2	2	2	2	9997-0520-16	Screw			
22	2	2	2	2	9739-0531-22	Nut			
23	1	1	1	1	1134-3395-01	Attachment			
24	2	2	2	2	9959-0820-16	Screw	L = 20 mm		
25	2	2	2	2	9739-0831-22	Nut			
26	1	1	1	1	1134-2021-01	Clamp			
27	1	1			1134-4013-01	Spacer			
28	1	1			9959-0820-16	Screw			
29			1	1	1134-4042-01	Control lever			
30			1	1	9595-0258-00	Locating pin			
31			1	1	1134-3996-01	Bracket			
32			1	1	1134-4187-01	Damper			
33			2	2	9997-0840-16	Screw			
34			2	2	1134-1565-09	Spacer			
35			2	2	9739-0831-22	Nut			
36		1	1	1	1134-4017-01	Lever-cruise contro			
37		1	1	1	1134-1565-01	Spacer			
38		1	1	1	9997-0850-16	Screw			
39		1	1	1	9699-0056-02	Flat washer			
40		1	1	1	9739-0831-22	Nut			
41		1	1	1	1134-4020-01	Plate-cruise contro			
42		2	2	2	9959-0816-16	Screw			
43		2	2	2	9739-0831-22	Nut			
44		1	1	1	1134-4021-01	Rod-cruise control			
45		2	2	2	9675-0012-02	Locking washer			
46		1	1	1	1134-2859-01	Magneto assy			
47		1	1	1	1134-2858-01	.Spring			
48	1	1	1	1	1134-5101-01	Brake rod			
49	1	1	1	1	1134-3808-01	Knob			
50	1	1	1	1	1131-1497-01	Spring			
51	1	1	1	1	1134-4002-01	Brake rod attachmen			
52	3	3	3	3	9838-9516-12	Screw			
53			2	2	9747-0831-02	Lock nut			
54			1	1	1134-3910-01	Cable holder			
55		3	3	3	9959-0816-16	Screw	L = 16 mm		
56		3	3	3	9739-0831-22	Nut			
57			1	1	1134-4944-01	Stop plate	13-6221, 13-6231		

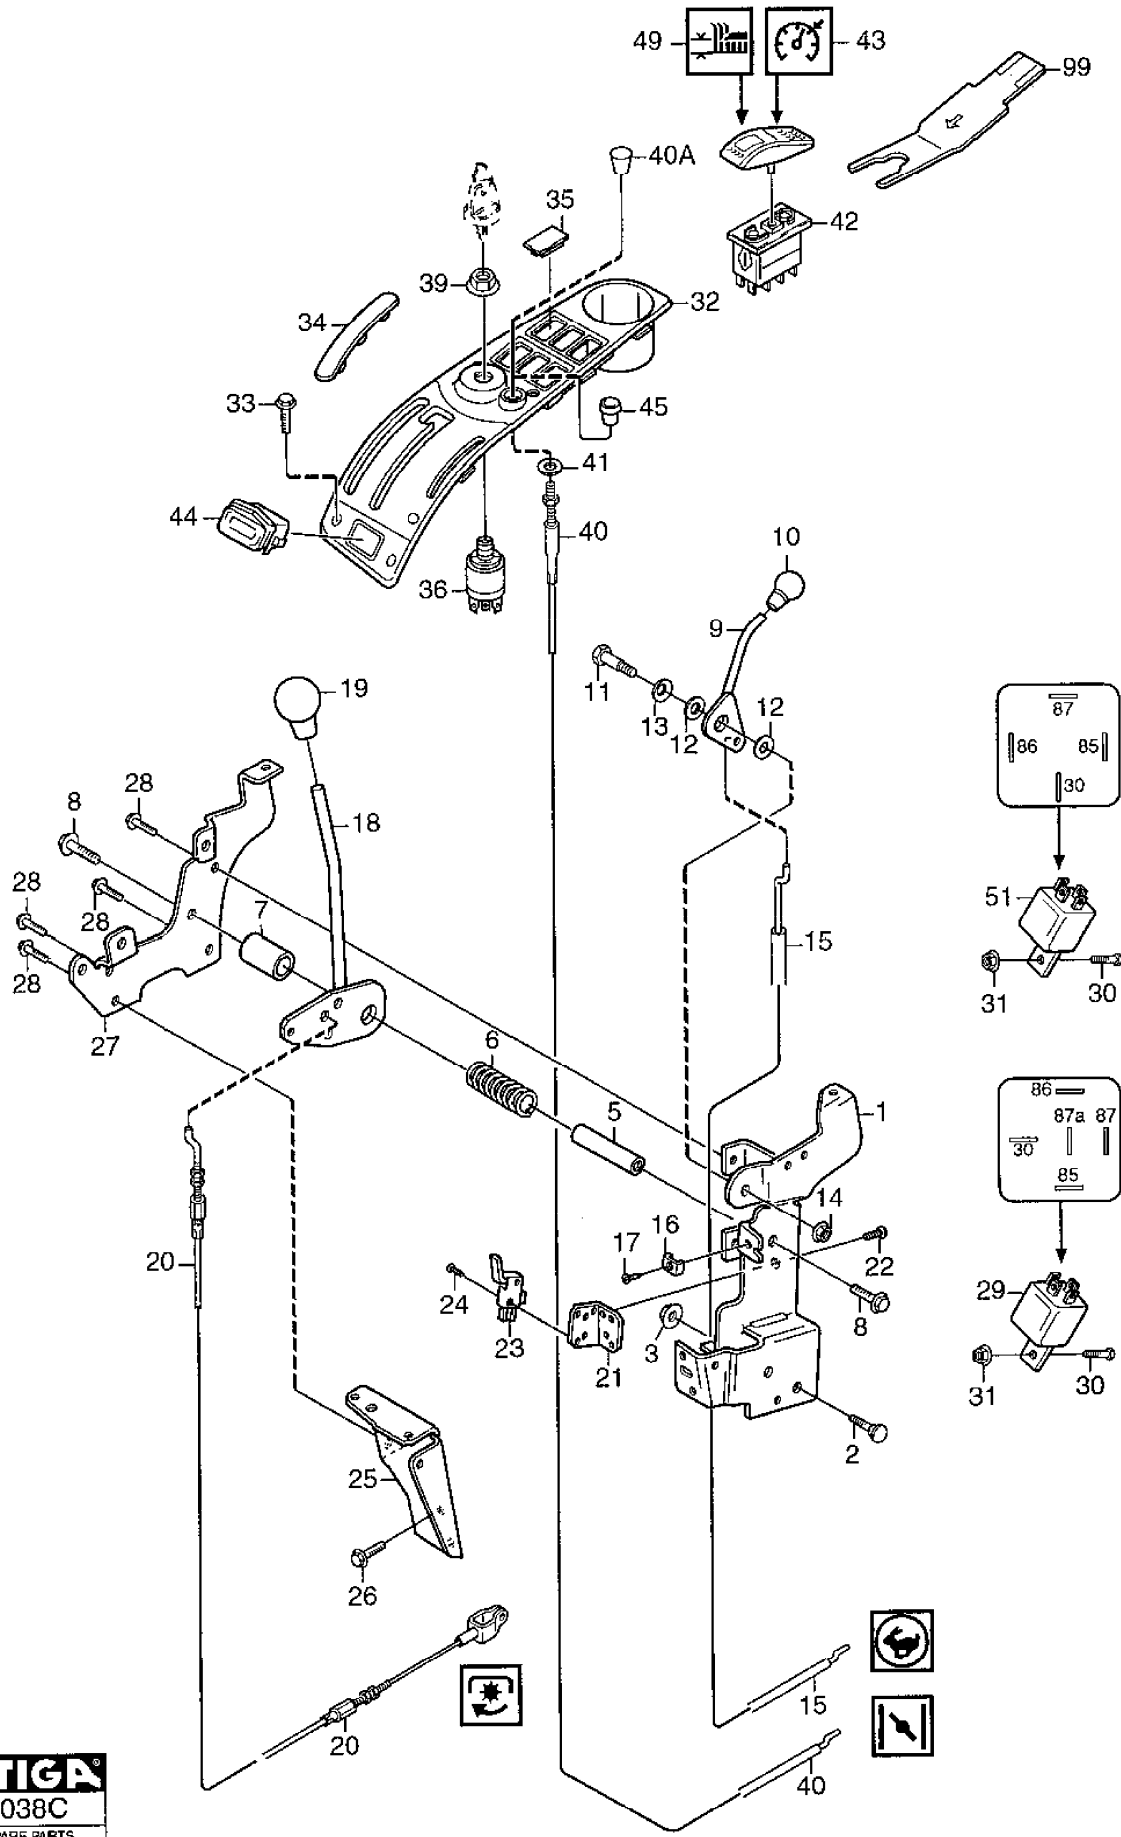 


Section: PARK PRESIDENT-COMFORT- ROYAL-POWER HAND CONTROLS

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	6113					
	-14					
	-24	6113				
	6143	6114	-94			
1	1	1	1	1134-4156-01	Panel bracket-inner	
2	2	2	2	9897-0820-16	Screw	
3	2	2	2	9739-0831-22	Nut	
5	1	1	1	1134-4065-01	Control shaft	
6	1	1	1	1134-4079-01	Spring	
7	1	1	1	1134-4080-03	Control sleeve	
8	2	2	2	9959-0820-16	Screw	
9	1	1	1	1134-4077-01	Throttle control	
10	1	1	1	1134-4078-01	Knob	
11	1	1	1	1134-0240-00	Shoulder screw	
12	2	2	2	1134-4242-01	Spacer washer	
13	1	1	1	9694-0001-00	Washer	
14	1	1	1	9739-0831-22	Nut	
15	1			1134-4197-01	Throttle cable	
15		1	1	1134-4195-02	Throttle cable	
16	1	1	1	9500-9991-00	Cable clamp	
17	1	1	1	9943-0516-16	Screw	
18	1	1	1	1134-4072-01	Control lever	
19	1	1	1	1134-2551-01	Knob	
20	1	1	1	1134-3573-03	PTO cable	
21	1	1	1	1134-4217-01	Switch bracket	
22	2	2	2	9849-8013-16	Screw	
23	1	1	1	9400-0285-01	Switch	
24	2	2	2	9840-7716-16	Screw	
25	1	1	1	1134-4487-02	Panel bracket	
26	2	2	2	9893-0616-16	Screw	
27	1	1	1	1134-3986-01	Front plate	
28	4	4	4	9893-0616-16	Screw	
29		2		1134-2871-03	Relay	
30		3		9997-0520-16	Screw	
31		3		9739-0531-22	Nut	
32		1	1	1134-3981-02	Dashboard	
32	1			1134-3981-05	Dashboard	
33	4	4	4	9946-0525-16	Screw	
34	1	1	1	1134-4154-01	Cover	
35	6	4	6	1134-4129-01	Cover	
36	1	1	1	1134-4093-01	Ignition switch	
39	1	1	1	1134-4749-01	Nut	
40		1	1	1134-2872-03	Choke control	
40A		1	1	1134-4338-01	.Control knob	
41		2	2	9699-0028-02	Flat washer	
42		2		9400-0282-01	Switch w.diode	
43		1		9400-0280-02	Cover-cruise contro	
44	1	1	1	1134-4179-02	Hour meter	
45	1			1134-4100-01	Plug	
49		1		9400-0280-03	Cover-height adjust	
51		1		1134-2871-01	Relay	
99		1		9400-0290-01	Tool for cover	Tillbehör/Accessory

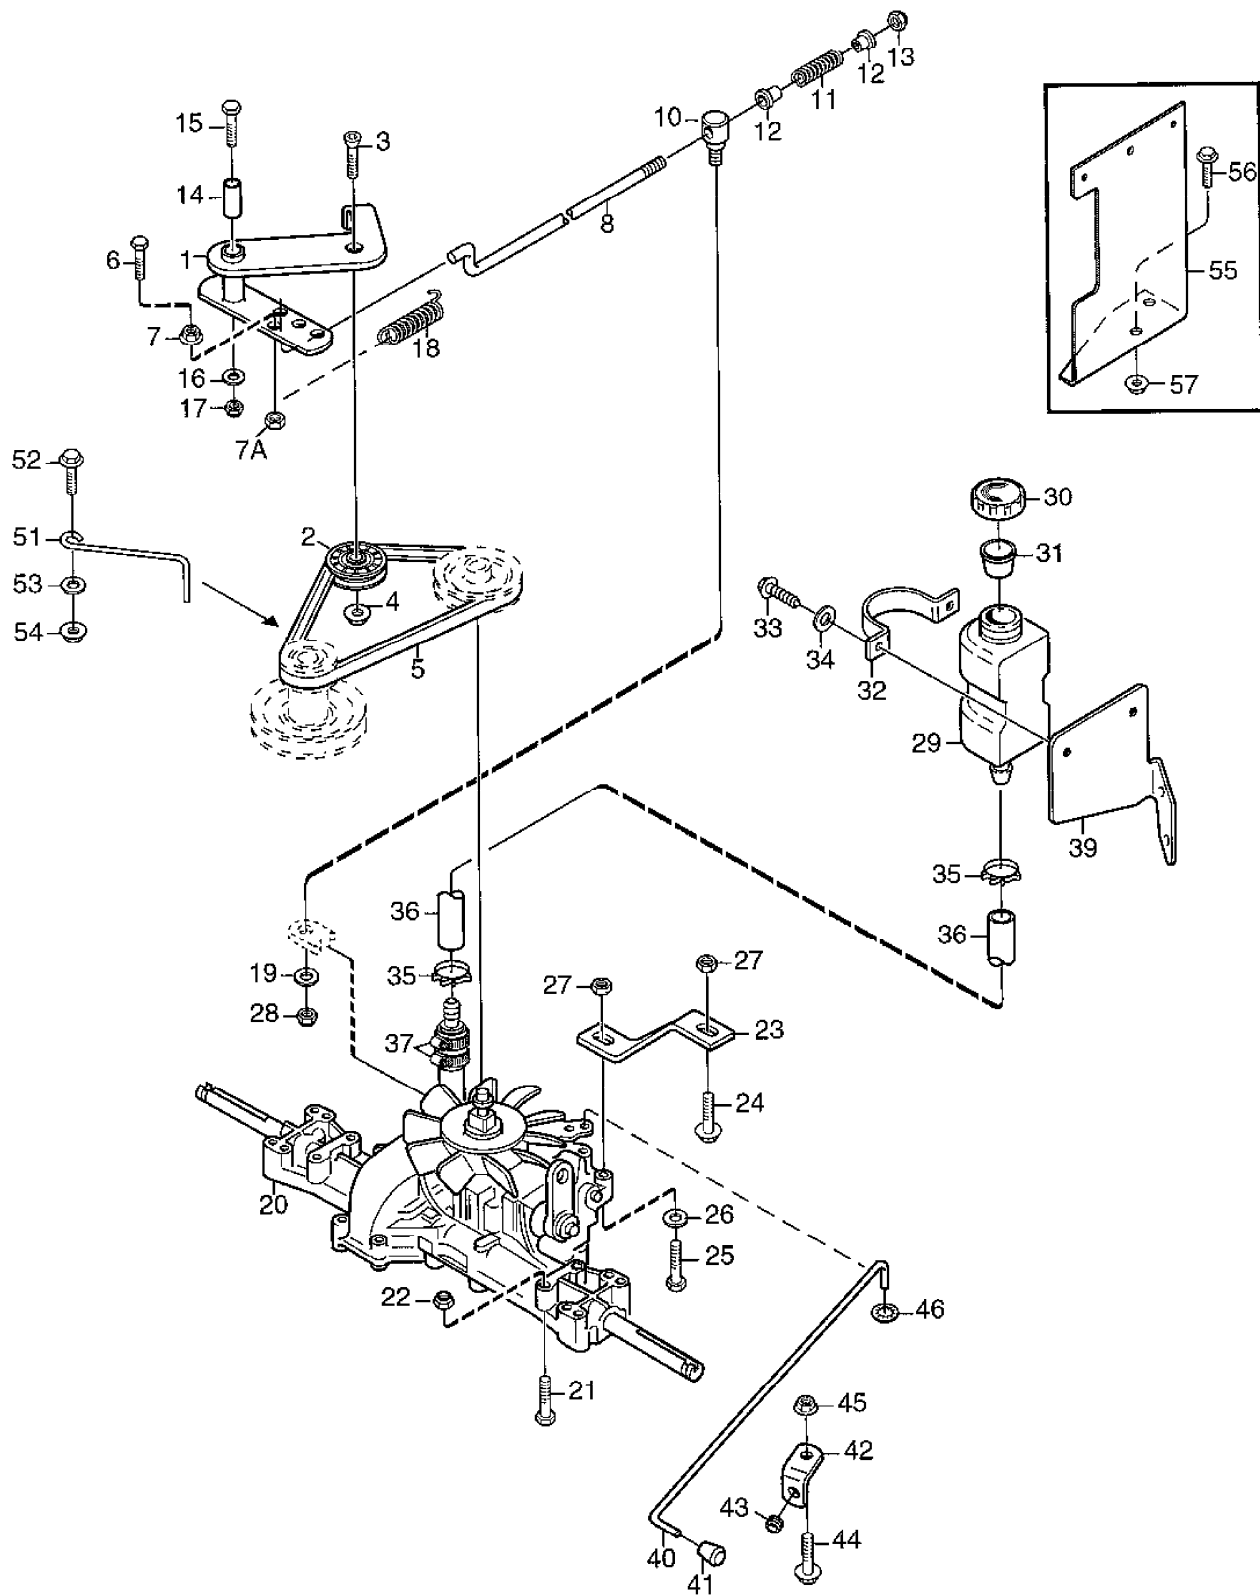 


Section: PARK PRESIDENT-COMFORT- ROYAL-POWER TRANSMISSION

Pos.	Quantity	Spare part No	Description	Kit	Notes	New	
	6113						
	-14	6113					
	-44	6114					
						6113	
						-24	
						6143	
1	1	1	1	1	1134-4000-02	Tension arm	
2	1	1	1	1	1134-3459-01	Tension roller	
3	1	1	1	1	9924-1035-16	Screw	
4	1	1	1	1	9799-1031-02	Nut	
5	1	1	1	1	1134-9058-01	V-belt	= 9585-0091-01
6	1	1	1	1	9997-0625-16	Screw	
7	1	1	1	1	9739-0631-22	Nut	
7A	1	1	1	1	9747-0631-02	Lock nut	
8	1	1	1	1	1134-3377-02	Control rod	
10	1	1	1	1	1134-4171-01	Pivot pin	
11	1	1	1	1	1134-4183-01	Compression spring	
12	2	2	2	2	1134-3456-01	Bushing	
13	1	1	1	1	9747-0631-02	Lock nut	
14	1	1	1	1	1134-1565-08	Spacer	
15	1	1	1	1	9997-0870-16	Screw	
16	1	1	1	1	9699-0056-02	Flat washer	
17	1	1	1	1	9747-0831-02	Lock nut	
18	1	1	1	1	1134-1949-01	Spring	
19	1	1	1	1	9699-0060-02	Flat washer	
20	1	1	1	1	1134-4848-01	Transaxle assy	Kanzaki K46G
21	4	4	4	4	9997-0865-12	Screw	
22	4	4	4	4	9747-0831-02	Lock nut	
23	1	1	1	1	1134-3913-01	Strut	
24	1	1	1	1	9959-0825-16	Screw	
25	1	1	1	1	9997-0845-12	Screw	
26	1	1	1	1	9699-0028-02	Flat washer	
27	2	2	2	2	9747-0831-02	Lock nut	
28	1	1	1	1	9747-0631-02	Lock nut	
29	1	1	1	1	1134-2765-02	Oil tank	
30	1	1	1	1	1134-2777-02	Filler cap	
31	1	1	1	1	1134-3734-01	Vent plug	
32	1	1	1	1	1134-2778-01	Retainer strap	
33	2		1		9842-0001-16	Screw	
33				2	9849-8006-16	Screw	
33		2			9840-8009-16	Screw	
34	2		1		9699-0099-02	Washer	
35	2	2	2	2	9578-0023-04	Hose clamp	15 x 8
36	1				1134-2779-01	Tube	L = 420 mm
36				1	1134-2779-06	Tube	L = 230 mm
36			1		1134-2779-04	Tube	L = 360 mm
36		1			1134-2779-05	Tube	L = 450 mm
39		1			1134-4979-01	Bracket	
40	1	1	1	1	1134-4015-01	Pull rod	
41	1	1	1	1	1134-4014-01	Plastic button	
42	1	1	1	1	1134-4713-01	Bracket	
43	1	1	1	1	1134-2790-01	Rubber grommet	
44	1	1	1	1	9959-0816-16	Screw	
45	1	1	1	1	9739-0831-22	Nut	
46	1	1	1	1	9675-0009-02	Starlock	
51	1	1	1	1	1134-3289-02	Belt guide	
52	1	1	1	1	9959-0820-16	Screw	
53	1	1	1	1	9699-0056-02	Flat washer	
54	1	1	1	1	9739-0831-22	Nut	
55				1	1134-5093-01	Holder	
56				2	9959-0816-16	Screw	
57				2	9739-0831-22	Nut	

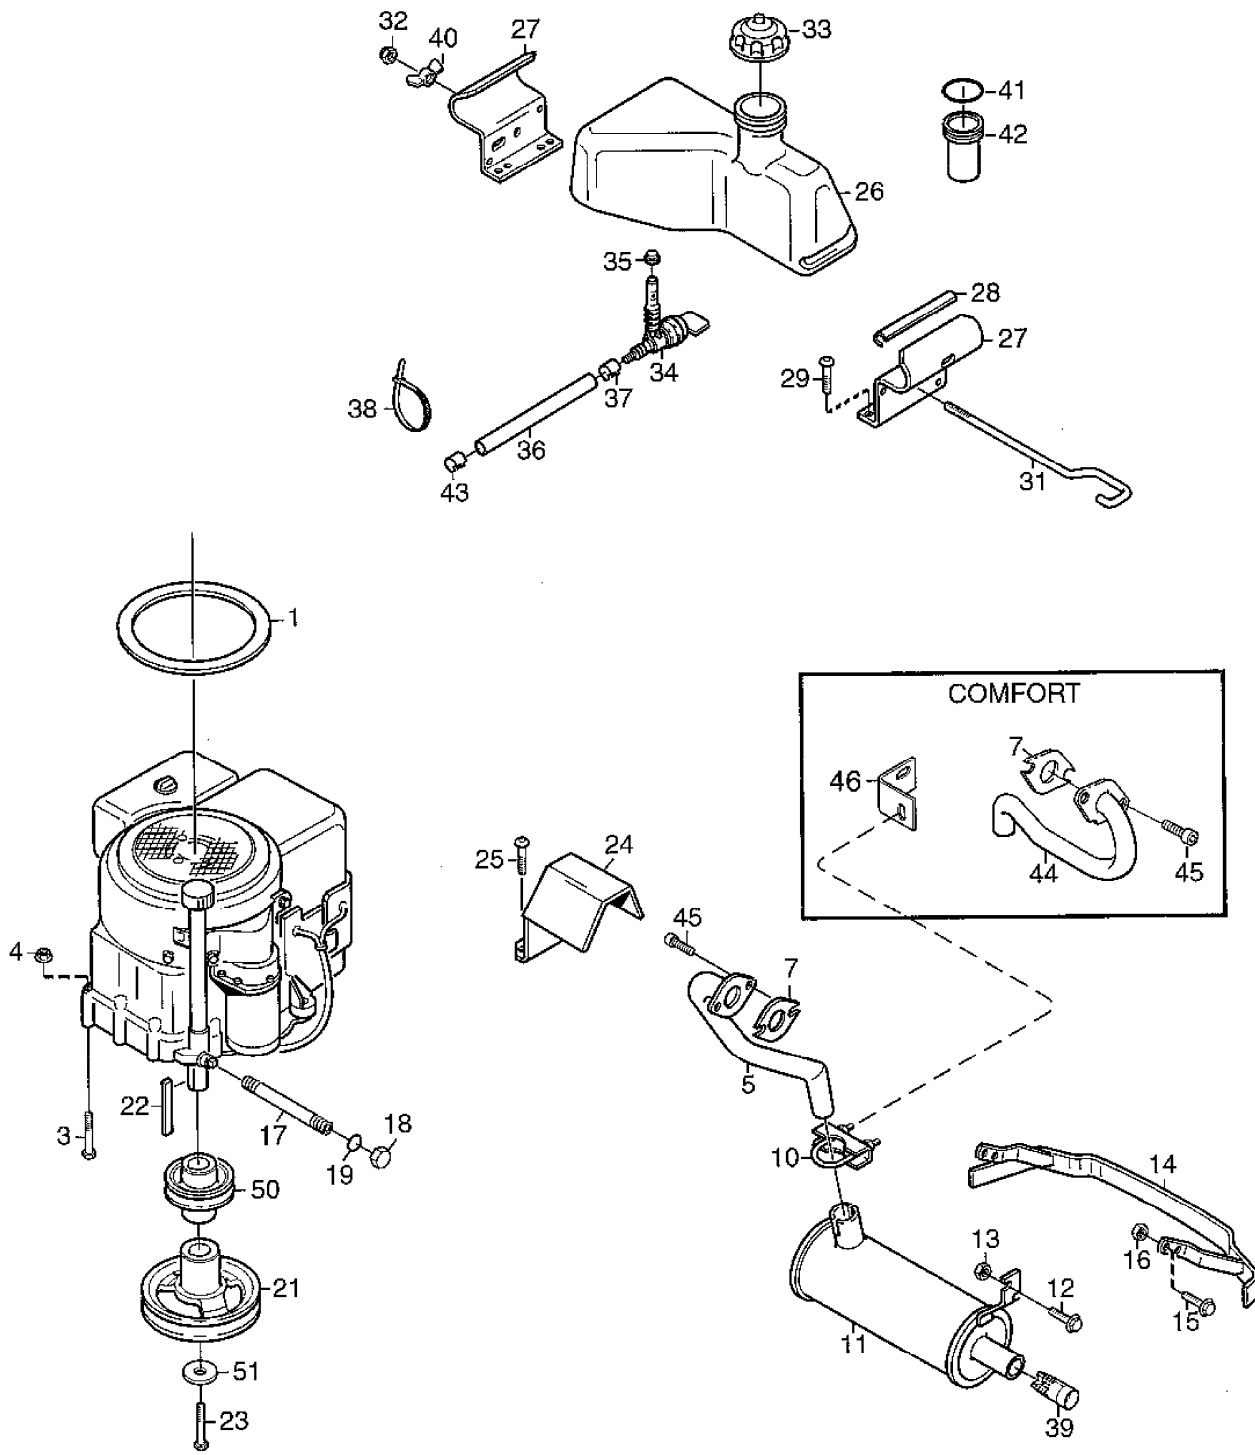 


Section: PARK SENATOR-PRESIDENT- COMFORT ENGINE

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
		6113				
	6113	-24				
		-14	6143			
6112	-44	-44				
1	1	1	1134-4222-02		Seal ring	H = 15 mm
3A	2	4	9997-0840-16		Screw	L = 40 mm
3B	1		9997-0845-12		Screw	L = 45 mm
3C	1		9997-0875-12		Screw	L = 75 mm
4	4	4	9739-0831-22		Nut	
5	1	1	1134-4110-01		Exhaust pipe	
7	1	1	1134-0433-00		Muffler gasket	
10	1	1	9578-0011-00		Clamp	
11	1	1	1134-4952-01		Muffler	
12	1	1	9959-0820-16		Screw	
13	1	1	9739-0831-22		Nut	
14	1	1	1134-4046-02		Muffler guard-black	
15	4	4	9959-0820-16		Screw	
16	4	4	9739-0831-22		Nut	
17	1	1	1134-4978-01		Oil drain pipe assy	
18	1	1	1134-4976-01		.Plug	
19	1	1	1134-4977-01		.Copper washer	
21	1	1	1134-4999-01		Engine pulley	
22	1	1	9600-0251-01		Key	
23	1	1	9987-5332-16		Screw	
24	1	1	1134-2733-01		Heat protection	
25	2	2	9893-0616-16		Screw	
26	1	1	1134-4757-01		Fuel tank assy	Inkl. 33-37, 41-42
27	2	2	1134-4273-03		Tank bracket	
28	2	2	1134-2941-01		Protection strip	
29	4	4	9893-0616-16		Screw	
31	1	1	1134-4356-01		Tank rod	
32	1	1	9747-0831-02		Lock nut	
33	1	1	1134-4063-01		.Fuel cap	
34	1	1	1134-3224-01		.Fuel shut-off valv	
35	1	1	1134-3225-01		.Grommet	
36	1	1	1134-2975-07		.Fuel hose	L = 350 mm
37	1	1	9578-0023-02		.Hose clamp	
38	1	1	9579-0003-00		Cable holder	
39	1	1	1134-4955-01		Muffler insert	
40	1	1	1134-4481-01		Wing nut	
41	1	1	9404-0025-01		.O-ring	
42	1	1	1134-4411-01		.Fuel tank insert	
43	1	1	9578-0023-02		Hose clamp	
44		1	1134-4998-01		Exhaust pipe	
45	2	2	1134-4930-01		Screw	
46		1	1134-5213-01		Attachment	
50	1	1	1134-5000-01		Engine pulley	
51	1	1	1134-5017-01		Washer	

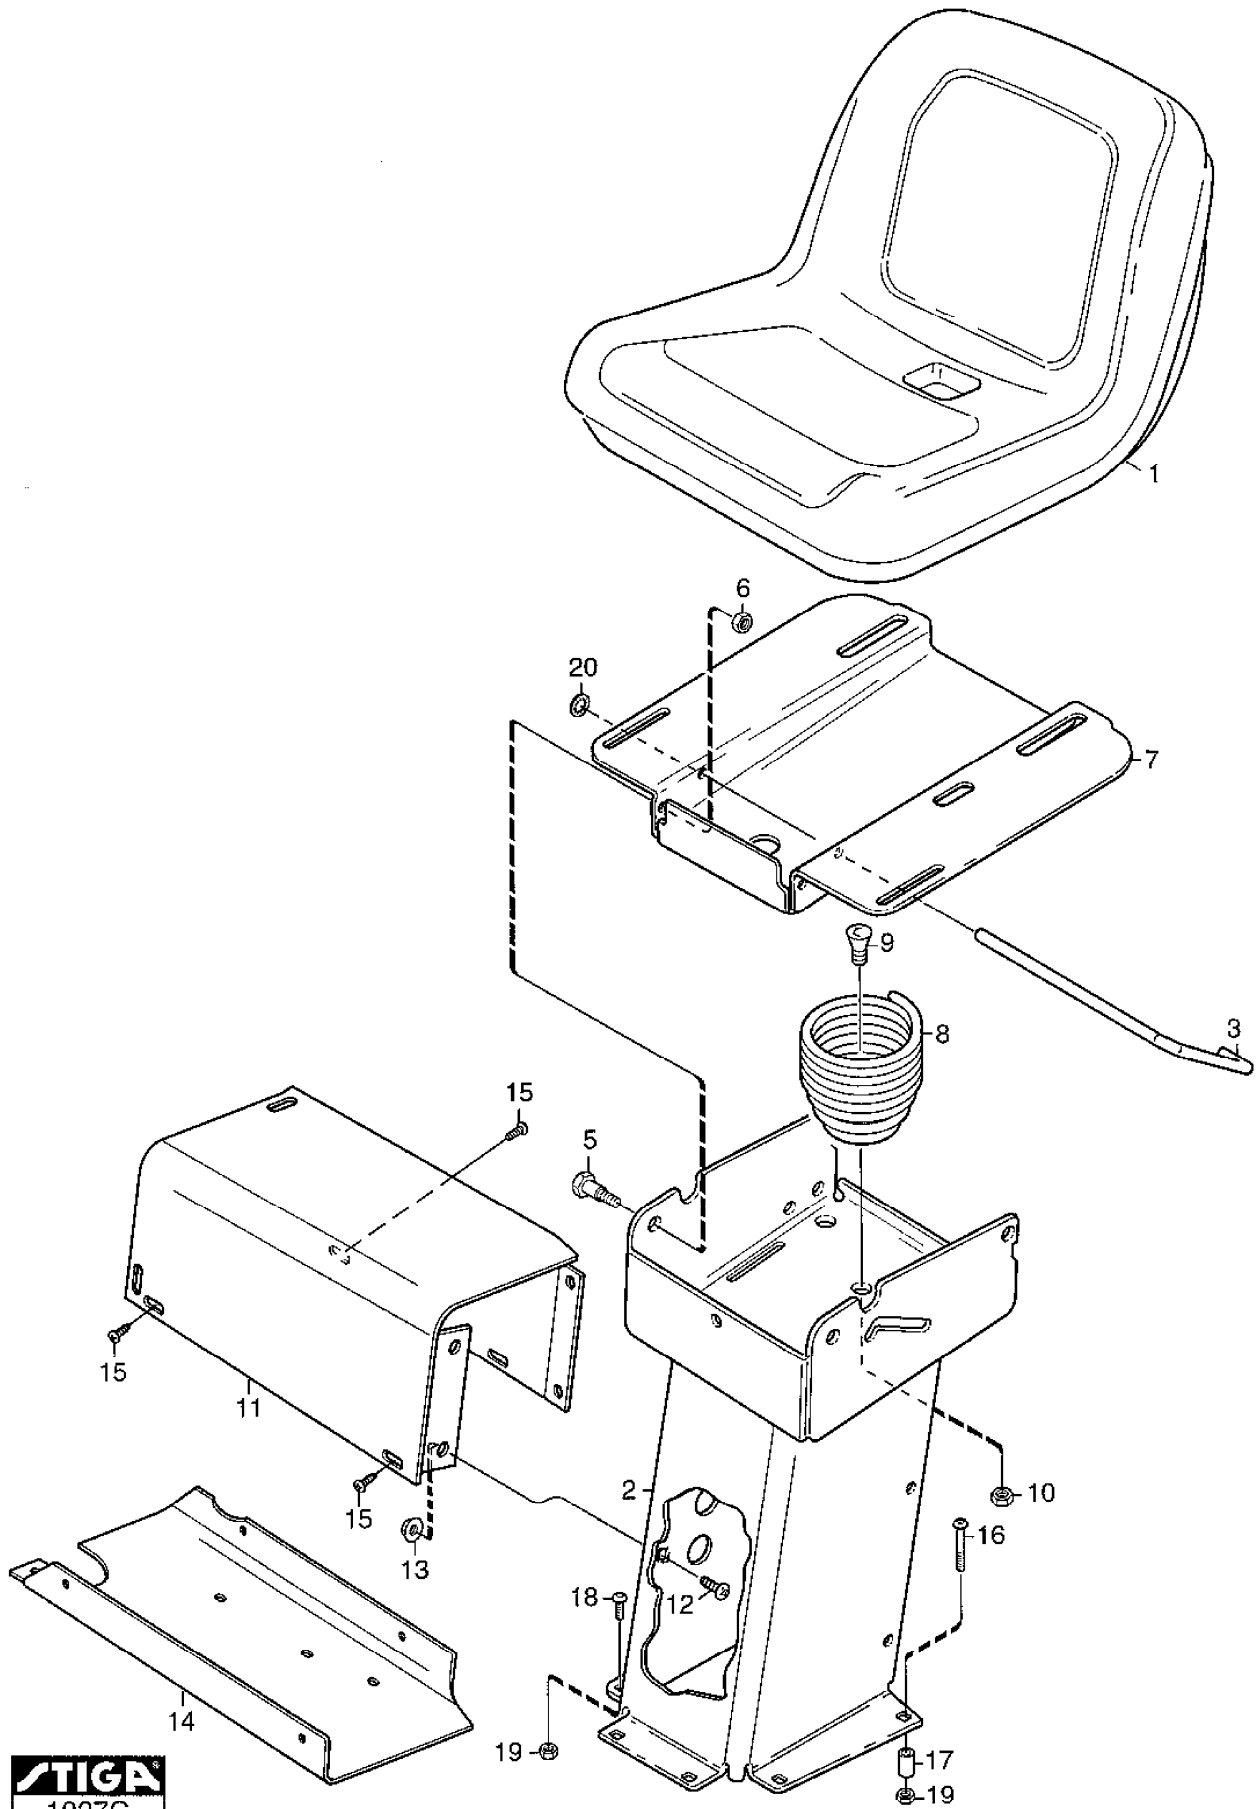 


Section: PARK SENATOR-PRESIDENT- COMFORT-POWER SEAT

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	6112					
	6113					
	6143					
1	1	1134-4223-01	Seat			
2	1	1134-4211-01	Seat bracket			
3	1	1134-5179-01	Catch			
5	2	1134-0240-00	Shoulder screw			
6	2	9747-0831-02	Lock nut			
7	1	1134-4628-05	Seat plate			
8	1	1134-4256-01	Seat spring			
9	1	9924-1230-19	Screw			
10	1	9747-1231-02	Lock nut			
11	1	1134-3990-01	Attachment-side pan			
12	2	9897-0820-16	Screw			
13	2	9739-0831-22	Nut			
14	1	1134-4130-01	Cover-lower			
15	4	9840-8009-16	Screw			
16	2	9897-0880-12	Screw		L = 80 mm	
17	2	1134-1565-08	Spacer			
18	4	9897-0820-16	Screw		L = 20 mm	
19	6	9747-0831-02	Lock nut			
20	1	9675-0012-02	Locking washer			


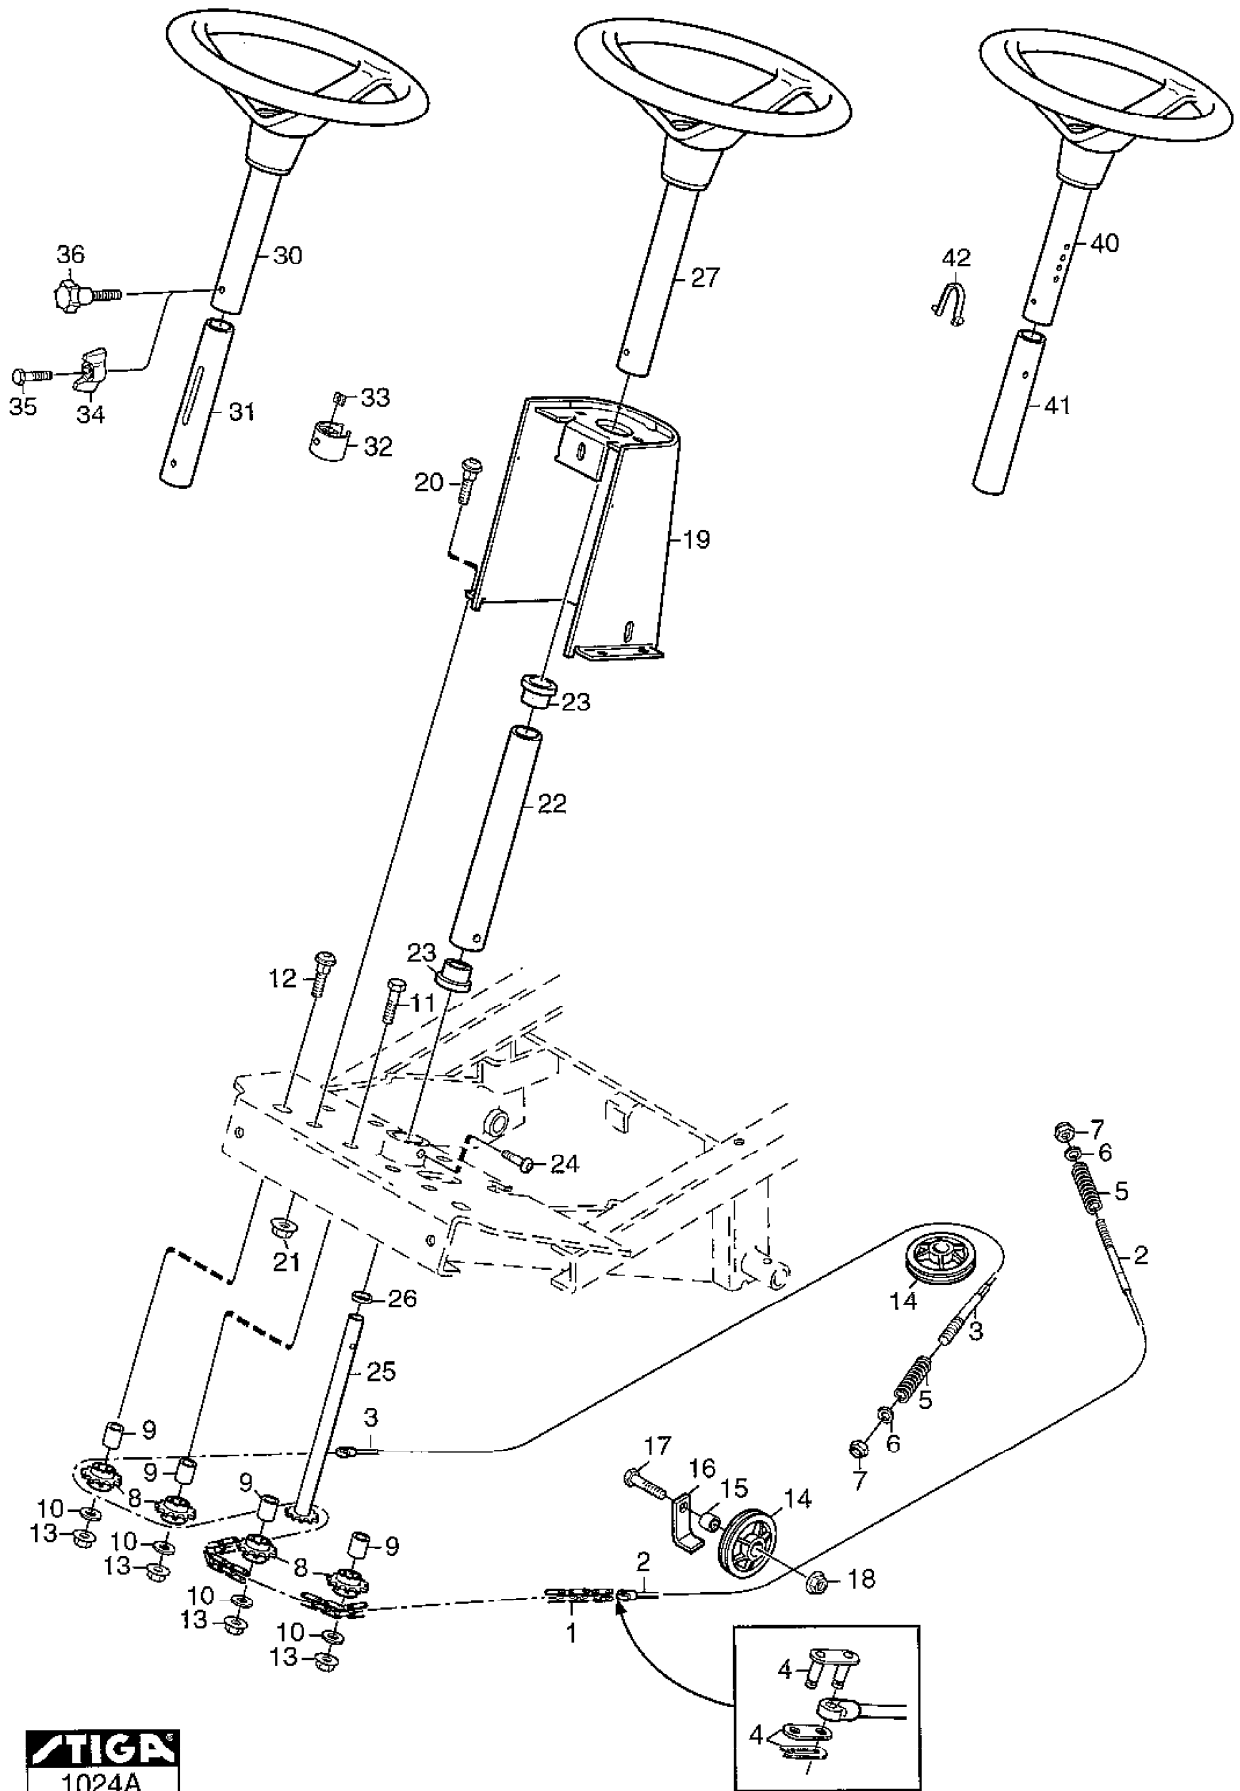 


STIGA
1024A
SPARE PARTS

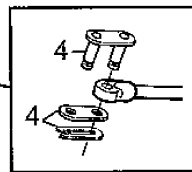 


Section: PARK SENATOR-PRESIDENT- COMFORT-POWER-ROYAL STEERING

Pos.	Quantity	Spare part	No	Description	Kit	Notes	New
	6113		6113				
	-14		6114				
	-24	6114	-44				
6112	-94	-14	6143				
1	1	1	1	1134-2820-06		Chain	83 länk
2	1	1	1	1134-2817-01		Steering cable-LH	
3	1	1	1	1134-2817-02		Steering cable-RH	
4	2	2	2	1134-2824-01		Chain lock	
5	2	2	2	1134-3817-01		Compression spring	
6	2	2	2	9699-0090-02		Flat washer	
7	2	2	2	9747-0831-02		Lock nut	
8	4	4	4	1134-2816-01		Sprocket	
9	4	4	4	1134-0041-02		Idler wheel bush	
10	4	4	4	9699-0035-02		Flat washer	
11	2	2	2	9997-1050-16		Screw	
12	2	2	2	9897-1040-12		Screw	
13	4	4	4	9739-1031-22		Nut	
14	2	2	2	1134-9025-01		Steering pulley-kit	Sats 2 st/kit of 2
15	2	2	2	1134-0041-01		Bushing	
16	2	2	2	1134-3022-01		Cable holder	
17	2	2	2	9997-1030-16		Screw	
18	2	2	2	9739-1031-22		Nut	
19	1	1	1	1134-4120-03		Steering console	
20	4	4	4	9897-0820-16		Screw	
21	4	4	4	9739-0831-22		Nut	
22	1	1	1	1134-1305-03		Steering column-low	
23	2	2	2	1134-1901-01		Bearing	
24	2	2	2	9893-0616-16		Screw	
25	1	1	1	1134-2821-01		Steering rod	
26	1	1	1	1134-2837-01		Spacer	
27	1			1134-1966-03		Steering wheel	
30		1	1	1134-5173-01		Steering wheel	
31		1	1	1134-5216-01		Steering tube-inner	
32		1	1	1134-5177-01		.Slide	
33		1	1	9710-0631-12		.Square nut	
34		1	1	1134-4481-02		Wing nut	Alt. 2
35		1	1	9997-0630-12		Screw	Alt. 2
36		1	1	9405-0211-70		Locking knob	Alt. 1
40			1	1134-4155-01		Steering wheel	
41			1	1134-4218-01		Steering tube-inner	
42			1	1134-4138-01		.Catch	

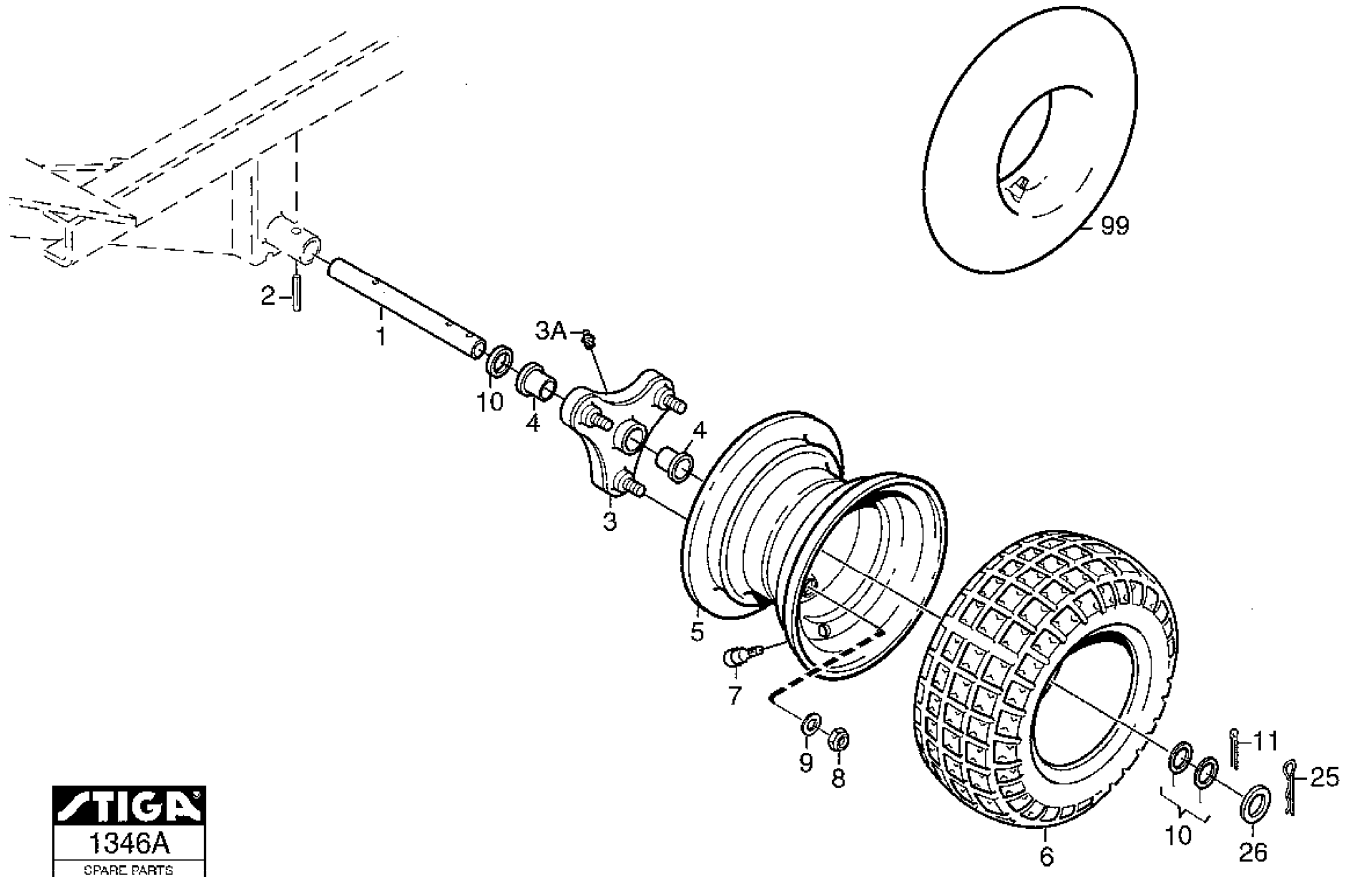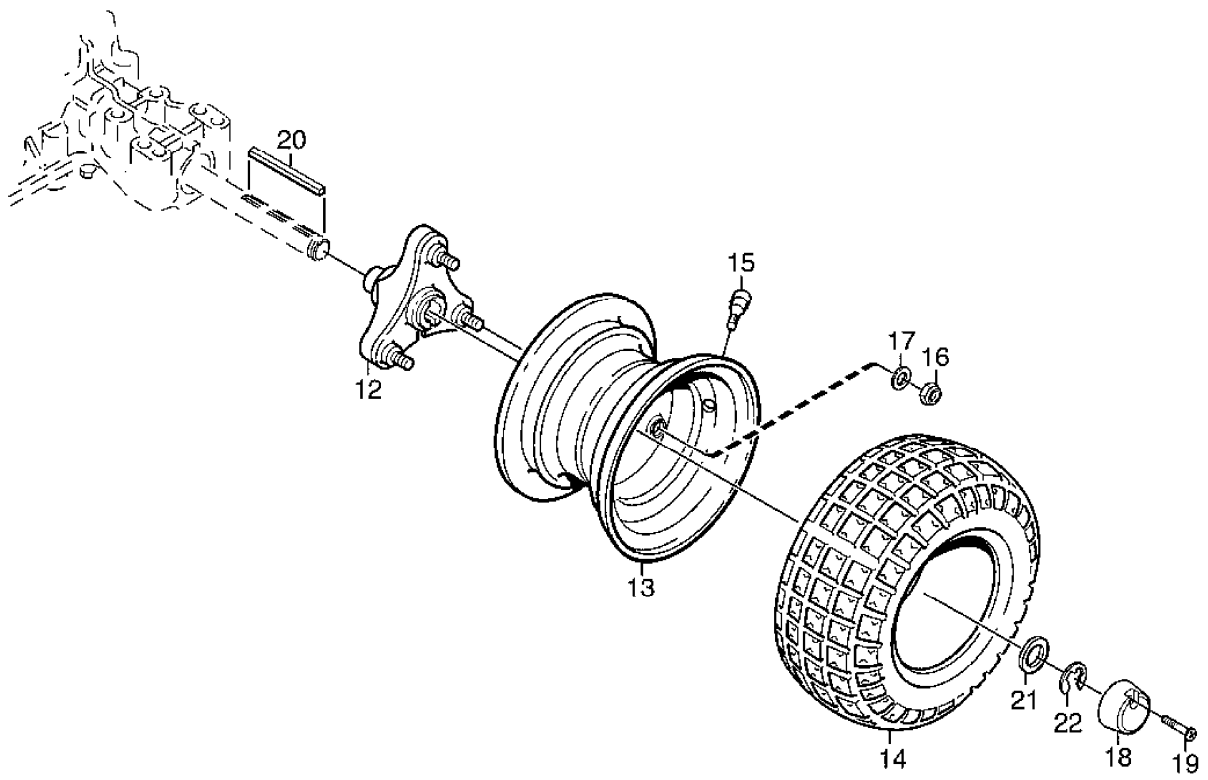  



Section: PARK SENATOR-PRESIDENT- COMFORT-POWER-ROYAL WHEELS 16"

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	6112					
	6113					
	6143					
	6114					
1	2	1134-0075-01	Front axle			
2	2	9595-0258-00	Locating pin			
3	2	1134-4844-05	Wheel hub assy			
3A	1	9501-0500-00	.Grease joint			
4	1	1134-9026-01	.Bearing bush kit		Sats 4 st/kit of 4	
5	2	1134-4558-01	Rim			
6	2	9545-0116-00	Tyre		16 x 7.50 - 8	
7	2	9545-0500-00	Valve			
8	6	9747-1031-02	Lock nut			
9	6	9699-0035-02	Flat washer			
10	8	1134-0341-01	Washer			
11	2	9599-0080-02	Cotter pin			
12	2	1134-4844-02	Wheel hub			
13	2	1134-4558-01	Rim			
14	2	9545-0116-00	Tyre		16 x 7.50 - 8	
15	2	9545-0500-00	Valve			
16	6	9747-1031-02	Lock nut			
17	6	9699-0035-02	Flat washer			
18	2	1134-4796-01	Hub cap			
19	2	9947-0540-19	Screw			
20	2	1134-2471-01	Key			
21	2	9699-0042-02	Flat washer			
22	2	9653-0001-04	Lock ring			
25	2	9598-0003-02	Spring pin			
26	2	9699-0042-02	Flat washer			
99		9545-0203-00	Inner tube		Reservdel/spare par	

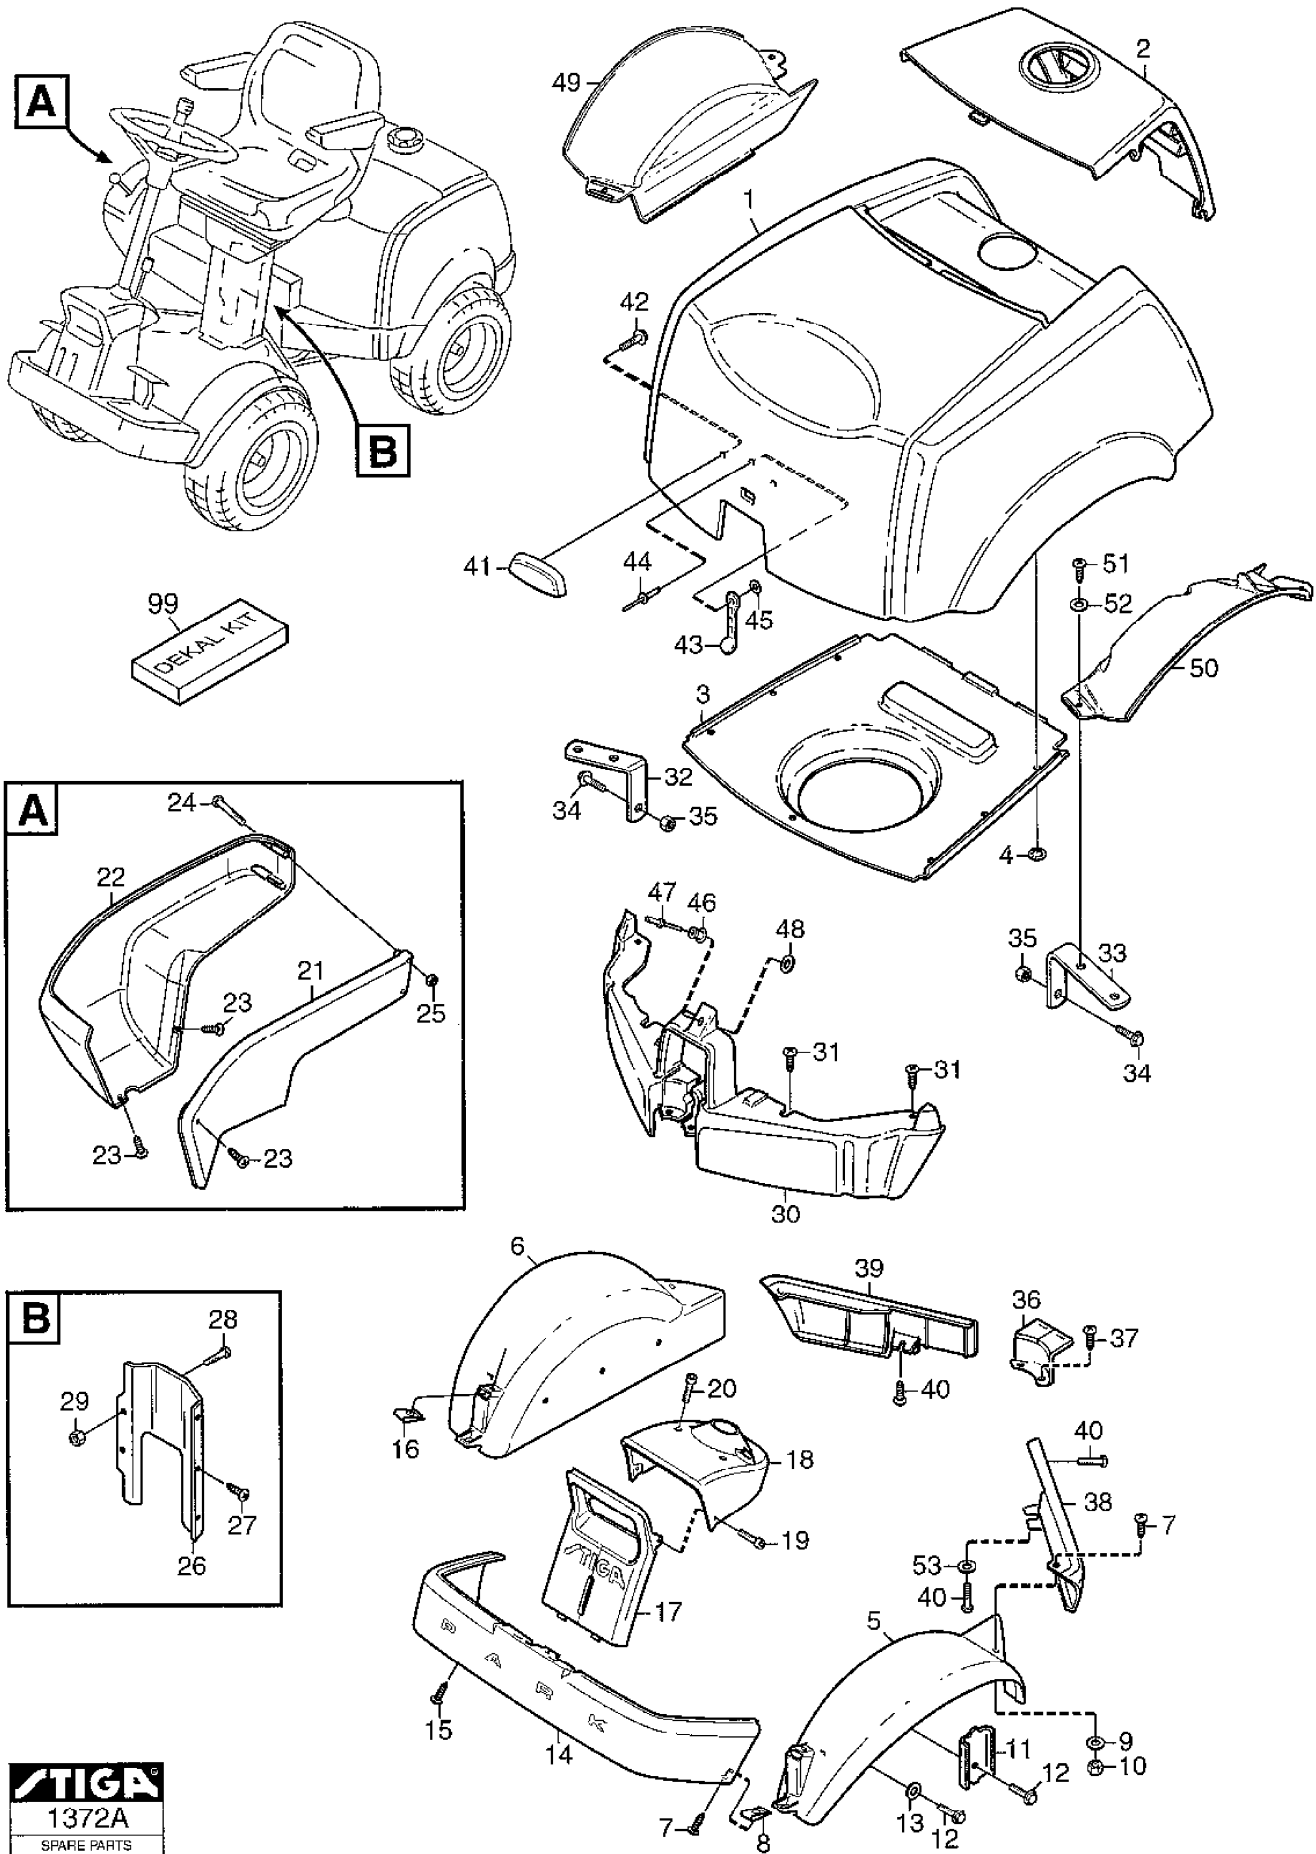 


Section: PARK SENATOR-PRESIDENT- COMFORT-ROYAL-POWER BODY WORK

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	6112					
	6113	6113				
	6143	6114	-94			
1	1	1	1	1134-4797-01	Engine hood	
2	1	1	1	1134-3971-02	Engine cover-black	
3	1			1134-3978-01	Air duct plate-deep	
3		1	1	1134-3978-02	Air duct plate-shal	
4	7	7	7	9675-0008-02	Locking washer	
5	1	1	1	1134-3943-01	Mud guard-LH, yell.	
6	1	1	1	1134-3943-02	Mud guard-RH, yell.	
7	4	4	4	9893-0616-16	Screw	
8	2	2	2	1134-4176-01	Clips	
9	2	2	2	9699-0025-02	Washer	
10	2	2	2	9747-0631-02	Lock nut	
11	2	2	2	1134-0225-00	Support plate	
12	6	6	6	9945-0816-16	Screw	
13	4	4	4	9699-0056-02	Flat washer	
14	1	1	1	1134-3944-02	Bumper-yellow	
15	6	6	6	9893-0616-16	Screw	
16	2	2	2	1134-4176-01	Clips	
17	1	1	1	1134-4216-03	Front plate-black	
18	1	1	1	1134-3984-02	Front plate upper-b	
19	2	2	2	9840-8009-16	Screw	
20	2	2	2	9946-0525-16	Screw	
21	1	1	1	1134-4360-01	Cover-inner	
22	1	1	1	1134-3979-01	Cover-outer	
23	5	5	5	9946-0525-16	Screw	
24	2	2	2	9950-0570-12	Screw	
25	2	2	2	9747-0531-02	Nut	
26	1	1	1	1134-4152-01	Cover	
27	3	3	3	9893-0616-16	Screw	
28	2	2	2	9893-0616-16	Screw	
29	2	2	2	9739-0631-22	Nut	
30	1	1	1	1134-4798-02	Spoiler-black	
31	4	4	4	9893-0616-16	Screw	
32	1	1	1	1134-4012-03	Support-RH	
33	1	1	1	1134-4012-04	Support-LH	
34	2	2	2	9959-0816-16	Screw	L = 16 mm
35	2	2	2	9739-0831-22	Nut	
36	1	1	1	1134-3985-01	Cover	
37	2	2	2	9893-0616-16	Screw	
38		1		1134-3970-06	Moulding-LH, black	
39		1		1134-3970-04	Moulding-RH, black	
40		3		9893-0616-16	Screw	
41	1	1	1	1134-4799-02	Handle	
42	2	2	2	9838-9516-12	Screw	
43	1	1	1	1134-9028-01	Rubber strap kit	Sats 3 st/kit of 3
44	1	1	1	9632-0516-00	Pop rivet	
45	1	1	1	9699-0120-02	Washer	
46	1	1	1	9405-0029-00	Knob	
47	1	1	1	9632-0513-00	Pop rivet	
48	1	1	1	9699-0120-02	Washer	
49		1	1	1134-4800-01	Inner mud guard-RH	
50		1	1	1134-4801-01	Inner mud guard-LH	
51		4	4	9893-0616-16	Screw	
52		4	4	9699-0060-02	Flat washer	
53		1		9699-0060-02	Flat washer	
99			1	1134-4593-09	Decal kit	Power
99	1			1134-4593-01	Decal kit	Senator
99	1			1134-4593-02	Decal kit	President
99		1		1134-4593-03	Decal kit	Royal
99	1			1134-4593-07	Decal kit	Comfort

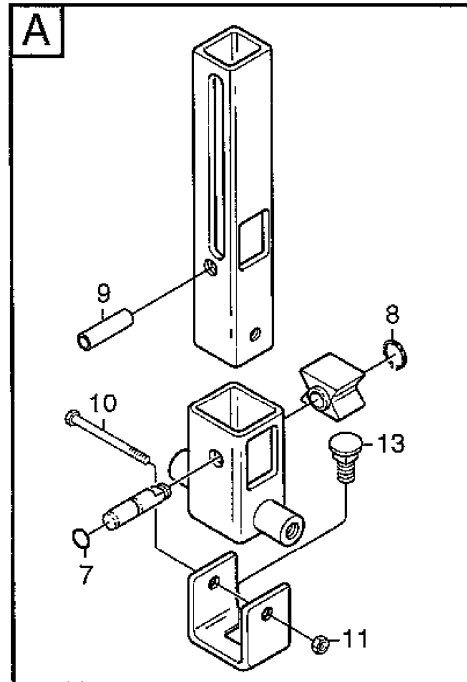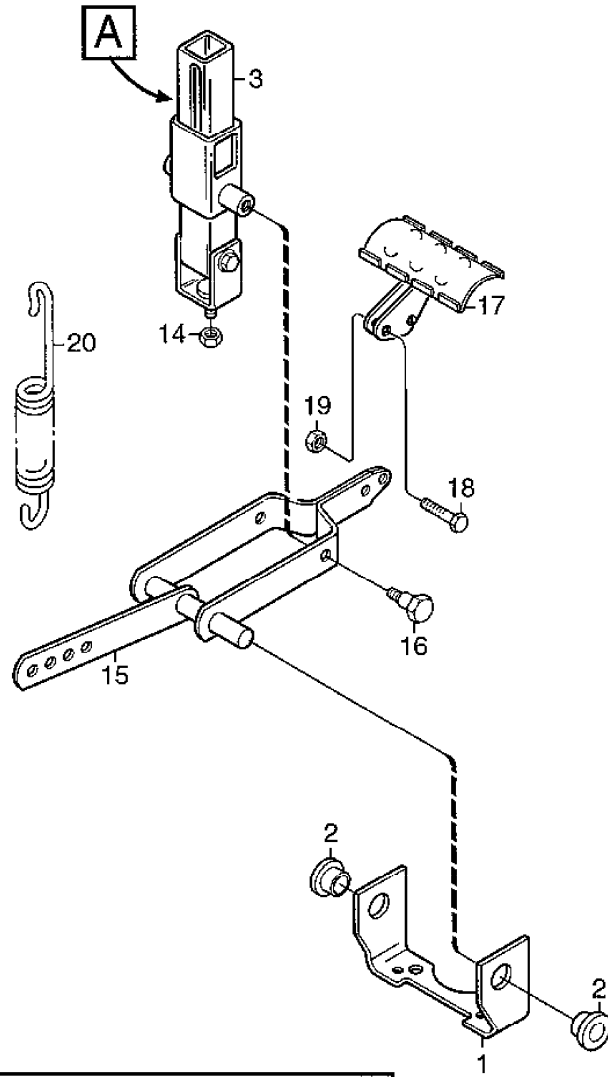  

Section: PARK SENATOR-PRESIDENT- COMFORT-ROYAL-PRO 16 PEDAL LIFT

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	6112					
	6113					
	6114					
	6216	6143				
1	1	1	1134-4117-01		Bracket	
2	2	2	1134-2684-01		Bearing	
3	1	1	1134-4945-01		Lift catch assy	
7	1	1	9404-0027-01		.O-ring	
8	1	1	9650-0039-04		.Lock ring	
9	1	1	9595-0276-01		.Locating pin	
10	1	1	9997-0640-12		.Screw	
11	1	1	9747-0631-02		.Lock nut	
13	1	1	9897-0820-16		.Screw	
14	1	1	9747-0831-02		Lock nut	
15	1	1	1134-4860-01		Lift fork	
16	2	2	1134-0240-00		Shoulder screw	
17	1	1	1134-4938-01		Lift pedal	
18	2	2	9997-0625-16		Screw	
19	2	2	9739-0631-22		Nut	
20	1	1	4231-0013-00		Spring	

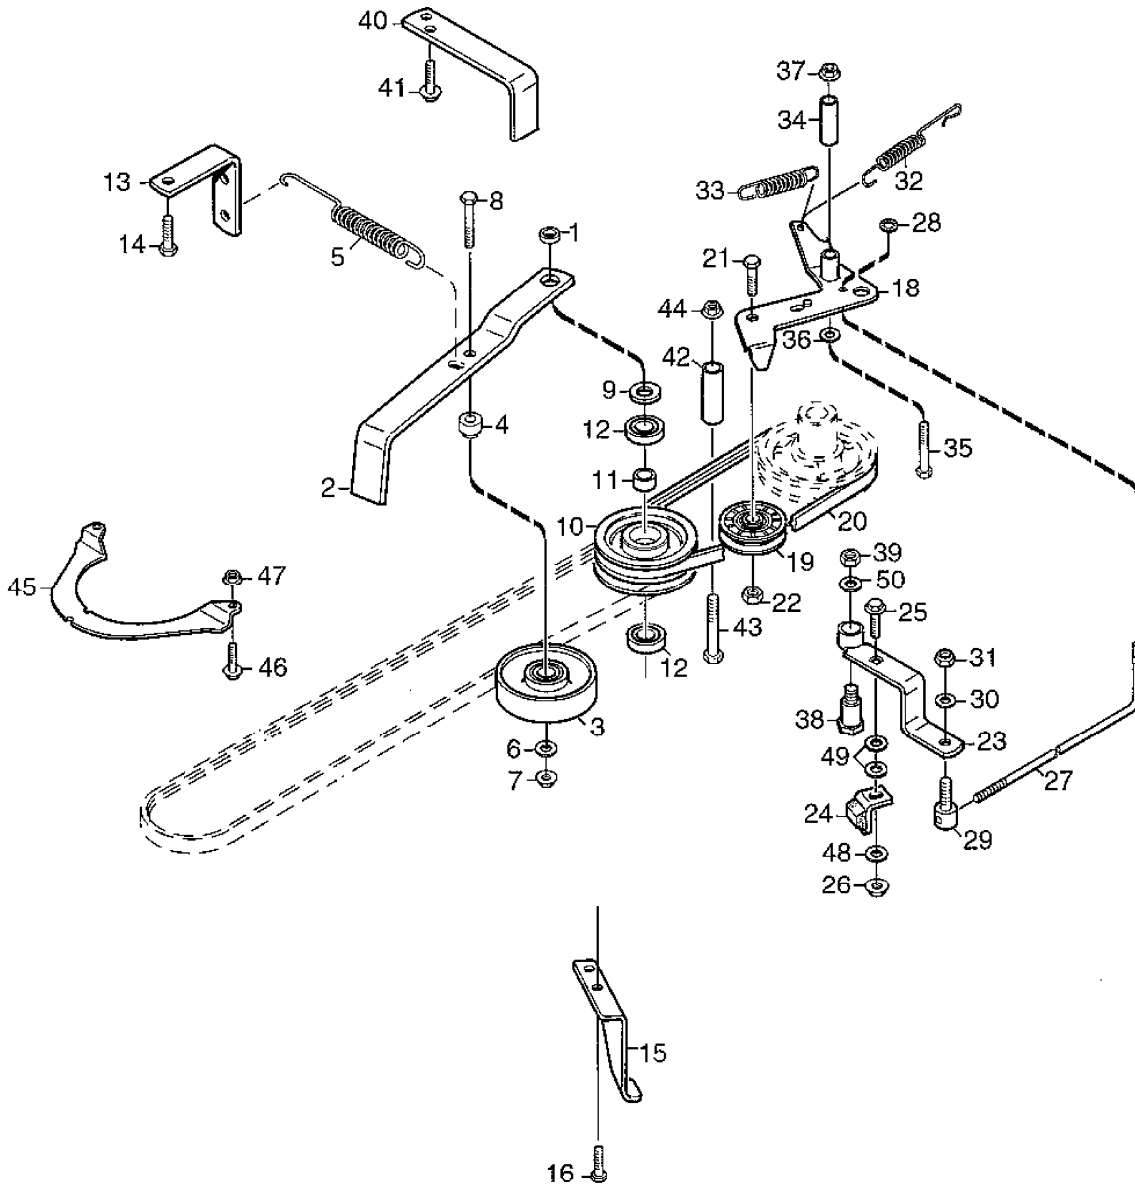 

Section: PARK SENATOR-PRESIDENT- COMFORT-ROYAL-PRO 16 POWER TAKE-OFF

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	6112					
	6113					
	6143					
	6114	6216				
1	1	1	1134-0051-13	Spacer		
2	1	1	1134-5109-01	Tension wheel arm		
3	1	1	1134-1770-01	Tension roller		
4	1	1	1134-1888-04	Spacer		
5	1	1	1134-5111-01	Spring		
6	1	1	9699-0056-02	Flat washer		
7	1	1	9739-0831-22	Nut		
8	1	1	9997-0855-12	Screw		
9	1	1	9699-0104-02	Washer		
10	1	1	1134-1769-02	Belt pulley assy		
11	1	1	1134-0051-09	.Spacer		
12	2	2	9549-0019-00	.Ball bearing		
13	1	1	1134-5112-01	Spring attachment		
14	2	2	9945-0816-16	Screw		
15	1	1	1134-5110-01	Hook		
16	2	2	9893-0616-16	Screw		
18	1	1	1134-2018-02	Tension arm		
19	1	1	1134-9027-01	Tension roller		
20	1	1	1134-9071-01	V-belt	= 9585-0129-01	
21	1	1	9997-1030-16	Screw		
22	1	1	9799-1031-02	Nut		
23	1	1	1134-4111-01	Brake arm		
24	1	1	1134-4164-01	Brake pad		
25	1	1	9897-0825-16	Screw		
26	1	1	9747-0831-02	Lock nut		
27	1	1	1134-4162-01	Brake rod		
28	1	1	9675-0008-02	Locking washer		
29	1	1	1134-4170-01	Nipple		
30	1	1	9699-0025-02	Washer		
31	1	1	9747-0631-02	Lock nut		
32	1	1	4231-0013-00	Spring		
33	1	1	1134-4231-01	Spring		
34	1	1	1134-1565-10	Spacer		
35	1	1	9997-0865-12	Screw		
36	1	1	9699-0056-02	Flat washer		
37	1	1	9739-0831-22	Nut		
38	1	1	1134-4163-01	Shoulder bolt		
39	1	1	9747-1031-02	Lock nut		
40	1	1	1134-3958-01	Belt guide		
41	2	2	9893-0616-16	Screw		
42	1	1	1134-0041-03	Collar		
43	1	1	9997-1070-12	Screw		
44	1	1	9739-1031-22	Nut		
45	1	1	1134-3654-01	Finger guard		
46	2	2	9959-0612-16	Screw		
47	2	2	9739-0631-22	Nut		
48	1	1	9699-0090-02	Flat washer		
49	2	2	9699-0035-02	Flat washer		
50	1	1	9699-0035-02	Flat washer		