
Genuine Spare Parts

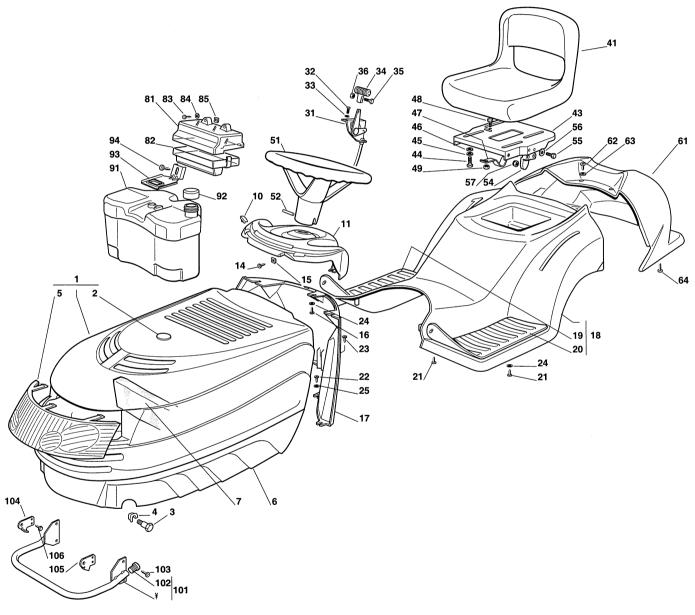











| | | | | | | | | | E-ON MOWER |
|----------------------|------|----------|----------------------|----|--------------------------------------|---------------------------------------|---|-------------|-----------------------|
| Utgå Issu 2004 | Э | Pi | ldnr cture 61A | No | ESTATE TORN ESTATE TORN KAROSS | | ESTATE TORNADO ESTATE TORNADO HST BODY WORK | | Sida Page 94 |
| 200 | | | • | | | | | | 54 |
| Pos. Fig. | Ar | ntal/Q | uantit | y | Art nr Part No | Benämning | Description | Sats Kit | Anmärkning Notes |
| Ũ | | | | | | | | | |
| | 2521 | 2522 | | | | | | | |
| 1 | 1 | 1 | | | 1136-1038-01 | Motorhuv | Engine hood | | Inkl. pos 2, 5 |
| 2 | 1 | 1 | | | 1136-0905-01 | Platta | • Plate | | |
| 3 | 2 | 2 | | | 1136-0230-01 | Bult | Bolt | | |
| 4 | 2 | 2 1 | | | 1136-0009-01 | Låsplatta • Grill | Lock plate | | |
| 5 6 | 1 | 1 | | | | Motorhuv- nedre | | | |
| 7 | | i | | | | Avskiljare | | | |
| 10 | 2 | 2 | | | | Huvskydd | | | |
| 11 | 1 | 1 | | | 1136-0871-01 | Instrumentbräda | Dashboard | | |
| 14 | 2 | 2 | | | | Skruv | | | |
| 15 | 2 | 2 | | | | Låsplatta | | | |
| 16 | 3 | 3 | | | 9836-9618-12 | Skruv | Screw | | |
| 17 | 1 | 1 | | | 1136-0926-01 | Stöd | Support | | |
| 18 | 1 | | | | 1136-0475-01 | Hjulkåpa | Wheel cover | | Inkl. pos 19, 20 |
| 18 | | 1 | | | 1136-0476-01 | Hjulkåpa | | | Inkl. pos 19, 20 |
| 19 | 1 | 1 | | | | Fotstegsskydd-hö | | | |
| 20 | | 1 | | | 1136-0147-01 | Fotstegsskydd- vä | | | |
| 21 | 6 | 6 | | | 9836-9635-12 | Skruv | | | |
| 22 | 4 | 4 | | | | Skruv | | | |
| 23 24 | 5 | 1 5 | | | | Skruv | | | |
| 24 25 | 4 | 4 | | | | Planbricka Planbricka | | | |
| 31 | 1 | 1 | | | | Gasreglage | | | |
| 32 | 2 | 2 | | | 9997-0412-16 | Skruv | Screw | | |
| 33 | 2 | 2 | | | | Bricka | | | |
| 34 | 1 | 1 | | | | Кпорр | | | |
| 35 | 1 | 1 | | | | Skruv | | | |
| 36 | 1 | 1 | | | | Mutter | | | |
| 41 | 1 | 1 | | | | Sits | Seat | | |
| 43 | 1 | 1 | | | | Sitsplatta | | | |
| 44 | 4 | 4 | | | 9997-0820-16 | • Skruv | • Screw | | |
| 45 | 4 | 4 | | | | • Låsbricka | | | |
| 46 | 4 | 4 | | | | • Planbricka | | | |
| 47 | | | | | | Fjäder | | | |
| 48 49 | | 1 | | | | Skruv Mutter | | | |
| 49 51 | | 1 | | | | Ratt | | | |
| 52 | | | | | | • Stift | • Pin | | |
| 54 | | | | | | Kam | | | |
| 55 | 2 | 2 | | | | Skruv | | | |
| 56 | 2 | 2 | | | | Bricka | Washer | | |
| 57 | 2 | 2 | | | | Mutter | | | |
| 61 | 1 | 1 | | | 1136-0869-01 | Kåpa | Cover | | |
| 62 | 2 | 2 | | | | Skruv | | | |
| 63 | 2 | 2 | | | 9699-0035-02 | Planbricka | Flat washer | | |
| 64 | 2 | 2 | | | | Skruv | | | |
| 81 | 1 | 1 | | | | Skydd- övre | | | |
| 82 | 1 | | | | | Skydd- nedre | | | |
| 83 | 2 | 2 | | | | Skruv | | | |
| 84 85 | 2 | 2 | | | | Planbricka | | | |
| 85 91 | | 2 | | | | Låsplatta | | | |
| 91 | | | | | | Bränsletank | | | |
| 92 93 | | | | | 1136-0344-01 | | | | |
| 93 94 | | 1 | | | | Skruv | | | |
| 99 | | 1 | | | | Tillbehörspåse | Key outfit | | Inkl. pos 44 - 46, 52 |
| 101 | li | | | | | Ljuddämparskydd | | | Inkl. pos 102 |
| 102 | | 2 | | | | • Plugg | | | 111AL PUS TUZ |
| 103 | 4 | 4 | | | | Skruv | | | |
| | l i | i i | | | | Huvfäste-hö | | | |
| 104 | | 1 . | 1 | 1 | | Huvfäste- vä | | | |
| 105 | 1 | 1 | | | 1130-0260-01 | nuviasie- va | | | |
| | 1 4 | 1 4 | | | | Skruv | | | |

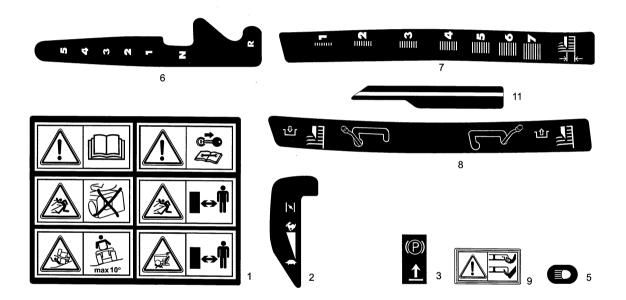




| Utgå Issue 2004 | 9 | Pie | ldnr cture No 62 | ESTATE TOR ESTATE TOR DEKALER | | ESTATE TORNADO ESTATE TORNADO HST LABELS | | Sida Page 96 |
|--|---|--|------------------------|--|------------------------------------|---|-------------|---|
| Pos. Fig. | An | tal/Qu | uantity | Art nr Part No | Benämning | Description | Sats Kit | Anmärkning Notes |
| 1 2 3 5 6 7 8 9 11 99 99 99 | 2521 1 1 1 1 1 1 1 1 2 1 3 | 2522 1 1 1 1 1 1 1 1 2 3 | | 1136-0026-0 1136-0020-0 1136-0031-0 1136-0027-0 1136-0028-0 1136-0029-0 1136-0029-0 1136-1021-0 1136-1447-0 1136-1451-0 | Dekal "Tornado" Dekal "STIGA" | Label Label Label Label Label Label Label | | Ej ill/not ill. Ø 55 mm 140 x 33 mm |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |

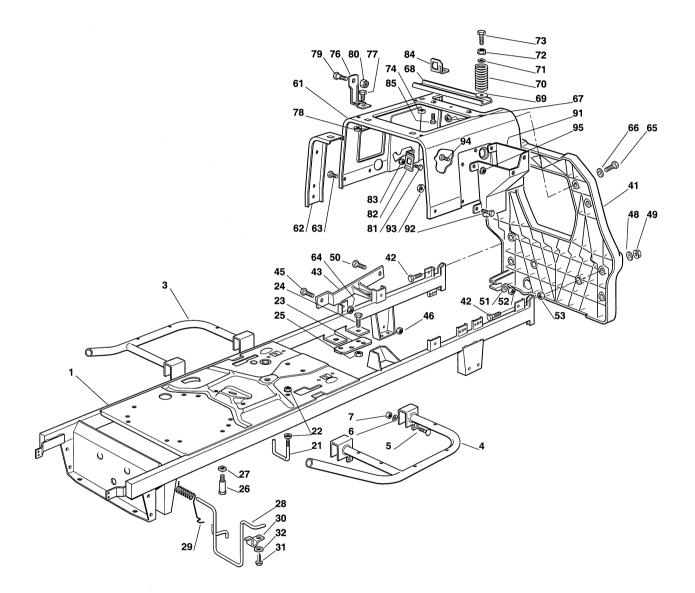





| Utgåva Bild Issue Pic 2004-13 156 | ture No ESTATE TORN | | TE TORNADO TE TORNADO HST | | Sida Page 98 |
|--|---|--|------------------------------|-------------|---------------------|
| Pos. Antal/Qu Fig. | antity Art nr Part No | Benämning | Description | Sats Kit | Anmärkning Notes |
| 2521 2522 | | | | | |
| $ \begin{array}{c ccccccccccccccccccccccccccccccccccc$ | 1136-0548-01 1136-0549-01 9898-0645-12 9699-0060-02 9747-0631-02 1136-0267-01 9739-0631-22 1136-0261-01 9997-0820-16 9747-0831-02 1136-0261-01 9997-0820-16 9747-0831-02 1136-0907-01 1136-0881-01 1136-0881-01 1136-0896-01 1136-1247-01 9847-8216-16 9699-0035-02 9136-0906-01 9997-0816-16 9739-0831-22 9699-0056-02 9747-0831-02 9739-0831-22 9997-0644-16 9739-0831-22 9937-0641-6 9739-0631-22 9997-0614-16 9739-0831-22 1136-0302-01 9699-0056-02 1136-0302-01 9699-0060-02 9747-0631-02 1136-0322-01 9699-0056-02 1136-0322-01 9699-0060-02 9739-0831-22 <td>Planbricka Låsmutter Remstyrning Mutter Platta Skruv Mutter Remstyrning Fyrkantmutter Remstyrning Fjäder Platta Skruv Planbricka Plåt- bak</td> <td>Frame</td> <td></td> <td></td> | Planbricka Låsmutter Remstyrning Mutter Platta Skruv Mutter Remstyrning Fyrkantmutter Remstyrning Fjäder Platta Skruv Planbricka Plåt- bak | Frame | | |

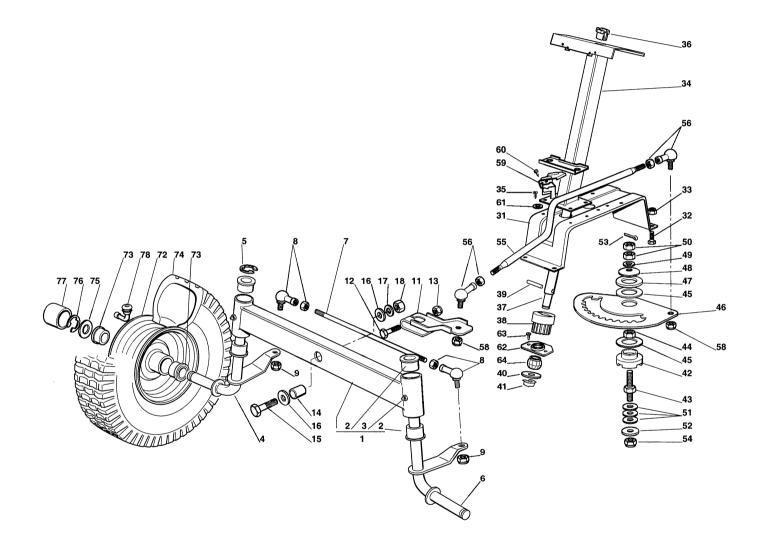






AKMODELLER RIDE-ON MOWERS

| 1 | Parts (| Jalan | Jyue | | | | | | | RID | E-ON MO' | WERS |
|----------------------------|---|---|--|---------------------|----|---|--------------|------|---|-------------|---------------------|------|
| | Utgå Issue 2004 | Э | Pi | dnr cture 13B | No | ESTATE TORN ESTATE TORN STYRNING | | ESTA | NTE TORNADO NTE TORNADO HST ERING | | Sida Page 100 | |
| | Pos. Fig. | Ar | ntal/Qu | uantity | y | Art nr Part No | Benämning | | Description | Sats Kit | Anmärkning Notes | |
| | | 2521 | 2522 | | | | | | | | | |
| x x x x x x | $\begin{array}{c}1\\2\\3\\4\\5\\6\\7\\8\\9\\11\\12\\13\\14\\15\\16\\17\\18\\31\\32\\33\\45\\36\\37\\38\\9\\40\\41\\42\\43\\44\\55\\55\\56\\8\\9\\60\\1\\62\\37\\4\\7\\7\\7\\7\\7\\7\\7\\7\\7\\7\\7\\7\\7\\7\\7\\7\\7\\$ | 14211112211114414111111112111122 2121212422222 212124222222 | 1421111221111441411111111211112212122122 | | | $\begin{array}{c} 1136-0121-01\\ 9501-0500-00\\ 1136-0485-01\\ 9652-0015-04\\ 1136-0486-01\\ 1136-0349-01\\ 1136-0349-01\\ 1136-0092-01\\ 9747-1031-02\\ 1136-0188-01\\ 9997-1055-12\\ 9747-1031-02\\ 1136-0165-01\\ 9997-1260-02\\ 1136-0165-01\\ 9997-1260-02\\ 1136-0015-02\\ 9799-1231-02\\ 1136-035-01\\ 9997-0816-16\\ 9747-0831-02\\ 1136-1496-01\\ 1136-1496-01\\ 1136-1496-01\\ 1136-1496-01\\ 1136-1496-01\\ 1136-1496-01\\ 1136-0263-01\\ 9595-0262-00\\ 9699-0037-02\\ 1136-0038-01\\ 1136-0246-01\\ 9799-1031-02\\ 1136-0310-01\\ 1136-0246-01\\ 9799-1031-02\\ 1136-0035-02\\ 9799-1031-02\\ 1136-0035-02\\ 9799-1031-02\\ 1136-0035-02\\ 9799-1031-02\\ 1136-0035-02\\ 9799-1031-02\\ 1136-0070-02\\ 9747-1031-02\\ 1136-0070-02\\ 9747-1031-02\\ 1136-0077-01\\ 9847-813-16\\ 9699-0035-02\\ 9747-1031-02\\ 1136-0279-01\\ 9847-813-16\\ 9699-0035-02\\ 9747-1031-02\\ 1136-0279-01\\ 9847-813-16\\ 9699-0035-02\\ 9747-1031-02\\ 1136-0279-01\\ 9847-813-16\\ 9699-0035-02\\ 9747-1031-02\\ 1136-0279-01\\ 9847-813-16\\ 9699-0035-02\\ 9747-1031-02\\ 1136-0279-01\\ 9847-813-16\\ 9699-0035-02\\ 9747-1031-02\\ 1136-0279-01\\ 9847-813-16\\ 9699-0035-02\\ 9747-1031-02\\ 1136-0279-01\\ 9847-813-16\\ 9699-0035-02\\ 9747-1031-02\\ 1136-0279-01\\ 9847-813-16\\ 9699-0035-02\\ 9747-1031-02\\ 1136-0279-01\\ 9847-813-16\\ 9699-0035-02\\ 9747-1031-02\\ 1136-0279-01\\ 9847-813-16\\ 9699-0035-02\\ 9747-1031-02\\ 1136-0279-01\\ 9847-813-16\\ 9699-0035-02\\ 9747-1031-02\\ 1136-0279-01\\ 9847-813-16\\ 9699-0035-02\\ 9747-1031-02\\ 1136-0279-01\\ 9847-813-16\\ 9699-0035-02\\ 9747-1031-02\\ 1136-0279-01\\ 9847-813-16\\ 9699-0035-02\\ 9747-1031-02\\ 1136-0279-01\\ 9847-813-16\\ 9699-0035-02\\ 9747-1031-02\\ 1136-0279-01\\ 9847-813-16\\ 9699-0035-02\\ 9747-1031-02\\ 1136-0279-01\\ 9847-813-16\\ 9699-0035-02\\ 9747-1031-02\\ 1136-0279-01\\ 9847-813-16\\ 9699-0035-02\\ 9747-1031-02\\ 1136-0279-01\\ 9847-813-16\\ 9699-0035-02\\ 9747-1031-02\\ 1136-0269-01\\ 1136-0269-01\\ 1136-0269-01\\ 1136-0269-01\\ 1136-0081-01\\ 1136-0081-01\\ 1136-0081-01\\ 1136-0081-01\\ 1136-0081-01\\ 1136-0081-01\\ 1136-0081-01\\ 1136-0081-01\\ 1136-0081-01\\ 1136-0081-01\\ 1136-0081-01\\ 1136-0081-01\\ 1136-0081-01\\ 1136-0081-01\\ 1136-0081-01\\ 11$ | Framaxel kpl | | Front wheel axle assy • Bushing • Grease joint. Stub axle- RH Retaining ring. Stub axle- LH. Tie rod Ball joint Lock nut Spacer Screw Lock nut Spacer Screw Lock washer Nut Support Screw Bushing Steering column. Steering pinion Lock plate. Bushing Steering sector Washer Lock plate. Bushing Steering sector Washer Lock plate. Bushing Steering sector Washer Lock plate. Bushing Steering sector Washer Steering sector Washer Flat washer Flat washer Split pin Lock nut Steering rod Ball joint Lock nut Steering rod Ball joint Screw Support Screw Support Steering rod Ball joint Screw Support Support Support Support Support Steering rod Ball joint Nut Washer Support. | | Inkl. pos 2, 3 | |
| | | | | | | | | | | | | |

X X X


x x

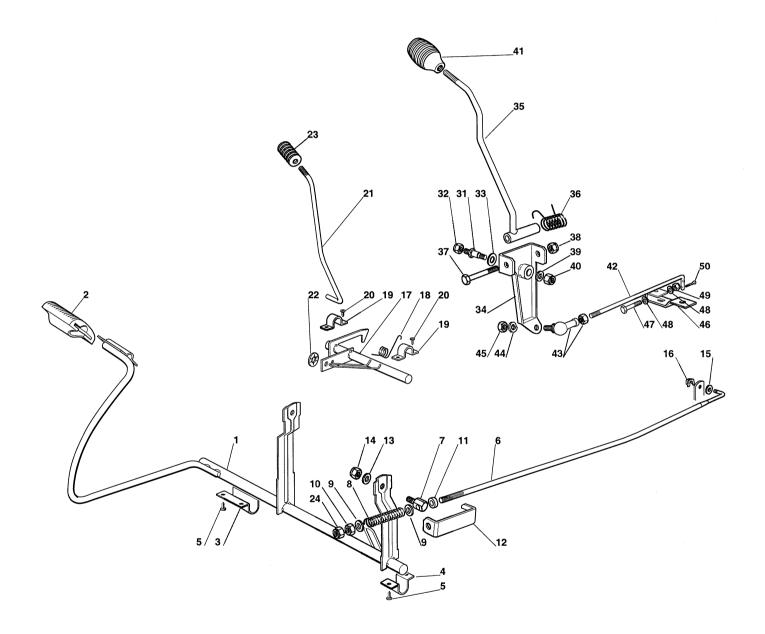





| Parts | Catalo | ogue | | | | | | | RID | E-ON MOWERS |
|---|---|--------|----------------------|----|--|------------|-----|---|-------------|---------------------|
| Utgå Issu 2004 | e | Pi | ldnr cture 14A | No | ESTATE TORN BROMSREGL VÄXELREGLA | AGE | BRA | TE TORNADO KE CONTROL R SHIFTER CONTROL | | Sida Page 102 |
| Pos. Fig. | Ar | ntal/Q | uantity | / | Art nr Part No | Benämning | | Description | Sats Kit | Anmärkning Notes |
| | 2521 | | | | | | | | | |
| $\begin{array}{c}1\\2\\3\\4\\5\\6\\7\\8\\9\\10\\11\\12\\13\\14\\15\\16\\17\\18\\19\\20\\21\\22\\34\\45\\36\\37\\8\\9\\40\\41\\42\\43\\44\\56\\5\end{array}$ | 111161112111111112411111111111111111111 | | | | $\begin{array}{c} 1136-0152-01\\ 1136-0254-01\\ 1136-0255-01\\ 9847-8016-16\\ 1136-0116-01\\ 1136-0218-01\\ 9699-0035-02\\ 9799-1031-02\\ 1136-0172-01\\ 1136-0172-01\\ 1136-0329-01\\ 9699-0060-02\\ 9747-0631-02\\ 9699-0090-02\\ 1136-0099-01\\ 1136-0217-01\\ 1136-0217-01\\ 1136-0217-01\\ 1136-0217-01\\ 1136-0217-01\\ 1136-0217-01\\ 1136-0217-01\\ 1136-0217-01\\ 1136-0217-01\\ 1136-0232-01\\ 9747-1031-02\\ 1136-0392-01\\ 9747-1031-02\\ 1136-0233-01\\ 9747-1031-02\\ 1136-0233-01\\ 9747-1031-02\\ 1136-0233-01\\ 9747-0831-02\\ 1136-0197-01\\ 1136-0093-01\\ 9997-0640-12\\ 9699-0035-02\\ 9747-0631-02\\ 9747-0631-02\\ 100000000000000000000000000000000000$ | Bromspedal | | Brake pedal | | |
| L | | | | | | l | | | | |

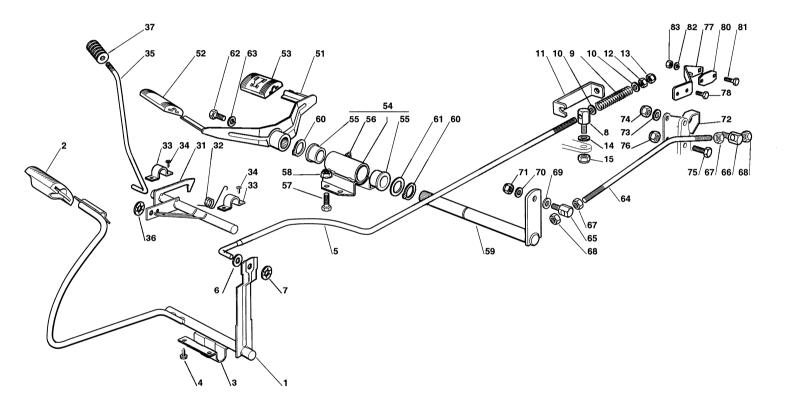






ÅKMODELLER RIDE-ON MOWERS

| Utgåva Issue Bildnr Picture No ESTATE TORNADO HST BROMSREGLAGE ESTATE TORNADO HST BRAKE CONTROL Sida Page 104 2004-13 1215A Antal/Quantity Art nr Park No Benämning Description Sats Kit Anmärkning Notes Fig. Antal/Quantity Art nr Park No Benämning Description Sats Kit Anmärkning Notes 1 1 1 1136-0510-01 Pedal Pedal Pedal Notes 1 1 1136-0151-01 Pedal Pedal | Fait | s Catal | ogue | | | | | | | KID | E-ON MOWERS |
|--|---|---|--------|---------|----|---|------------|-----|----------------------|-----|-------------------|
| Pos. Fig. Antal/Quantity 2522 Art nr Part No Benämning Description Sats Kit Anmärkning Notes 1 1 1136-0510-01 Pedal. Pedal. Notes 1 1 1136-0510-01 Pedal. Pedal. Notes 3 1 1136-0510-01 Pedal. Pedal. Clamp. 3 1 1136-0510-01 Pedal.skydd Pedal. Clamp. 4 4 9847-8016-16 Skruw. Screw. Screw. 5 1 1999-0002 Planbricka. Flat washer. Spring. 6 1 9999-0035-02 Planbricka. Flat washer. Spring. 10 2 9699-0035-02 Planbricka. Flat washer. Spring. 11 1136-0248-01 Ledbult Pivot bolt. Spring. Spring. 11 1136-0218-01 Bygel. Clamp. Spring. Spring. 13 1 9747-1031-02 Mutter Lock nut Strawsher. | lss | sue | Pi | cture | No | BROMSREGL | AGE | BRA | KE CONTROL | | Page |
| 1 1 1136-0510-01 Pedal Pedal 2 1 1136-0510-01 Pedalskydd Pedal cover 3 1 9847-8016-16 Skruv Screw Screw 4 4 9847-8016-16 Skruv Screw Screw 5 1 1136-017-01 Bromstång Brake rod Brake rod 6 1 9675-0012-02 Starlock Locking washer Locking washer 8 1 1136-0248-01 Ejder Spring Spring 9 1 1136-0248-01 Bygel Clamp Nut 10 2 9699-0035-02 Planbricka Flat washer Nut 11 1 1136-0248-01 Bygel Clamp Nut 12 1 9799-1031-02 Låsmutter Lock nut Nut 13 1 9747-031-02 Låsmutter Lock nut Nut 13 1 1136-041-01 Spärraxel Axle Spring Spring 33 2 1136-0256-01 Bygel Plate | | s | ntal/Q | uantity | y | | Benämning | | Description | | |
| 61 1 1136-0090-01 Bricka Washer 63 1 9997-0816-16 Struw Screw 64 1 1136-018-01 Stag Drive rod 65 1 1136-0241-01 Ledbuit Pivot boit 66 1 1136-0241-01 Ledbuit Pivot boit 67 2 9799-0831-02 Mutter Nut 68 2 9747-0831-02 Mutter Lock nut 69 1 9669-0035-02 Planbricka Flat washer 70 1 9699-0035-02 Planbricka Flat washer 71 1 9747-0631-02 Läsmutter Lock nut 72 1 1136-0533-01 Fäste Support 73 1 9699-0600-02 Planbricka Flat washer 74 9747-0631-02 Läsmutter Lock nut Screw 75 1 9699-0600-02 Läsmutter Lock nut Screw 76 1 9747-0631-02 Läsmutter Lock nut Screw 80 1 | $\begin{array}{c} 2 \\ 2 \\ 3 \\ 4 \\ 5 \\ 6 \\ 7 \\ 8 \\ 9 \\ 10 \\ 11 \\ 12 \\ 13 \\ 3 \\ 3 \\ 3 \\ 3 \\ 5 \\ 5 \\ 5 \\ 5 \\ 5 \\ $ | 1 1 1 | | | | $\begin{array}{c} 1136-0151-01\\ 1136-0254-01\\ 9847-8016-16\\ 1136-0117-01\\ 9699-0090-02\\ 9675-0012-02\\ 1136-0248-01\\ 1136-0248-01\\ 1136-0218-01\\ 9699-0035-02\\ 1136-0329-01\\ 9799-1031-02\\ 9747-1031-02\\ 9699-0090-02\\ 9747-0831-02\\ 1136-0217-01\\ 1136-0217-01\\ 1136-0217-01\\ 1136-0217-01\\ 1136-0256-01\\ 9847-8016-16\\ 1136-019-01\\ 1136-0392-01\\ 1136-0392-01\\ 1136-0392-01\\ 1136-019-01\\ 1136-019-01\\ 1136-019-01\\ 1136-019-01\\ 1136-019-01\\ 1136-019-01\\ 1136-019-01\\ 1136-019-01\\ 1136-019-01\\ 1136-019-01\\ 1136-019-01\\ 1136-019-01\\ 1136-019-01\\ 1136-019-01\\ 1136-019-01\\ 1136-019-01\\ 1136-019-01\\ 1136-019-01\\ 9997-0616-16\\ 9739-0631-02\\ 1136-0247-01\\ 1136-0247-01\\ 1136-0247-01\\ 1136-0233-01\\ 9699-0060-02\\ 9747-0631-02\\ 1136-0533-01\\ 9699-0060-02\\ 9747-0631-02\\ 1136-0330-01\\ 9848-8013-16\\ 1136-0407-01\\ 1136-0247-01\\ 1136-0330-01\\ 9848-8013-16\\ 1136-0407-01\\ 1136-0247-01\\ 1136-0330-01\\ 9848-8013-16\\ 1136-0407-01\\ 1136-0247-01\\ 9747-0631-02\\ 9997-0620-16\\ 9747-0631-02\\ 9997-0620-16\\ 9747-0631-02\\ 9997-0620-16\\ 9747-0631-02\\ 9997-0620-16\\ 9747-0631-02\\ 1136-0330-01\\ 9848-8013-16\\ 1136-0407-01\\ 1136-0247-01\\ 1136-0247-01\\ 9683-0005-02\\ 9693-0060-02\\ 9747-0631-02\\ 9997-0620-16\\ 9747-0631-02\\ 9097-0620-16\\ 9747-0631-02\\ $ | Pedalskydd | | Pedal cover Clamp | | Inkl. pos 55 - 56 |

Х

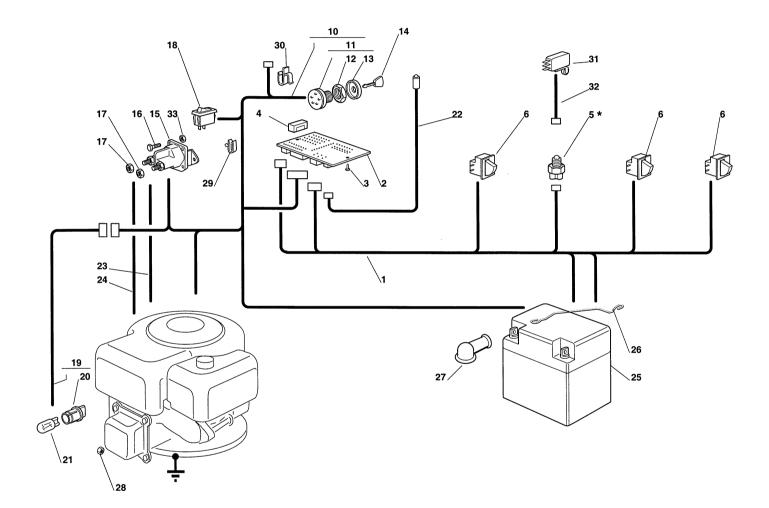









| Parts Catalogue | | | RID | E-ON MOWERS |
|--|---|-----------------------------|------|---|
| Utgåva Bildnr | ESTATE TORNADO | ESTATE TORNADO | | Sida |
| Issue Picture N | ESTATE TORNADO HST | ESTATE TORNADO HST | | Page |
| 2004-13 1447B | ELUTRUSTNING | EL. EQUIPMENT | | 106 |
| Pos. Antal/Quantity | Art nr Benämning | Description | Sats | Anmärkning |
| Fig. | Part No | | Kit | Notes |
| $ \begin{array}{c ccccccccccccccccccccccccccccccccccc$ | 1136-0073-01 Mikrobrytare 1136-0469-01 Kabelhärva 1136-0056-01 • Tändningslå 1136-0049-01 • Mutter 1134-4097-01 • Täckkåpa 1134-2848-01 Tändningsny 1136-0065-01 Startrelä 9997-0620-16 Skruv 9794-5131-02 Mutter 1136-0055-01 Brytare 1136-0468-01 Kabel | rt Electronic card Screw | | 6.3 A Neutral Inkl. pos 11 Inkl. pos 12 - 13 Strålkastare/light Inkl. pos 20 |

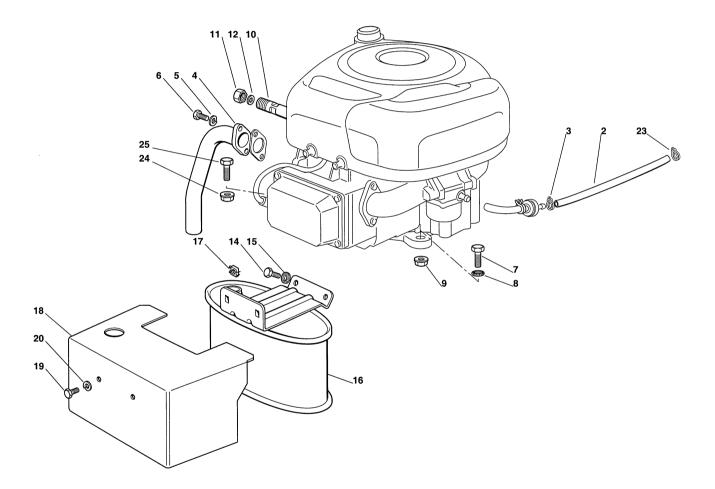






| Utgåva Issue 2004-13Bildnr Picture No 1701ESTATE TORNADO ESTATE TORNADO HST MOTORESTATE TORNADO ESTATE TORNADO HST ENGINEPos.Antal/Quantity 2521 2522Art nr Part NoBenämningDescriptionSat Kit22 311136-0354-01 1136-0045-01Bränsleslang SlangklämmaFuel hose Hose clamp | Sida Page 108 |
|--|-----------------------|
| Fig. Part No Benanning Description Sat 2521 2522 1136-0354-01 Bränsleslang Fuel hose | |
| 2 2 1136-0354-01 Bränsleslang Fuel hose | s Anmärkning Notes |
| X 4 1 1136-1467-01 Avgasrór | L = 40 mm |

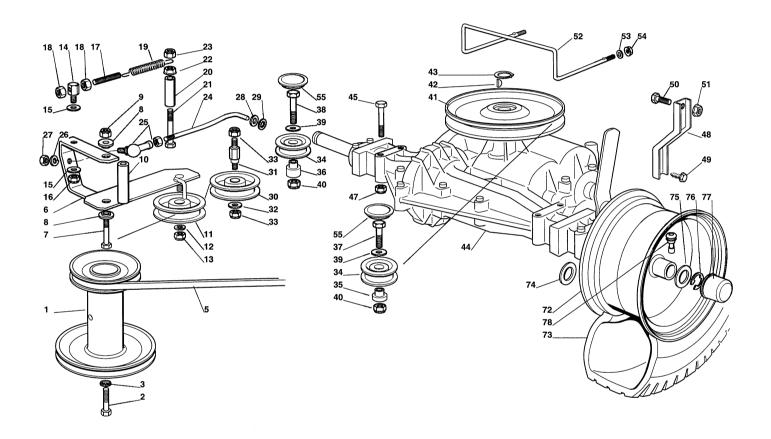






| Parts | Outan | Jyuc | | | | | | עור | E-ON MOWERS |
|---|--|---------|--------------|----|---|---|---|-------------|-----------------------|
| Utgå Issu | | | dnr cture | No | ESTATE TORN TRANSMISSI | | TE TORNADO VSMISSION | | Sida Page |
| 2004 | I- 13 | 12 | 17 | | | | | | 110 |
| Pos. Fig. | Ar | ntal/Qi | uantit | y | Art nr Part No | Benämning | Description | Sats Kit | Anmärkning Notes |
| | 2521 | | | | | | | | |
| $\begin{array}{c}1\\1\\2\\3\\5\\6\\7\\8\\9\\10\\11\\12\\13\\14\\15\\16\\17\\18\\9\\20\\21\\22\\3\\24\\25\\26\\7\\28\\29\\30\\31\\32\\33\\44\\45\\47\\48\\49\\51\\52\\33\\44\\45\\55\\52\\53\\45\\52\\73\\74\\75\end{array}$ | 2521 1 1 1 1 1 1 2 1 1 1 1 1 2 1 1 1 1 1 2 1 1 1 1 1 2 1 1 1 1 2 1 1 1 1 1 2 1 1 1 1 1 2 1 1 1 1 1 1 2 1 1 1 1 1 1 1 1 1 1 1 1 1 | | | | 9987-5351-12 9683-0045-02 1136-0433-01 1136-0489-01 9997-0630-12 1136-0123-01 9747-0831-02 1136-0166-01 1136-0289-01 9699-0056-02 9747-0831-02 1136-0235-01 1136-0235-01 1136-0348-01 9799-0831-02 1136-0348-01 9799-0831-02 1136-0208-01 1136-0162-01 9997-0880-16 9739-0831-02 1136-0346-01 1136-0093-01 9683-0030-02 9747-0831-02 1136-024-01 9699-0090-02 9675-0012-02 1136-024-01 9699-0056-02 9747-0831-02 1136-0162-01 1136-0162-01 1136-0124-01 9699-0056-02 9747-0831-02 1136-015-01 1136-0162-01 9997-0845-12 9999-0119-02 | Motorremskiva Skruv Bricka Kilrem Spännarm Skruv Bussning Mutter Distans Spännrulle Planbricka Mutter Ledbult Bricka Mutter Spännstång Mutter Fjäder Distans Skruv Mutter Spännstång Mutter Spännstång Kulled Låsbricka Mutter Spännstång Kulled Låsbricka Mutter Planbricka Mutter Planbricka Mutter Planbricka Mutter Planbricka Mutter Remrulle Distans- vä Distans- hö Skruv Skruv Planbricka Mutter Remrulle Distans- kö Skruv Skruv Planbricka Mutter Remskiva Woodruffkil Spårring Transaxel Skruv Mutter Remstyrning Planbricka Mutter Remstyrning Planbricka Mutter Remstyrning Planbricka Mutter Remstyrning Planbricka Mutter Remstyrning Planbricka Mutter Mutter Mutter Mutter Big Däck (Turf Saver) Däck (Deli) Bricka Bricka | Engine belt pulley Screw Washer. V-belt. Tension arm Screw Bushing Lock nut Spacer. Idler pulley Flat washer Lock nut Pivot bolt. Washer. Lock nut Tie rod. Nut Spring Spacer. Screw Nut Lock nut Tie rod. Ball joint Lock kasher. Nut Lock washer. Nut Flat washer. Locking washer. Belt roller Stud bolt Flat washer. Lock nut Belt roller Spacer- LH Spacer- RH Screw. Screw. Flat washer. Lock nut Belt roller Spacer- LH Spacer- RH Screw. Screw. Flat washer. Lock nut Belt pulley Key Lock ring Transaxle. Screw. Nut Belt guide. Flat washer. Lock nut Belt guide. Flat washer. Lock nut Stay. Screw. Nut Nut Stay. Screw. Nut Nut Stay. Screw. Nut Nut Stay. Screw. Nut Nut Stay. Screw. Nut Nut Stay. Screw. Nut Nut Stay. Screw. Nut Screw. Nut Stay. Screw. Nut Nut Stay. Screw. Nut Nut Stay. Screw. Nut Nut Stay. Screw. Nut Nut Stay. Screw. Nut Nut Stay. Screw. Nut Nut Stay. Screw. Nut Nut Stay. Screw. Nut Nut Stay. Screw. Nut Nut Stay. Screw. Nut Nut Stay. Screw. Nut Nut Stay. Screw. Nut Nut Stay. Screw. Nut Nut Stay. Screw. Nut Nut Stay. Screw. Nut Nut Stay. Screw. Nut Nut Stay. Screw. Nut Stay. Screw. Nut Stay. Screw. Nut Stay. Screw. Nut Stay. Screw. Nut Stay. Screw. Nut Stay. Screw. Nut Stay. Screw. Nut Stay. Screw. Nut Stay. Screw. Screw. Nut Stay. Screw. Screw. Nut Stay. Screw. Screw. Nut Stay. Screw. Screw. Screw. Nut Stay. Screw. | | Peerless MST 205- 535 |
| 76 77 78 | 2 2 2 | | | | 1136-0081-01 | Låsring Navkapsel Ventil | Retaining ring Hub cap Valve | | |
| | | | | | | | | | |

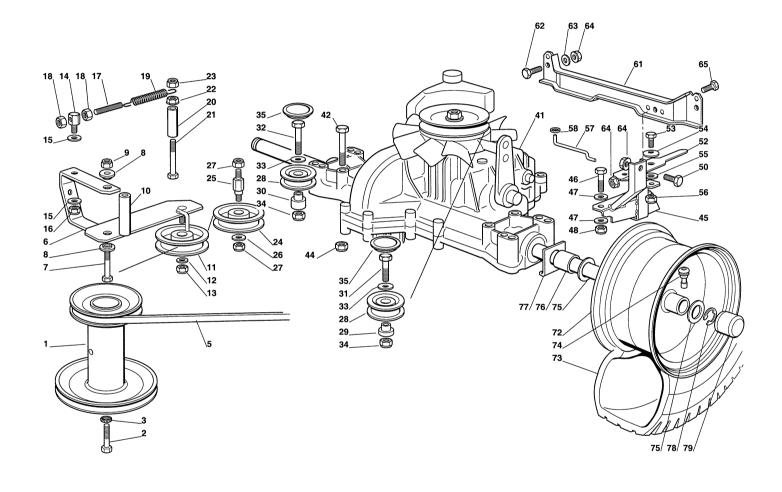






| Issue Picture No TRANSMISSION TRANS 2004-13 1564 | E TORNADO HST SMISSION Description Sats Kit | Sida Page 112 |
|--|--|---------------------|
| | • | |
| Antol/Quantity | • | A |
| Pos. Antal/Quantity Art nr Benämning D Fig. Part No | | Anmärkning Notes |
| 2522 | | |
| 1 1 1136-0287-01 Motorremskiva Er 2 1 9987-5351-12 Skruv Skruv Skruv 3 1 9987-5351-12 Skruv Skruv Skruv 6 1 1136-0489-01 Spänarm Fr 6 1 1136-0489-01 Spänarm Skruv 6 1 1136-0489-01 Spänarm Skruv 7 1 9997-0630-12 Skruv Skruv 8 2 1136-0123-01 Bussning Bis 9 1 9747-0831-02 Mutter Loc 10 1 1136-0128-01 Distans Skruv 11 1 1136-028-01 Spänstång Ti 12 1 9699-0056-02 Planbricka Witer 14 1 1136-028-01 Spänstång Ti 15 2 1136-028-01 Spänstång Ti 16 9747-0831-02 Wutter Loc | Ingine belt pulley Screw Washer A- belt Tension arm Screw Bushing ock nut Spacer dler pulley Tat washer ock nut Pivot bolt Washer ock nut Pivot bolt Washer ock nut Spring Spacer Screw Wut Spring Spacer Screw Wut Spring Spacer Screw Wut Spacer-LH Spacer-RH Screw Screw Screw Screw Vut Support Screw Vut Support Screw Vut Support Screw Starlock Reinforcement Screw Starlock </td <td>Kanzaki K46S</td> | Kanzaki K46S |
| 75 4 9699-0119-02 Bricka W 76 2 1136-0175-01 Distans Si 77 2 1136-0312-01 Bricka W 78 2 9652-0015-04 Låsring Bricka | Washer Spacer Washer Retaining ring Hub cap | |

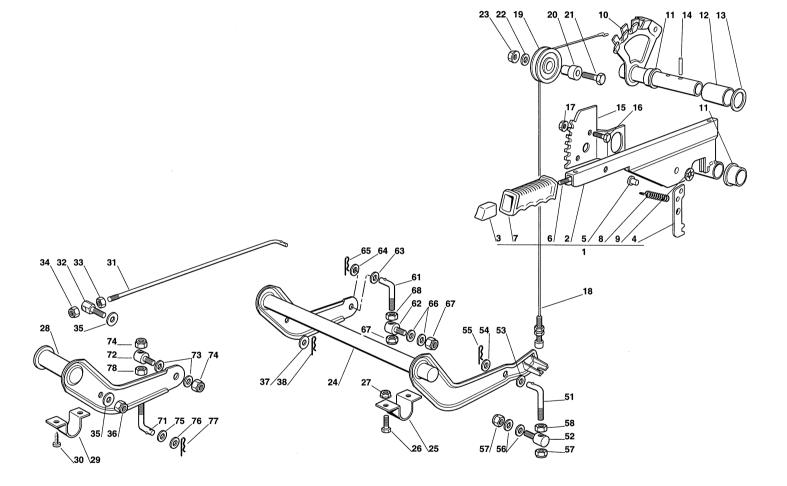






| Utgå Issue 2004 Pos. Fig. 1 2 3 4 | e - 13 | Pi | ldnr cture 02 uantit | | ESTATE TORN ESTATE TORN AGGREGATSL | IADO HST | ESTA | TE TORNADO TE TORNADO HST /ER DECK LIFT | | Sida Page |
|---|--------------------|--------|-------------------------------|---|--|--------------------------------|------|---|-------------|---------------------|
| Pos. Fig. 1 2 3 | Ar 2521 2522 | | | у | AGGREGATSL | YFT | MOM | /ER DECK LIFT | | |
| Fig. | 2521 2522 | ital/Q | uantit | у | | | | | | 114 |
| 2 3 | 2522 | | | | Art nr Part No | Benämning | | Description | Sats Kit | Anmärkning Notes |
| 2 3 | 1 | | | | | | | | | |
| 3 | | | | | 1136-0487-01 1136-0493-01 | Lyftspak kpl • Lyftspak | | Lift lever assy • Lift lever | | Inkl. pos 2 - 9 |
| 4 | 1 | | | | 1136-0298-01 | Tryckknapp | | Button | | |
| | 1 | | | | 1136-0222-01 | Spärrhake | | • Dog | | |
| 5 | 1 | | | | 1136-0227-01 | Sprint | | • Pin | | |
| 6 7 | 1 | | | | 1136-0105-01 | Handtag | | Push rod | | |
| 8 | 1 | | | | 1136-0203-01 | Fjäder | | Handle Spring | | |
| 9 | 1 | | | | 9675-0012-02 | Starlock | | Locking washer | | |
| 10 | 1 | | | | 1136-0444-01 | Lyftaxel | | Axle | | |
| 11 | 2 | | | | 1136-0078-01 | Bussning | | Bushing | | |
| 12 | 1 | | | | 1136-0163-01 | Distans | | Spacer | | |
| 13 14 | 2 | | | | 9699-0119-02 | Bricka Spännstift | | Washer | | |
| 15 | 1 | | | | | Höjdinställn.segment | | Locating pin Height adjust sector | | |
| 16 | 2 | | | | 9997-0816-16 | Skruv | | Screw | | |
| 17 | 2 | | | | | Mutter | | Nut | | |
| 18 | 1 | | | | 1136-0460-01 | Lyftwire | | Lift wire | | |
| 19 | 1 | | | | 1136-0291-01 | Wirerulle | | Cable pulley | | |
| 20 21 | | | | | 1136-0232-01 | Distans | | Spacer | | |
| 22 | | | | | | Skruv Planbricka | | Screw Flat washer | | |
| 23 | 1 | | | | 9739-0831-22 | Mutter | | Nut | | |
| 24 | 1 | | | | 1136-0443-01 | Lyftaxel | | Lift axle | | |
| 25 | 2 | | | | 1136-0253-01 | Bygel | | Clamp | | |
| 26 | 4 | | | | 9997-0616-16 | Skruv | | Screw | | |
| 27 | 4 | | | | 9/39-0631-22 | Mutter | | Nut | | |
| 28 29 | 1 | | | | 1136-0492-01 | Lyftarm Bygel | | Lift arm | | |
| 30 | 4 | | | | 9847-8016-16 | Skruv | | Clamp Screw | | |
| 31 | 1 | | | | | Lyftstag | | Lift rod | | |
| 32 | 1 | | | | 1136-0235-01 | Ledbult | | Pivot bolt | | |
| 33 | 1 | | | | | Mutter | | Nut | | |
| 34 | 1 | | | | | Mutter | | Lock nut | | |
| 35 36 | 2 | | | | 1136-0309-01 | Bricka Mutter | | Washer | | |
| 37 | 1 | | | | | Planbricka | | Lock nut Flat washer | | |
| 38 | 1 | | | | 1136-0095-01 | Låsnål | | Hair pin | | |
| 51 | 1 | | | | 1136-0347-01 | Lyftlänk | | Lift tie rod | | |
| 52 | 1 | | | | | Ledbult | | Pivot bolt | | |
| 53 | | | | | | Planbricka | | Flat washer | | |
| 54 55 | 1 | | | | 1136-0308-01 | Bricka Låsnål | | Washer | | |
| 56 | 2 | | | | | Bricka | | Hair pin Washer | | |
| 57 | 2 | | | | 9747-1031-02 | Låsmutter | | Lock nut | | |
| 58 | 1 | | | | 9799-1031-02 | Mutter | | Nut | | |
| 61 | 1 | | | | 1136-0347-01 | Lyftlänk | | Lift tie rod | | |
| 62 | | | | | 1136-0231-01 | Ledbult | | Pivot bolt | | |
| 63 64 | 1 | | | | | Planbricka | | Flat washer | | |
| 65 | 1 | | | | | Bricka Låsnål | | Washer Hair pin | | |
| 66 | 2 | | | | | Bricka | | Washer | | |
| 67 | 2 | | | | 9747-1031-02 | Låsmutter | | Lock nut | | |
| 68 | 1 | | | | 9799-1031-02 | Mutter | | Nut | | |
| 71 | 1 | | | | 1136-0928-01 | Spännlänk | | Tie rod | | |
| 72 73 | 1 | | | | | Ledbult | | Pivot bolt | | |
| 74 | 2 | | | | | Bricka Låsmutter | | Washer Lock nut | | |
| 75 | 1 | | | | | Planbricka | | Flat washer | | |
| 76 | 1 | | | | | Bricka | | Washer | | |
| 77 | 1 | | | | 1136-0095-01 | Låsnål | | Hair pin | | |
| 78 | 1 | | | | 9799-1031-02 | Mutter | | Nut | | |
| | | | | | | | | | | |

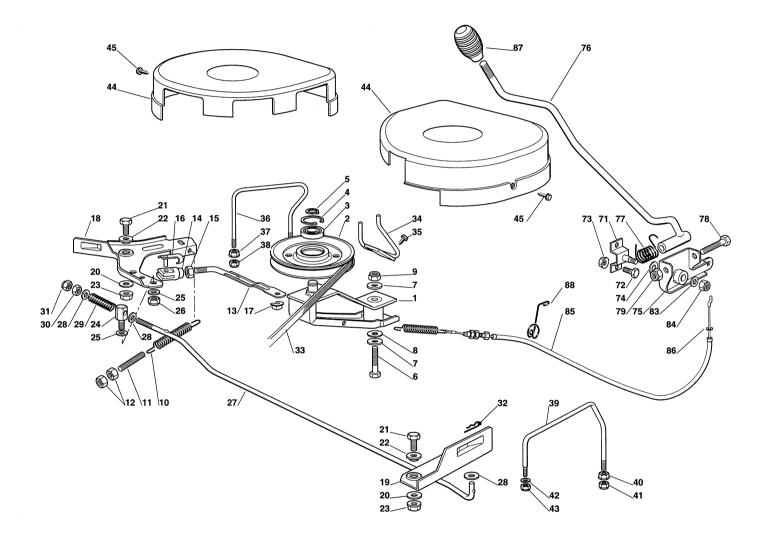






| Ugáva Isaue Bitórur No Picture No 1448A ESTAFE TORNADO IST AGGREGATSINKOPP LING ESTAFE TORNADO HST MOWER DECK ENGAGEMENT Sida Page 116 Pos. Antat/Ouanity Art nr Par No Benämning Description Sata Anmárkning Notes 1 1 1136-004-01 Sumarn Page 116 Notes 2 1 1136-004-01 Sumarn Page 116 Notes 3 1 1136-007-01 Sumarn Page 118-007-01 Notes 4 1 660-0015-04 Lating Screw Sate 5 1 960-0015-04 Lating Screw Screw 3 1 1136-002-01 Jate Screw Screw 3 1 1136-003-01 Jate Screw Screw 3 1 1136-003-01 Jate Screw Screw Screw 3 1 1136-003-01 Jate Jate Jate Jate 4 1 1136-003-01 Jate Jate Jate |
|---|
| Pos Antal/Quantity Art nr Part No Benämning Description Sats Kitt Anmärkning Notes 2221 1 1136-049-01 Spännarm Tension arm Notes 1 1 136-017-01 Remskva Pulley Sats Anmärkning 3 1 136-017-01 Remskva Pulley Ball bearing Sats Anmärkning 4 1 9897-089-12 Struw Stream Ball bearing Sats Anmärkning 5 1 9897-089-12 Struw Stream Stream <t< td=""></t<> |
| Prog. Part No Description Sala Amagening 221 222 Itals Odde Notes 1 1 1136-044-01 Spinnarm Tension arm Notes 2 1 1138-044-01 Spinnarm Policy Notes 3 1 1138-044-01 Spinnarm Delay Notes 4 1 1138-044-01 Spinnarm Lock ring Notes 5 1 0950-015-04 Lasring Lock ring Notes 7 2 1136-0404-01 Bricka Washer Notes 9 1 0747-0831-02 Mutter Lock runt Notes 11 1 1136-083-01 Spinnsting Tie rod Not 12 9799-0831-02 Mutter Not Not Not 13 1 1136-083-01 Lashuit Lock runt Not 14 1 1136-083-01 Lashuit Lock runt Not |
| 2 1 1136-007-01 Remskva |
| |

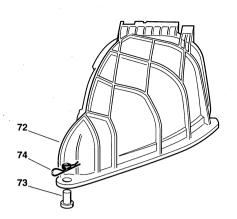


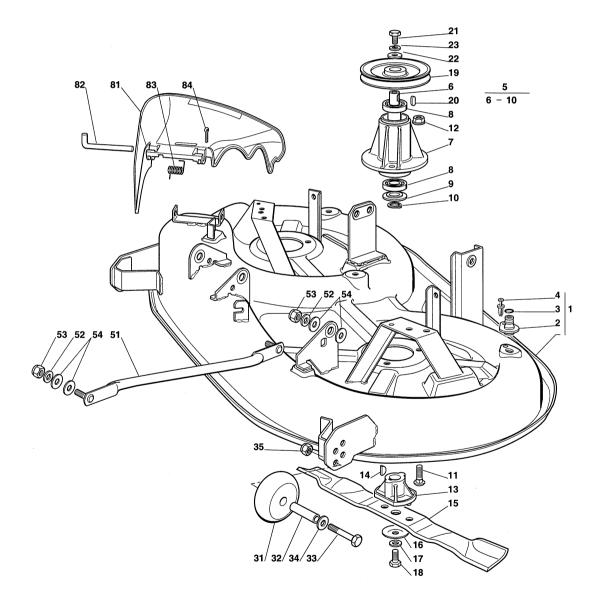





| | | | • | | E-ON MOWERS |
|--|--|--------------|---|-------------|-------------------------------------|
| Utgåva Bild Issue Pic 2004-13 144 | ture No ESTATE TO | RNADO HST | ESTATE TORNADO ESTATE TORNADO HST MOWER DECK | | Sida Page 118 |
| Pos. Antal/Qu Fig. 2521 2522 | antity Art nr Part No | Benämning | | Sats Kit | Anmärkning Notes |
| $ \begin{array}{c ccccccccccccccccccccccccccccccccccc$ | 1136-0120 1136-0068 1136-0099 1136-0099 1136-0176 9650-0020 9898-0825 9739-0831 1136-0124 9600-0014 1136-0155 9987-5238 1136-0015 9987-5238 1136-0015 9987-5238 1136-0015 9987-5238 1136-0015 9987-5238 1136-0015 9987-5238 1136-0015 9987-5238 1136-0015 9997-0820 1136-0307 9683-0030 1136-1052 1136-0307 9699-0056 9739-0831 1136-0308 9699-0056 9739-0831 1136-0308 1136-0308 1136-0308 1136-0308 1136-0229 9598-0002 1136-0902 1136-0902 1136-0902 <td< td=""><td>01 Nit</td><td>Water hose connection O- ring Rivet Bearing box assy Blade shaft Ball bearing Dust cover Circlip Screw Nut Blade hub Key Blade Elastic washer Washer Blade bolt Pulley Key Screw Washer Lock washer Anti scalp wheel Spacer Screw Flat washer Nut Equalizer rod Flat washer Lock nut Washer Dotector Pin lock Discharge protection Pivot Spring</td><td></td><td>Inkl. pos 2 - 4 Inkl. pos 6 - 10</td></td<> | 01 Nit | Water hose connection O- ring Rivet Bearing box assy Blade shaft Ball bearing Dust cover Circlip Screw Nut Blade hub Key Blade Elastic washer Washer Blade bolt Pulley Key Screw Washer Lock washer Anti scalp wheel Spacer Screw Flat washer Nut Equalizer rod Flat washer Lock nut Washer Dotector Pin lock Discharge protection Pivot Spring | | Inkl. pos 2 - 4 Inkl. pos 6 - 10 |

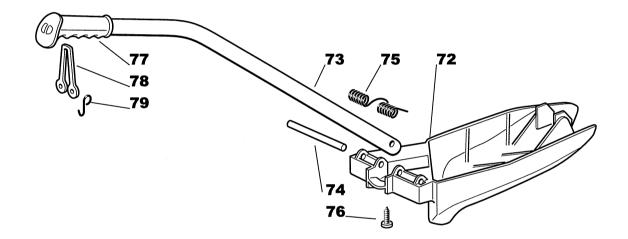




| Reservdelskatalog | |
|-------------------|--|
| Parts Catalogue | |



TILLBEHÖR ACCESSORIES

| Utgåva Issue Bildnr Picture No MULCHINGSATS ART.NR 13- 0935- 11 MULCHING KIT ART.NO 13- 0935- 11 Sida Page 160 2004- 13 1559 Antal/Quantity Art nr Part No Benämning Description Sats Kit Anmärkni Notes | |
|--|----|
| Pos. Antal/Quantity Art nr Benämning Description Sats Anmärkni | |
| PosArthi Denamining Description Sats Annarkin | |
| | ng |
| 0935 | |
| 0035 Constraint Deficitor Deficitor 73 1 1136-123-01 Handagsfor Handle tube Handle tube 74 1 1136-123-01 Sprint Pin Handle tube Pin 75 1 1136-123-01 Sprint Pin Pin Pin 76 1 1336-123-01 Fiddr Spring Spring 76 1 1336-123-01 Spring Spring Spring 77 1 1336-082-01 Handagsfor Handagrip Handagrip 78 1 1136-0827-01 Krok Handagrip Handagrip 79 2 1136-0877-01 Krok Handagrip Handagrip 1 136-0877-01 Krok Handagrip Handagrip Handagrip 1 136-0877-01 Krok Handagrip Handagrip Handagrip 1 1 Handagrip Handagrip Handagrip Handagrip 1 1 Handagrip | |

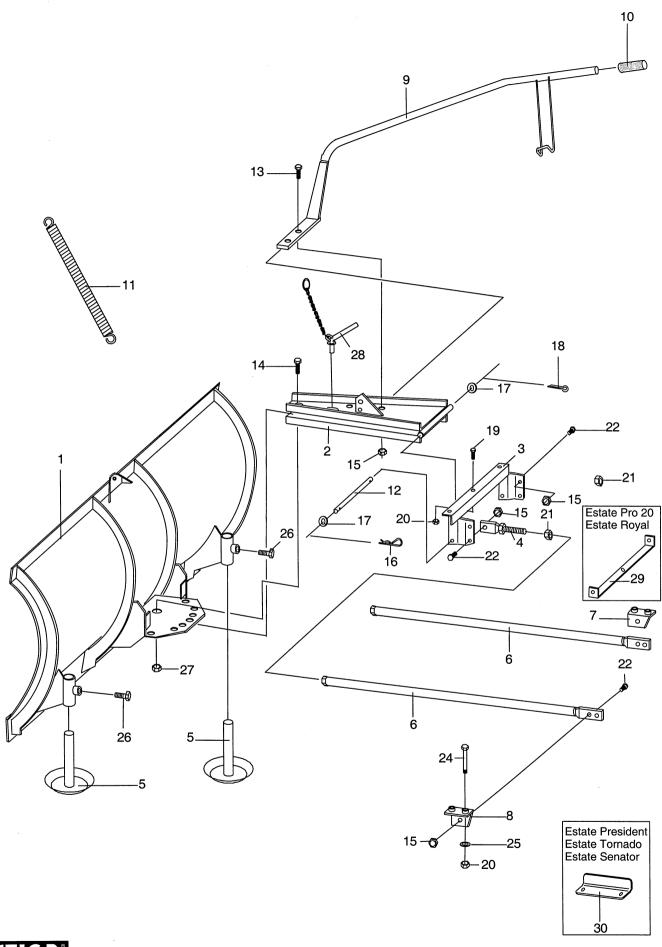







TILLBEHÖR ACCESSORIES


| Fails Calalogue | | | | | | | ACCESSURIES | | | |
|---|---------------------------------|--------|---------|-----------------------------|--|-----------|-------------------------------------|-------------|--------------|---------------------|
| Utgåva Bildnr Issue Picture No | | | No | SNÖBLAD (12 ART.NR 13- 0 | | | W BLADE (120 cm) NO 13- 0924- 11 | | Sida Page | |
| 2004-1 | 3 | 14 | 53 | | | | | | 168 | |
| Pos Fig. | Ant | tal/Qu | uantity | / | Art nr Part No | Benämning | | Description | Sats Kit | Anmärkning Notes |
| 09 | 924 | | | | | | | | | |
| 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 24 25 26 27 28 29 30 | 1112221111111218121372644211111 | | | | $\begin{array}{c} 1319-1812-01\\ 1319-1816-01\\ 1319-1816-01\\ 1319-1826-01\\ 1319-1826-01\\ 1319-1820-01\\ 1319-1820-01\\ 1319-1822-01\\ 1319-1822-01\\ 1319-1822-01\\ 1319-1822-01\\ 1319-1822-01\\ 1319-1527-01\\ 1319-1527-01\\ 1319-1551-01\\ 9997-1030-16\\ 1319-1551-01\\ 9747-1031-02\\ 1319-1811-01\\ 9997-0816-16\\ 9747-0831-02\\ 9747-1031-02\\ 9997-0820-16\\ 9997-0880-16\\ 9997-0880-16\\ 9699-0028-02\\ 9997-1220-16\\ 9747-1631-02\\ 1319-1531-01\\ 1319-1813-01\\ \end{array}$ | Blad | | Blade | | |

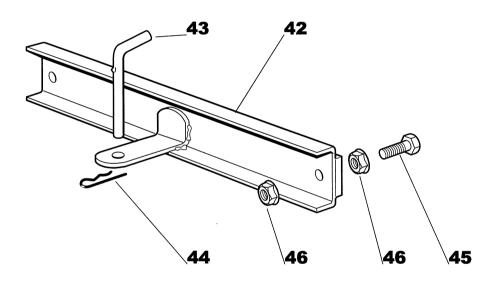






| Reservdelskatalog Parts Catalogue | | | | /TIG | TILLBEHÖR ACCESSORIES | | | | | |
|--------------------------------------|------|------------|---------|----------------------|--|---|--------|-------------|---------------------|---------------------|
| Utgå Issu 2004 | e | Picture No | | DRAG ART.NR 13- 0 | 933-11 | TOW BAR ART.NO 13- 0933- 11 | | | Sida Page 164 | |
| Pos. Fig. | | ntal/Q | uantity | y | Art nr Part No | Benämning | | Description | Sats Kit | Anmärkning Notes |
| 42 43 44 45 46 | 0933 | | | | 1136-0228-01 1136-0096-01 9997-0825-16 | Balk Dragsprint Låsnål Skruv Mutter | •••••• | Screw | | |

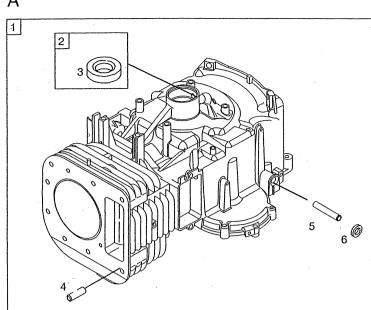

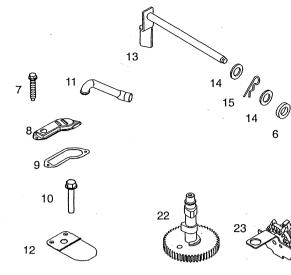


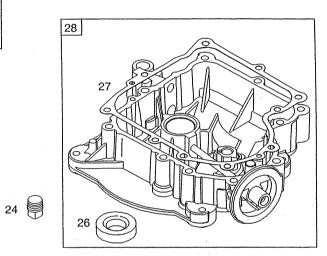


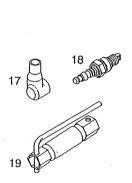


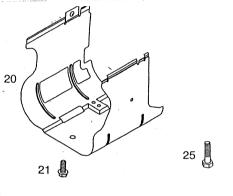

4

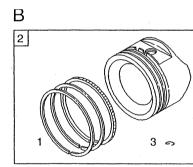


 

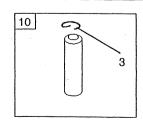



GP

1692 SPARE PARTS

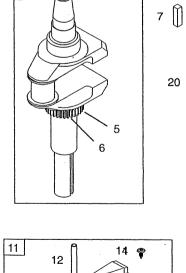

e

 


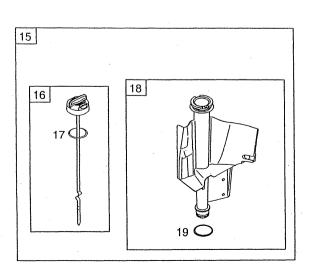

Α



| Utgkva Issue Bildor Poturo No 214907 BFIGS & STRATTON 214907 BRIGS & STRATTON 214907 Sida Page 2044-13 1692 Anna/Cuantity Art nr Poturo No 2016 Benämning Description Sata Notes Sata Annakrining Annakrining Fig. 2016 Annakrining Poto 2016 Annakrining Description Sata Annakrining Annakrining X A01 1 687277 Criinder kpl. Optidat asy. | | Parts | Catalo | gue | | | ENGINES | | | | | | | |
|---|--|---|---|-------|----------|--|-----------|----------------------------|-------|----------------------------|--|--|--|--|
| Pos. Antal/Quantity Art nr Part No Benämning Doscription Sate Kit Anmärkning Notes X A01 1 697377 Cylinder kpl. - bushing Notes A03 1 39266 - bushing - bushing - bushing Notes A03 1 391089 - Tätingsring - bushing - bushing - A04 2 697377 Cylinder kpl. - bushing - bushing - A05 2 697171 Cyclinder kpl. - bushing - bushing - A06 1 697170 Network Gaseu - - A07 2 697171 Sork - Tätingsring -58al - A08 1 697194 Skruv Sore - - A11 1 697141 Skruv Sore Sore - A13 1 691021 Faquititshysa Spark plug wrench - A13 | | Issue | e | Pie | cture No | 21A907 CYLINDER (A |) 21A | 907 INDER (A) | | Page | | | | |
| Pig. Part No Defamining Description Sats Anmarking X A01 1 697377 Cylinder kpl. Cylinder assy. Notes A03 1 399265 -Busning. - Satl. -Busning. - Satl. A03 1 697377 Cylinder kpl. - Satl. - Busning. - Satl. A05 1 697144 -Tampsing. - Satl. - Satl. - Satl. A06 1 697112 Lock. - Cogreg. - Satl. - Satl. A07 2 697112 Lock. Screw. - Satl. - Satl. A08 1 697114 Veriliationsrof. Breather reed. - Satl. A13 1 697114 Veriliationsrof. Breather reed. - Satl. A13 699114 Veriliationsrof. Breather reed. - Satl. - Satl. A14 2 691601 Breather reed. - Satl. - Satl. - Satl. A14 | | | | | | VEVAXEL (B) | CRA | NKSHAFI (B) | | 100 | | | | |
| 21A 907- 0146 697377 399265 Cylinder kpl. Cylinder assy. A02 399265 - Bussning. - Bussning. - Bussning. A03 1 399265 - Bussning. - Seal A04 2 680959 - Tatiningsring. - Seal A05 1 687174 - Bussning. - Seal A06 1 682407 - Tätningsring. - Seal A08 1 687112 Lock. Cover A08 1 687109 Packing. Gasket A10 1 687113 Ventilationsrör Breather reed A12 1 687113 Ventilationsrör Breather reed A14 2 681919 Tandstiffstylsa Spark plug boot A17 1 681909 Tandstiffstylsa Spark plug boot A17 1 691003 Struv Screw A21 1 691063 Struv Screw A22 1 690164 <td< td=""><td></td><td></td><td>Ant</td><td>al/Qu</td><td>uantity</td><td></td><td>Benämning</td><td></td><td></td><td>-</td></td<> | | | Ant | al/Qu | uantity | | Benämning | | | - | | | | |
| A02 1 399265 - Bushing - Seal A03 1 899265 - Tap. - Locating pin A04 2 899797 Stanger - Seal A05 1 697144 - Bushing Bushing A07 2 697147 Struw Screw A08 1 697142 Lock Cover A09 1 697143 Struw Screw A08 1 697144 Ventiationsfor Breather tube A10 1 697174 Ventiationsfor Breather tube A11 1 6971724 Ventiationsfor Breather tube A13 1 697124 Ventiationsfor Spark plug A14 2 697620 Lashal Cover or crank A17 1 691620 Lashal Cover or crank A18 1 9400-0244-00 Tandstiftsnyka Spark plug wench. A21 699166 Atarapningsplugg Oi | | 9. | 907- | | | | | | i cit | Notes | | | | |
| | x x x x x x x x x x x x | A02 A03 A04 A05 A06 A07 A08 A09 A10 A11 A12 A13 A14 A15 A17 A18 A19 A20 A21 A22 A23 A24 A25 A26 A27 A28 B01 B02 B03 B04 B05 B06 B07 B08 B09 B10 B11 B12 B13 B14 B15 B16 B17 B18 B19 | 1 1 2 1 1 2 1 1 1 1 1 2 1 1 1 1 1 1 1 1 | | | 399265 391086 690959 697144 692407 697157 697157 697109 697104 697104 697113 697124 692012 691620 691620 691909 9400-0244-00 89838 697359 691003 699016 691908 699016 691968 690946 692125 690947 697110 697106 698375 698377 698371 698371 698373 698469 697390 697128 691639 222698 697391 697391 697392 697607 697391 697392 697607 697156 6970716 697156 6970716 697392 697607 697156 6970716 697156 6970716 697156 6970716 6971756 6970716 6971756 6970716 6971756 697071756 6971757 69717577 697175777 6971757777777777777777777777777777777777 | Bussning | Bushing | | .020" oversize Standard | | | | |

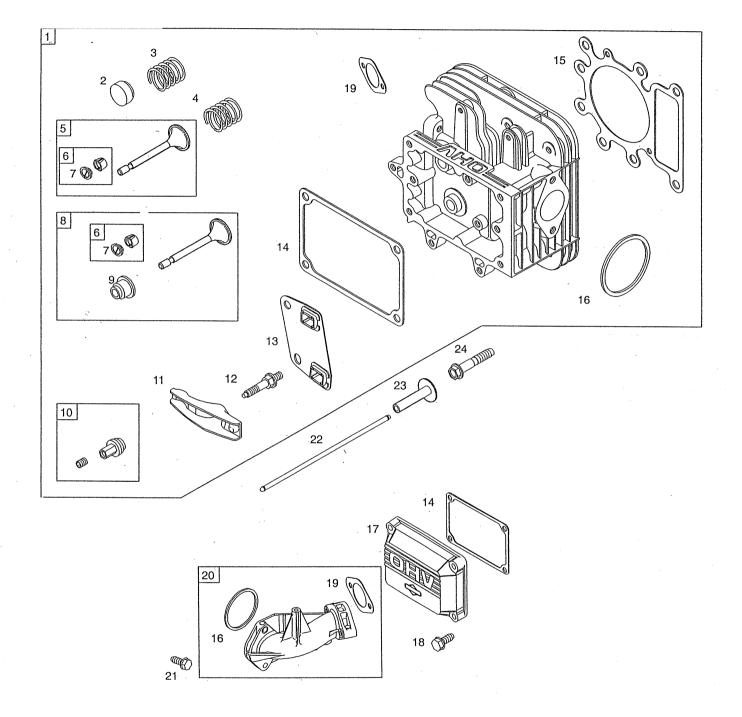




| Reservdelskata Parts Catalogu | |
|----------------------------------|--|
| | |




| | | | | | | | | | ENGINES | | |
|-------------|--|--|------------|--------|--|--|-----------|------|---------------------------------------|-------------|---------------------|
| | Utgå Issu 2004 | е | Picture No | | | BRIGGS & ST 21A907 TOPPLOCK (A | | 21A9 | GS & STRATTON 007 NDER HEAD (A) | | Sida Page 198 |
| | Pos. Fig. | Ant 21A 907- 0146 | al/Qu | antity | | Art nr Part No | Benämning | | Description | Sats Kit | Anmärkning Notes |
| x x x | A01 A02 A03 A04 A05 A06 A07 A08 A09 A10 A11 A12 A13 A14 A15 A16 A17 A18 A19 A20 A21 A22 A23 A24 | 0146 1 1 1 1 1 1 2 1 1 2 1 1 1 1 1 1 1 1 1 1 1 2 1 1 2 1 1 2 8 | | | | 697396 691843 691279 495856 499586 690964 495857 690968 691986 691751 691095 690822 272475 273280 692138 692492 691108 692137 697361 691148 697394 697395 690564 690360 | Topplock | | Cylinder head | | |
| | | | | | | | | | | | |

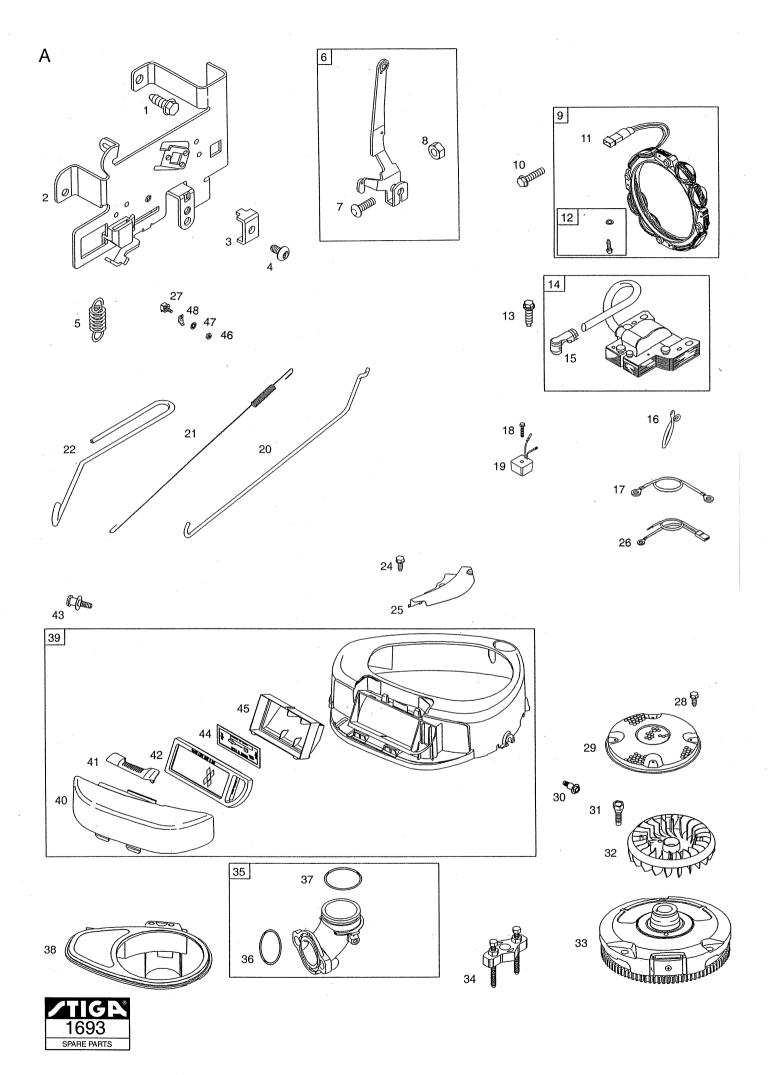





| Parts Catalo | Jyue | | ENGINES | | | |
|-----------------------------|------------------------------|--|-----------|---|-------------|---------------------|
| Utgåva Issue 2004- 13 | Bildnr Picture No 1693 | BRIGGS & ST 21A907 REGULATOR | (A) | BRIGGS & STRATTON 21A907 GOVERNOR (A) | | Sida Page |
| 2004-13 | 1035 | FLÄKTHUS (A | A) | BLOWER HOUSING (A) | | 200 |
| Fig. | tal/Quantity | _ Art nr Part No | Benämning | Description | Sats Kit | Anmärkning Notes |
| 21A 907- 0146 | | | | | | |
| | | 691693 694042 691024 690804 692208 691374 69121 696457 691061 492341 493880 694123 697089 697088 691183 697089 697089 697088 691188 691841 691842 691842 691843 697352 398808 691972 697897 697133 697102 690372 699044 698282 19203 697122 691917 697123 698368 697870 697420 697419 698413 697103 697292 697155 691612 691077 691084 | Skruv | Control bracket Clamp | | |
| | | | | Washer | | |



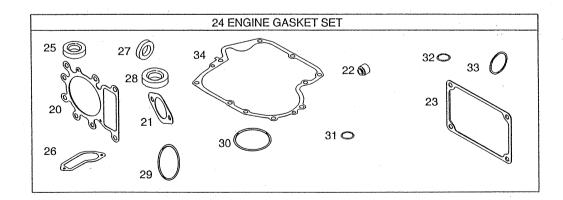


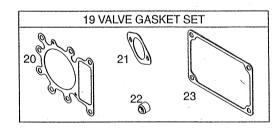

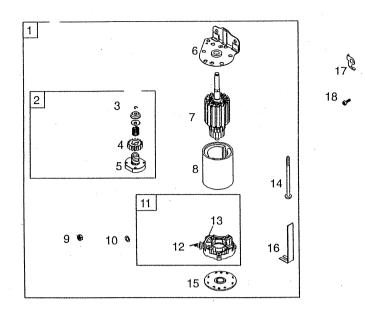



| Paris Catalo | gue | | | | ENGINES | | |
|---|------------------------------|--|---|--------------|--|---------------------|---------------------|
| Utgåva Issue 2004-13 | Bildnr Picture No 1684 | BRIGGS & S 21A907 STARTMOTO PACKNINGS |)r (A) | 21A9 STAF | GGS & STRATTON 007 RTER MOTOR (A) KET SET (A) | Sida Page 202 | |
| Pos. An Fig. 21A 907- 0146 | tal/Quantity | — Art nr Part No | Benämning | | Description | Sats Kit | Anmärkning Notes |
| A01 1 A02 1 A03 1 A04 1 A05 1 A06 1 A07 1 A08 1 A09 1 A10 1 A11 1 A12 1 A13 1 A14 2 A15 1 A16 1 A17 1 A18 1 A20 1 A21 1 A22 1 A23 1 A24 1 A25 1 A26 1 A27 1 A30 1 A31 1 A33 1 A34 1 | | 693551 693699 691265 693713 692024 691283 692034 693757 691029 691261 691293 693167 497608 690323 691286 691532 691581 273280 692137 690968 272475 697151 391086 697109 692407 690947 691917 697123 691032 691031 692138 697110 | Släpkolssats Bult Botten Stag Kabelklämma Skruv Packningssats- ventil Topplockspackning Packning Packning Packning Packning Packning Packning Tätning sring Tätning sring O- ring O- ring O- ring O- ring O- ring O- ring | r | • 0- ring | | |

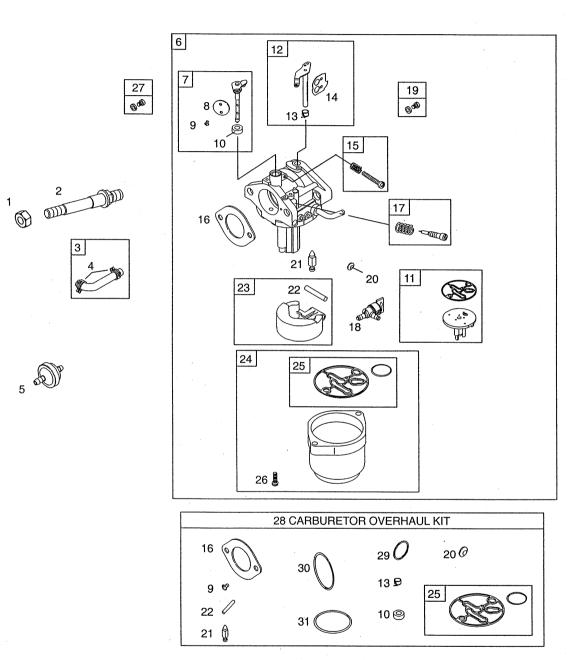





| | Parts | Catalo | gue | | | | | | | | | |
|-----------------------|---|--|-------|-----------------------|---|---|-------------|--|-------------|---------------------------|--|--|
| | Utgå Issue 2004 | Ð | | dnr cture No 94 | BRIGGS & S 21A907 FÖRGASARE PACKNINGS | E (A) | 21A9 CAR | GGS & STRATTON 907 BURETTOR (A) KET SET (A) | | Sida Page 204 | | |
| | Pos. Fig. | Ant 21A 907- 0146 | al/Qu | uantity | Art nr Part No | Benämning | | Description | Sats Kit | Anmärkning Notes | | |
| xxx xxxxx xx xx xx xx | A01 A02 A03 A04 A05 A06 A07 A08 A09 A10 A11 A12 A13 A14 A15 A16 A17 A18 A19 A20 A21 A22 A23 A24 A25 A26 A27 A28 A29 A30 A31 | 2 2 1 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 | | | 690958 690227 697098 95162 394358 699896 698776 698776 698778 698778 698773 695408 692137 695425 698183 699897 690727 696136 694918 694914 698783 698781 695407 699898 698787 692138 691917 697123 | Packning Justerskruv Bränslekran Huvudmunstycke Expansionsplugg Nålventil Flottöraxel Flottör Flottörhus Packning Skruv Huvudmunstycke Rep.sats-förgasare O- ring O- ring | | Nut Stud Fuel line - Hose clamp Fuelfilter Carburettor assy - Throttle shaft. - Throttle shaft. - Screw - Seal - Transfer tube - Choke shaft - Choke shaft - Choke valve - Idle speed kit. - Gasket - Idle mixture kit - Fuel shut- off valve - Main jet - Welch plug - Needle valve - Float hinge pin - Float bowl. - Gasket - Screw Main jet - Verhaul kit- carbur. - O- ring - O- ring - O- ring | | Standard High altitude | | |