


# Genuine Spare Parts

---






Utgåva Issue		Bildnr Picture No		ESTATE BASIC KAROSS		ESTATE BASIC BODY WORK		Sida Page	
2006-13		2074						60	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2572								
1	1				1136-1974-01	Motorhuv- gul.....	Engine hood- yellow.....		Inkl. pos 2, 8 - 10
2	1				1136-0905-01	• Platta- gul .....	• Plate .....		
3	2				1136-0897-01	Bult .....	Bolt .....		
4	2				1136-0009-01	Låsplatta .....	Lock plate .....		
8	1				1136-1968-01	• Styrpinne- hö .....	• Pin- RH .....		
9	1				1136-1969-01	• Styrpinne- vä .....	• Pin- LH .....		
10	2				1136-1963-01	• Skruv .....	• Screw .....		
11	1				1136-1966-01	Instrumentbräda .....	Dashboard .....		
12	1				1136-1967-01	Platta .....	Plate .....		
14	2				9848-8013-16	Skruv .....	Screw .....		
15	2				1136-0010-01	Låsplatta .....	Lock plate .....		
16	3				9836-9618-12	Skruv .....	Screw .....		
17	1				1136-1971-01	Stöd .....	Dashboard support .....		
18	1				1136-0475-01	Hjulkåpa- gul.....	Wheel cover- yellow.....		Inkl. pos 19 - 20
19	1				1136-0148-01	• Fotstegsskydd- hö .....	• Footboard cover- RH .....		
20	1				1136-0147-01	• Fotstegsskydd- vä .....	• Footboard cover- LH .....		
21	6				9836-9635-12	Skruv .....	Screw .....		
22	4				9836-9618-12	Skruv .....	Screw .....		
23	1				9836-9525-12	Skruv .....	Screw .....		
24	5				9699-0060-02	Planbricka .....	Flat washer .....		
25	1				1136-1970-01	Avskiljare .....	Intake separator .....		
26	4				9699-0085-02	Planbricka .....	Flat washer .....		
31	1				1136-0440-01	Gasreglage .....	Throttle control .....		
32	2				9997-0412-16	Skruv .....	Screw .....		
33	2				9683-0010-02	Bricka .....	Washer .....		
34	1				1136-0192-01	Knopp .....	Handle .....		
35	1				9865-0412-16	Skruv .....	Screw .....		
36	1				9799-0431-02	Mutter .....	Nut .....		
41	1				1136-0920-01	Sits .....	Seat .....		
43	1				1136-0252-01	Sitsplatta .....	Seat plate .....		
44	4				9997-0820-16	Skruv .....	Screw .....		Inkl. pos 53
45	4				9683-0030-02	Låsbricka .....	Lock washer .....		
46	4				9699-0056-02	Planbricka .....	Flat washer .....		
47	1				1136-0891-01	Fjäder .....	Spring .....		
48	1				9997-0512-16	Skruv .....	Screw .....		
49	1				9747-0531-02	Mutter .....	Nut .....		
51	1				1136-1155-01	Ratt .....	Steering wheel .....		
52	1				9595-0272-00	Stift .....	Pin .....		
53	1				1136-0873-01	• Lock .....	• Cap .....		
54	1				1136-0942-01	Kam .....	Cam .....		
55	2				1136-0820-01	Skruv .....	Screw .....		
56	2				9699-0018-02	Bricka .....	Washer .....		
57	2				9747-0531-02	Mutter .....	Nut .....		
61	1				1136-0869-01	Kåpa .....	Cover .....		
62	2				9836-9635-12	Skruv .....	Screw .....		
63	2				9699-0035-02	Planbricka .....	Flat washer .....		
64	2				9836-9618-12	Skruv .....	Screw .....		
81	1				1136-0275-01	Skydd- övre .....	Guard- upper .....		Inkl. pos 102
82	1				1136-0276-01	Skydd- nedre .....	Guard- lower .....		
83	2				9847-8038-16	Skruv .....	Screw .....		
84	2				9699-0024-02	Planbricka .....	Flat washer .....		
85	2				1136-0010-01	Låsplatta .....	Lock plate .....		
91	1				1136-0318-01	Bränsletank .....	Fuel tank .....		
92	1				1136-0344-01	Tanklock .....	Tank cap .....		
93	1				1136-0327-01	Tankfäste .....	Tank support .....		
94	1				9848-8013-16	Skruv .....	Screw .....		
101	1				1136-1975-01	Ljuddämparskydd .....	Muffler protection .....		
102	2				1136-0061-01	• Plugg .....	• Cap .....		
103	4				9847-8216-16	Skruv .....	Screw .....		
104	1				1136-0259-01	Huvfäste- hö .....	Hood plate- RH .....		
105	1				1136-0260-01	Huvfäste- vä .....	Hood plate- LH .....		
106	4				9847-8009-16	Skruv .....	Screw .....		

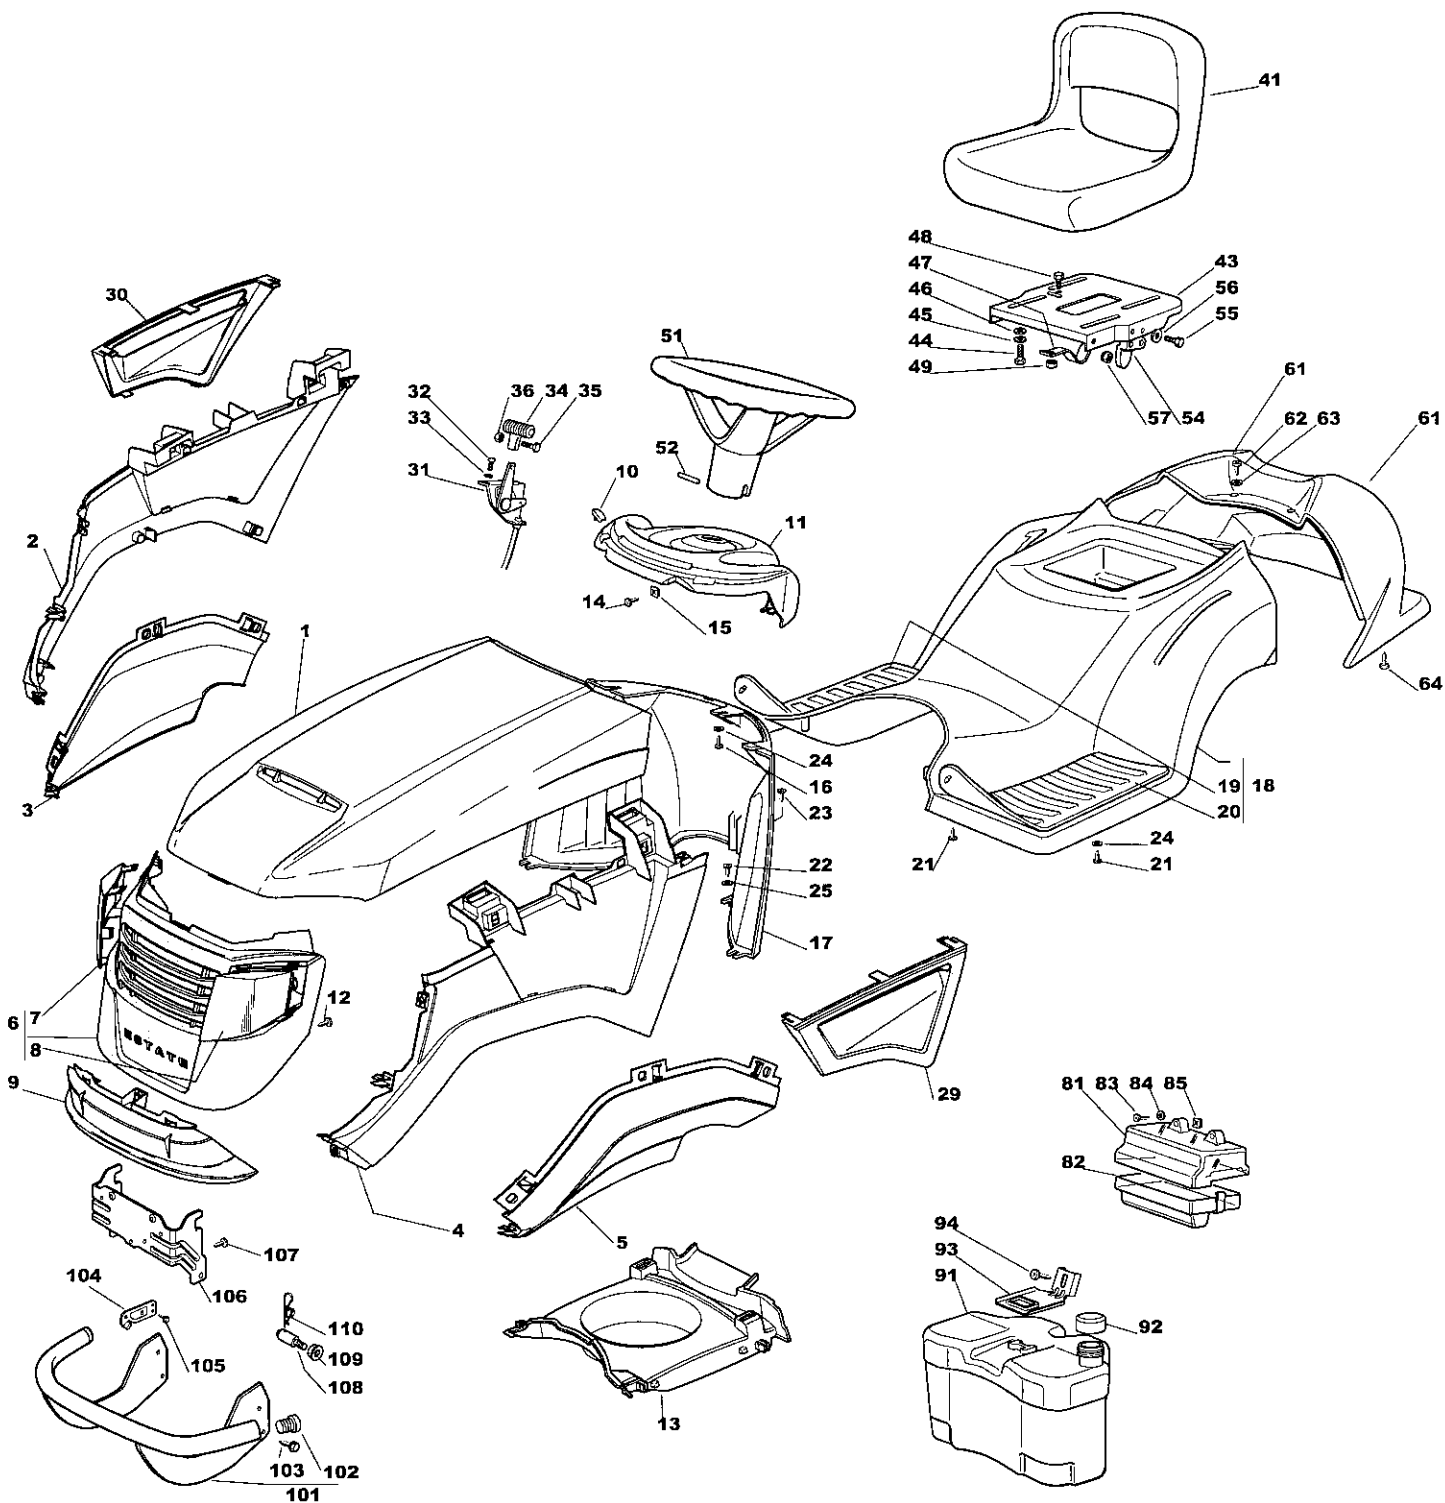

Utgåva Issue 2006- 13		Bildnr Picture No 2075		ESTATE TORNADO ESTATE TORNADO HST KAROSS		ESTATE TORNADO ESTATE TORNADO HST BODY WORK		Sida Page 62	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2546	2547							
1	1	1		1136-2072-01	Motorhuv- övre, gul.....	Engine hood- upper, ye.....		Inkl. pos 7 - 8	
2	1	1		1136-2101-01	Huv- övre hö, gul.....	Hood- upper RH, yellow.....			
3	1	1		1136-2106-01	Huv- undre hö, grå.....	Hood- lower RH, grey.....			
4	1	1		1136-2102-01	Huv- övre vä, gul.....	Hood- upper LH, yellow.....			
5	1	1		1136-2105-01	Huv- undre vä, grå.....	Hood- lower LH, grey.....			
6	1	1		1136-2176-01	Huv- främre, grå.....	Hood- front, grey.....			
7	1	1		1136-2124-01	• Skydd, hö.....	• Grill, RH.....			
8	1	1		1136-2125-01	• Skydd, vä.....	• Grill, LH.....			
9	1	1		1136-2071-01	Huv- främre undre, grå.....	Hood- front lower, gre.....			
10	2	2		1136-0179-01	Huvskydd.....	Grommet.....			
11	1	1		1136-0871-01	Instrumentbräda.....	Dashboard.....		Inkl. pos 19, 20 Inkl. pos 19, 20	
12	6	6		1136-0816-01	Skruv.....	Screw.....			
13	1	1		1136-2075-01	Kåpa.....	Conveyor.....			
14	2	2		9848-8013-16	Skruv.....	Screw.....			
15	2	2		1136-0010-01	Låsplatta.....	Lock plate.....			
16	3	3		9836-9618-12	Skruv.....	Screw.....			
17	1	1		1136-0926-01	Stöd.....	Support.....			
18	1			1136-0475-01	Hjulkåpa- gul.....	Wheel cover- yellow.....			
18		1		1136-0476-01	Hjulkåpa.....	Wheel cover.....			
19	1	1		1136-0148-01	• Fotstegsskydd- hö.....	• Footboard cover- RH.....			
20	1	1		1136-0147-01	• Fotstegsskydd- vä.....	• Footboard cover- LH.....			
21	6	6		9836-9635-12	Skruv.....	Screw.....			
22	4	4		9836-9618-12	Skruv.....	Screw.....			
23	1	1		9836-9525-12	Skruv.....	Screw.....			
24	5	5		9699-0060-02	Planbricka.....	Flat washer.....			
25	4	4		9699-0085-02	Planbricka.....	Flat washer.....			
29	1	1		1136-2103-01	Kåpa, vä.....	Cover, LH.....			
30	1	1		1136-2104-01	Kåpa, hö.....	Cover, RH.....			
31	1	1		1136-0440-01	Gasreglage.....	Throttle control.....			
32	2	2		9997-0412-16	Skruv.....	Screw.....			
33	2	2		9683-0010-02	Bricka.....	Washer.....			
34	1	1		1136-0192-01	Knopp.....	Handle.....			
35	1	1		9865-0412-16	Skruv.....	Screw.....			
36	1	1		9799-0431-02	Mutter.....	Nut.....			
41	1	1		1136-0315-01	Sits.....	Seat.....			
43	1	1		1136-0252-01	Sitsplatta.....	Seat plate.....			
44	4	4		9997-0820-16	Skruv.....	Screw.....			
45	4	4		9683-0030-02	Låsbricka.....	Lock washer.....			
46	4	4		9699-0056-02	Planbricka.....	Flat washer.....			
47	1	1		1136-0891-01	Fjäder.....	Spring.....			
48	1	1		9997-0512-16	Skruv.....	Screw.....			
49	1	1		9747-0531-02	Mutter.....	Nut.....			
51	1	1		1136-0360-01	Ratt.....	Steering wheel.....			
52	1	1		9595-0272-00	Stift.....	Pin.....			
54	1	1		1136-0942-01	Kam.....	Cam.....			
55	2	2		1136-0820-01	Skruv.....	Screw.....			
56	2	2		9699-0018-02	Bricka.....	Washer.....			
57	2	2		9747-0531-02	Mutter.....	Nut.....			
61	1	1		1136-0869-01	Kåpa.....	Cover.....			
62	2	2		9836-9635-12	Skruv.....	Screw.....			
63	2	2		9699-0035-02	Planbricka.....	Flat washer.....			
64	2	2		9836-9618-12	Skruv.....	Screw.....			
81	1	1		1136-0275-01	Skydd- övre.....	Guard- upper.....			
82	1	1		1136-0276-01	Skydd- nedre.....	Guard- lower.....			
83	2	2		9847-8038-16	Skruv.....	Screw.....			
84	2	2		9699-0024-02	Planbricka.....	Flat washer.....			
85	2	2		1136-0010-01	Låsplatta.....	Lock plate.....			
91	1	1		1136-0318-01	Bränsletank.....	Fuel tank.....			
92	1	1		1136-0344-01	Tanklock.....	Tank cap.....			
93	1	1		1136-0327-01	Tankfäste.....	Tank support.....			
94	1	1		9848-8013-16	Skruv.....	Screw.....			
101	1	1		1136-2190-01	Ljuddämparskydd.....	Muffler protection.....		Inkl. pos 102	
102	2	2		1136-2063-01	• Plugg.....	• Cap.....			




Utgåva Issue 2006- 13		Bildnr Picture No 2075		ESTATE TORNADO ESTATE TORNADO HST KAROSS		ESTATE TORNADO ESTATE TORNADO HST BODY WORK		Sida Page 64	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2546	2547							
103	4	4			9847- 8216- 16	Skruv .....	Screw .....		
104	2	2			1136- 2130- 01	Huvfäste .....	Hood plate.....		
105	4	4			9847- 8009- 16	Skruv .....	Screw .....		
106	1	1			1136- 2142- 01	Huvstöd .....	Hood support.....		
107	5	5			1136- 0816- 01	Skruv .....	Screw .....		
108	2	2			1136- 2127- 01	Axel .....	Pin .....		
109	2	2			9739- 0831- 22	Mutter .....	Nut .....		
110	2	2			9598- 0002- 02	Låsnål .....	Pin lock .....		

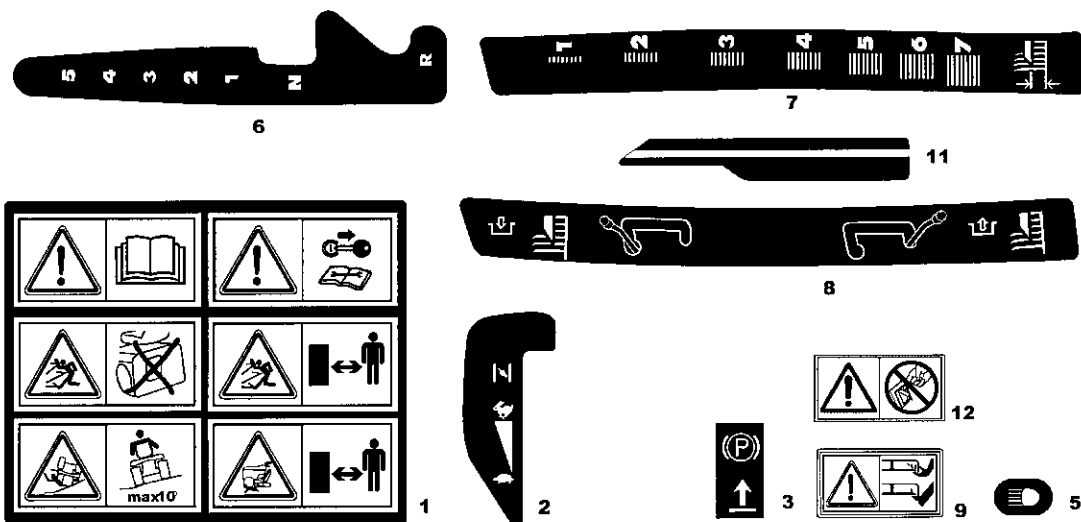




Utgåva Issue  2006- 13		Bildnr Picture No  1562A		ESTATE BASIC ESTATE TORNADO ESTATE TORNADO HST DEKALER		ESTATE BASIC ESTATE TORNADO ESTATE TORNADO HST LABELS		Sida Page  66	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2572 2546	2547							
1	1	1			1136-0832-01	Dekal .....	Label .....		
2	1	1			1136-0026-01	Dekal .....	Label .....		
3	1	1			1136-0020-01	Dekal .....	Label .....		
5	1	1			1136-0031-01	Dekal .....	Label .....		
6	1				1136-0027-01	Dekal .....	Label .....		
7	1	1			1136-0028-01	Dekal .....	Label .....		
8	1	1			1136-0029-01	Dekal .....	Label .....		
9	1	1			1136-0021-01	Dekal .....	Label .....		
11	1	1			1136-1217-01	Dekal .....	Label .....		
12	1	1			1136-1635-01	Dekal .....	Label .....		
99	1	1			1136-1451-01	Dekal "STIGA" .....	Label "STIGA" .....		Ø 55 mm
99	3	3			1136-1453-01	Dekal "STIGA" .....	Label "STIGA" .....		140 x 33 mm
99		2			1136-2197-01	Dekal "Tornado HST K" .....	Label "Tornado HST K" .....		Ej ill/not ill.
99	2				1136-2202-01	Dekal "Tornado" .....	Label "Tornado" .....		Ej ill/not ill.
99	2				1136-2204-01	Dekal "Basic" .....	Label "Basic" .....		Ej ill/not ill.

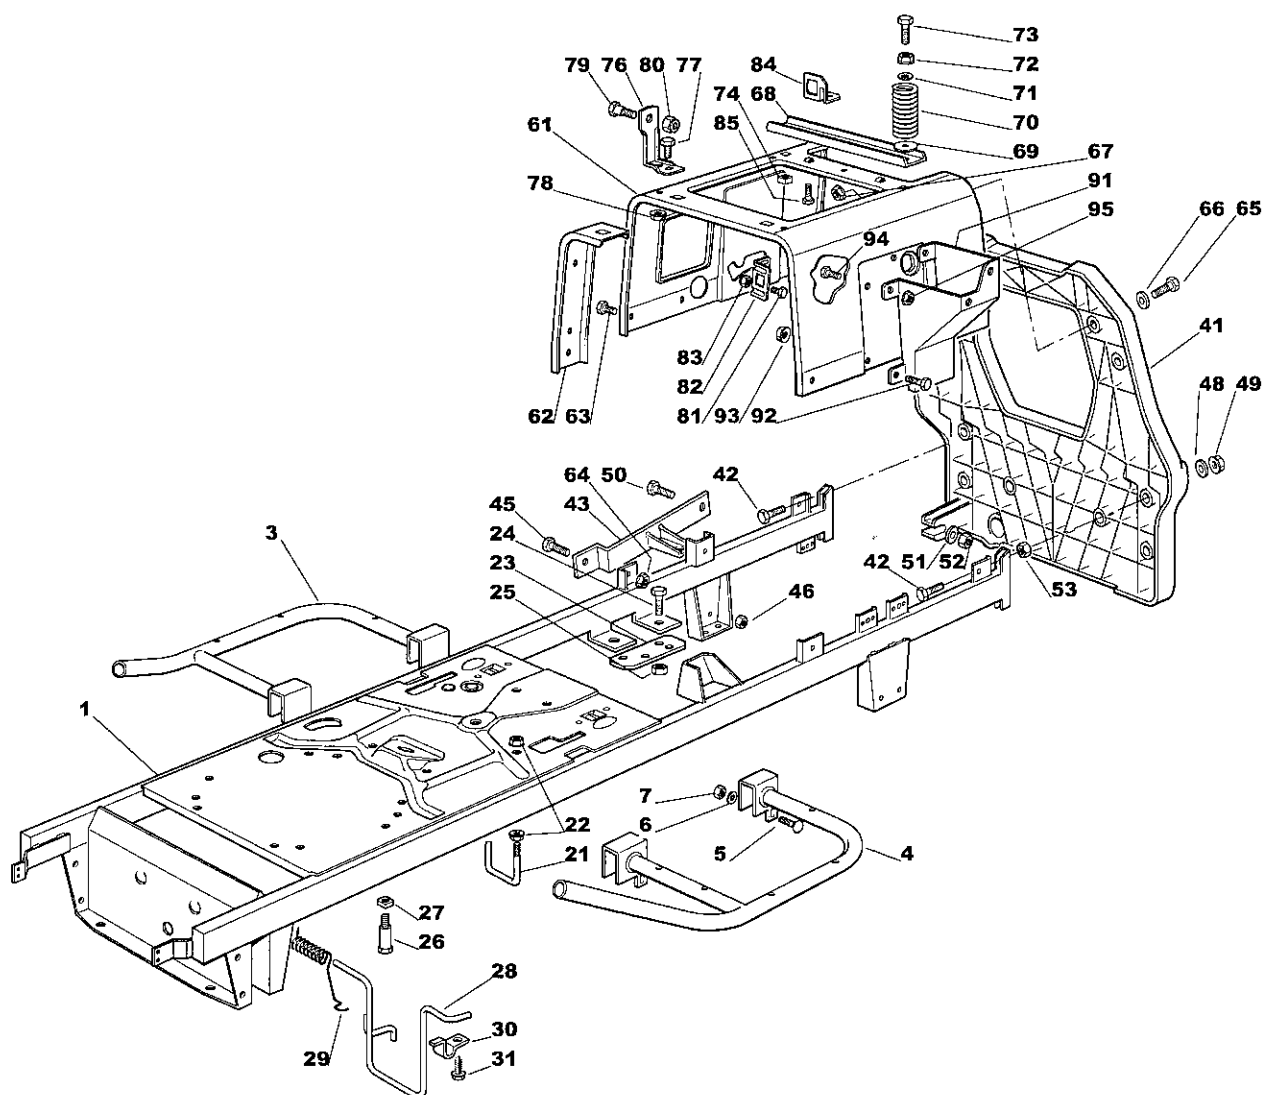

Utgåva Issue  2006-13		Bildnr Picture No  1563B		ESTATE BASIC ESTATE TORNADO ESTATE TORNADO HST CHASSI		ESTATE BASIC ESTATE TORNADO ESTATE TORNADO HST CHASSIS		Sida Page  68	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2572 2546	2547							
1	1	1		1136-1499-01	Ram.....	Frame.....			
3	1	1		1136-0548-01	Fotstegsstöd- hö.....	Footboard support- RH.....			
4	1	1		1136-0549-01	Fotstegsstöd- vä.....	Footboard support- LH.....			
5	4	4		9898-0645-12	Skruv.....	Screw.....			
6	4	4		9699-0060-02	Planbricka.....	Flat washer.....			
7	4	4		9747-0631-02	Låsmutter.....	Lock nut.....			
21		1		1136-0267-01	Remstyrning.....	Belt guide.....			
22		2		9739-0631-22	Mutter.....	Nut.....			
23		2		1136-0261-01	Platta.....	Plate.....			
24		2		9997-0820-16	Skruv.....	Screw.....			
25		2		9747-0831-02	Mutter.....	Lock nut.....			
26	2			1136-0907-01	Remstyrning.....	Belt guide.....			
27	2			1136-0004-01	Fyrkantmutter.....	Square nut.....			
28	1	1		1136-0881-01	Remstyrning.....	Belt guide.....			
29	1	1		1136-0896-01	Fjäder.....	Spring.....			
30	2	2		1136-1247-01	Platta.....	Plate.....			
31	2	2		9847-8216-16	Skruv.....	Screw.....			
41	1	1		1136-0906-01	Plåt- bak.....	Plate- rear.....			
42	2	2		9997-0825-16	Skruv.....	Screw.....			
43	1	1		1136-1051-01	Förstärkning.....	Reinforcement.....			
45	1	1		9997-0816-16	Skruv.....	Screw.....			
46	1	1		9739-0831-22	Mutter.....	Nut.....			
48	2	2		9699-0056-02	Planbricka.....	Flat washer.....			
49	2	2		9747-0831-02	Mutter.....	Lock nut.....			
50	1	1		9997-0840-16	Skruv.....	Screw.....			
51	1	1		9699-0090-02	Planbricka.....	Flat washer.....			
52	1	1		9747-0831-02	Mutter.....	Lock nut.....			
53	2	2		9739-0831-22	Mutter.....	Nut.....			
61	1	1		1136-0337-01	Sitsfäste.....	Seat support.....			
62	2	2		1136-0301-01	Förstärkningsstag.....	Reinforcement plate.....			
63	4	4		9997-0614-16	Skruv.....	Screw.....			
64	4	4		9739-0631-22	Mutter.....	Nut.....			
65	4	4		9997-0620-16	Skruv.....	Screw.....			
66	4	4		9699-0060-02	Planbricka.....	Flat washer.....			
67	4	4		9747-0631-02	Låsmutter.....	Lock nut.....			
68	1	1		1136-0302-01	Förstärkningsstag.....	Reinforcement plate.....			
69	2	2		9699-0056-02	Planbricka.....	Flat washer.....			
70	2	2		1136-0202-02	Fjäder.....	Spring.....			
71	2	2		9699-0090-02	Planbricka.....	Flat washer.....			
72	2	2		9739-0831-22	Mutter.....	Nut.....			
73	2	2		1136-0358-01	Skruv.....	Screw.....			
74	2	2		1136-0003-01	Fyrkantmutter.....	Square nut.....			
76	2	2		1136-0321-01	Vinkelfäste.....	Bracket.....			
77	2	2		9997-0816-16	Skruv.....	Screw.....			
78	2	2		9739-0831-22	Mutter.....	Nut.....			
79	2	2		1136-0086-01	Bult.....	Bolt.....			
80	2	2		9712-0831-02	Låsmutter.....	Lock nut.....			
81	2	2		9997-0512-16	Skruv.....	Screw.....			
82	1	1		1136-0322-01	Vinkelfäste.....	Bracket.....			
83	2	2		9747-0531-02	Mutter.....	Nut.....			
84	1	1		1136-0925-01	Vinkelfäste.....	Angle bracket.....			
85	2	2		9847-8009-16	Skruv.....	Screw.....			
91	1	1		1136-0333-01	Stöd.....	Support.....			
92	2	2		9997-0614-16	Skruv.....	Screw.....			
93	2	2		9739-0631-22	Mutter.....	Nut.....			
94	2	2		9997-0614-16	Skruv.....	Screw.....			
95	2	2		9739-0631-22	Mutter.....	Nut.....			


X

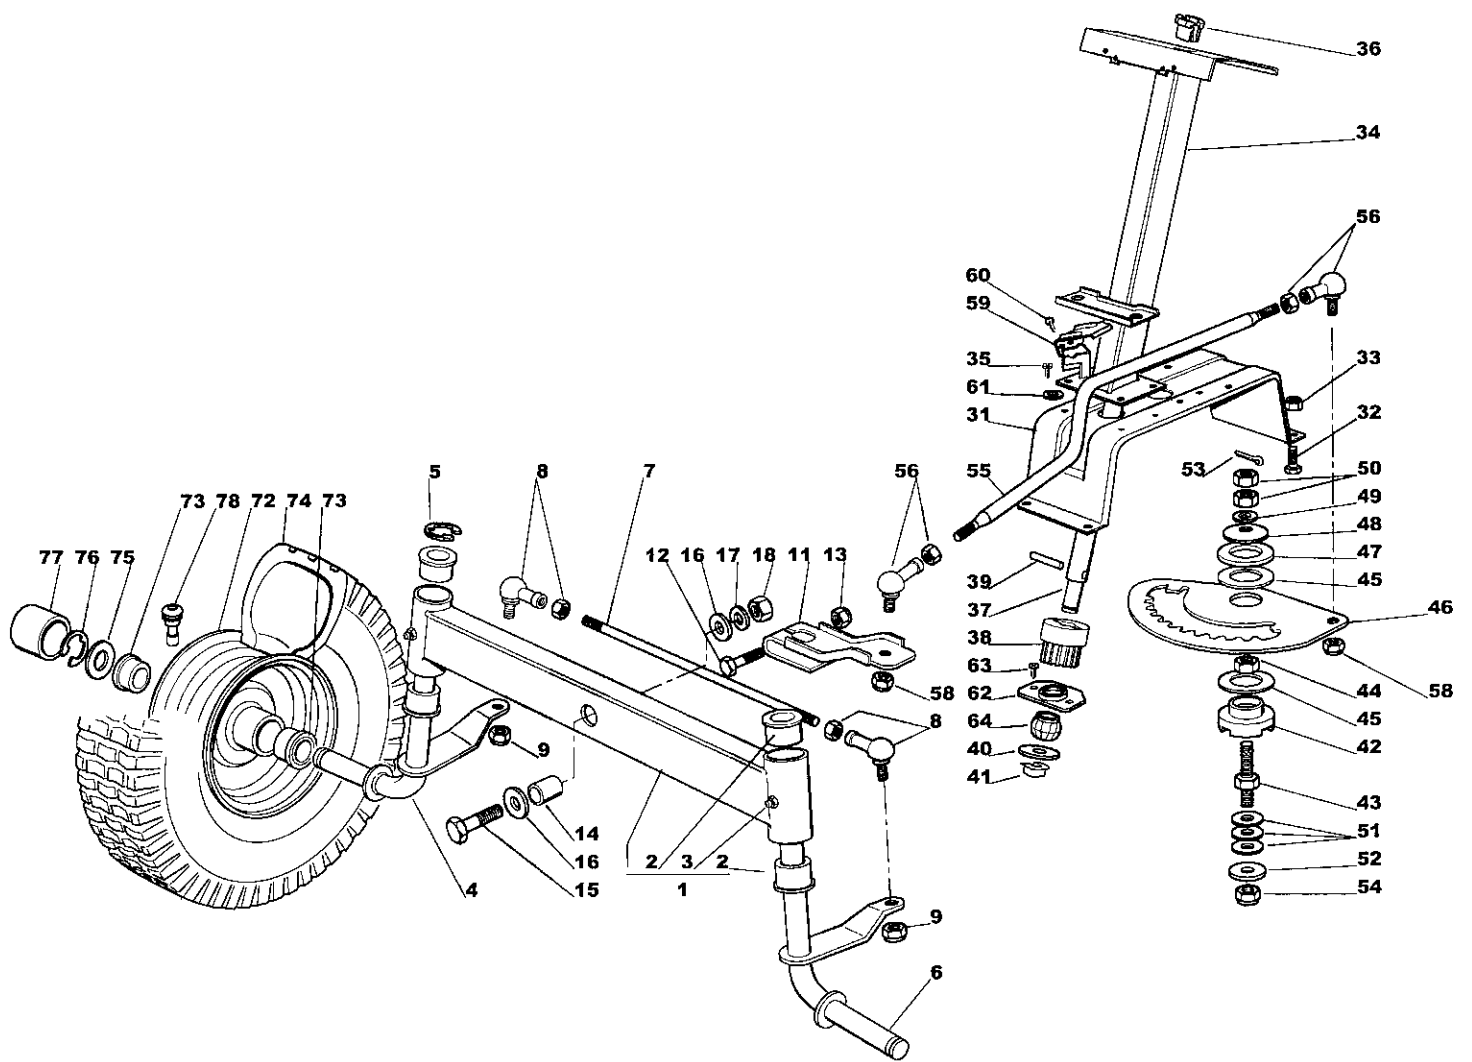


Utgåva Issue		Bildnr Picture No		ESTATE BASIC ESTATE TORNADO ESTATE TORNADO HST STYRNING		ESTATE BASIC ESTATE TORNADO ESTATE TORNADO HST STEERING		Sida Page
2006-13		1213C						70
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2546	2547	2572					
1	1	1	1	1136-0466-01	Framaxel kpl.....	Front wheel axle assy.....		Inkl. pos 2, 3
2	4	4	4	1136-0121-01	• Bussning.....	• Bushing.....		
3	2	2	2	9501-0500-00	• Smörjnippel.....	• Grease joint.....		
4	1	1	1	1136-0485-01	Hjulspindel- hö.....	Stub axle- RH.....		
5	1	1	1	9652-0015-04	Låsring.....	Retaining ring.....		
6	1	1	1	1136-0486-01	Hjulspindel- vä.....	Stub axle- LH.....		
7	1	1	1	1136-0349-01	Parallellstag.....	Tie rod.....		
8	2	2	2	1136-0092-01	Kulled.....	Ball joint.....		
9	2	2	2	9747-1031-02	Låsmutter.....	Lock nut.....		
11	1	1	1	1136-0188-01	Styrarm.....	Steering arm.....		
12	1	1	1	9997-1055-12	Skruv.....	Screw.....		
13	1	1	1	9747-1031-02	Låsmutter.....	Lock nut.....		
14	1	1	1	1136-0165-01	Distans.....	Spacer.....		
15	1	1	1	9997-1260-02	Skruv.....	Screw.....		
16	2	2	2	1136-0016-01	Bricka.....	Washer.....		
17	1	1	1	9683-0055-02	Låsbricka.....	Lock washer.....		
18	1	1	1	9799-1231-02	Mutter.....	Nut.....		
31	1	1	1	1136-0335-01	Stöd.....	Support.....		
32	4	4	4	9997-0816-16	Skruv.....	Screw.....		
33	4	4	4	9747-0831-02	Mutter.....	Lock nut.....		
34	1	1	1	1136-1496-01	Fäste.....	Support.....		
35	4	4	4	9847-8216-16	Skruv.....	Screw.....		
36	1	1	1	1136-1469-01	Bussning.....	Bushing.....		
37	1	1	1	1136-1471-01	Rattstång.....	Steering column.....		
38	1	1	1	1136-0263-02	Styrdrev.....	Steering pinion.....		
39	1	1	1	9595-0262-00	Spännstift.....	Locating pin.....		
40	1	1	1	9699-0037-02	Bricka.....	Washer.....		
41	1	1	1	1136-0008-01	Låsplatta.....	Lock plate.....		
42	1	1	1	1136-0128-01	Bussning.....	Bushing.....		
43	1	1	1	1136-0246-01	Pinnbult.....	Stud bolt.....		
44	1	1	1	9799-1031-02	Mutter.....	Nut.....		
45	2	2	2	1136-0310-01	Bricka.....	Washer.....		
46	1	1	1	1136-0320-01	Styrsektor.....	Steering sector.....		
47	1	1	1	1136-0311-01	Bricka.....	Washer.....		
48	1	1	1	1136-0083-01	Fjäderbricka.....	Elastic washer.....		
49	1	1	1	9699-0035-02	Planbricka.....	Flat washer.....		
50	2	2	2	9799-1031-02	Mutter.....	Nut.....		
51	3	3	3	1136-0087-01	Bricka.....	Washer.....		
52	1	1	1	1136-0015-01	Bricka.....	Washer.....		
53	1	1	1	9599-0070-02	Saxsprint.....	Split pin.....		
54	1	1	1	9747-1031-02	Låsmutter.....	Lock nut.....		
55	1	1	1	1136-0111-01	Styrstag.....	Steering rod.....		
56	2	2	2	1136-0092-01	Kulled.....	Ball joint.....		
58	2	2	2	9747-1031-02	Låsmutter.....	Lock nut.....		
59		1		1136-0279-01	Brytarskydd.....	Micro protection.....		
60		2		9847-7813-16	Skruv.....	Screw.....		
61	2	2	2	9699-0035-02	Planbricka.....	Flat washer.....		
62	1	1	1	1136-1477-01	Stöd.....	Support.....		
63	2	2	2	9847-8116-16	Skruv.....	Screw.....		
64	1	1	1	1136-1473-01	Länk.....	Joint.....		
72	2	2	2	1136-0454-01	Fälg.....	Rim.....		
73	4	4	4	1136-0157-01	Lager.....	Bearing.....		
74			2	1136-0269-01	Däck (Turf Saver).....	Tire (Turf Saver).....		
74			2	1136-0271-01	Däck (Deli).....	Tire (Deli).....		
74	2	2		1136-2133-01	Däck (Kenda).....	Tire (Kenda).....		
75	2	2	2	1136-0305-01	Bricka.....	Washer.....		
76	2	2	2	9652-0015-04	Låsring.....	Retaining ring.....		
77	2	2	2	1136-0081-01	Navkapsel.....	Hub cap.....		
78	2	2	2	9545-0500-00	Ventil.....	Valve.....		

X

X

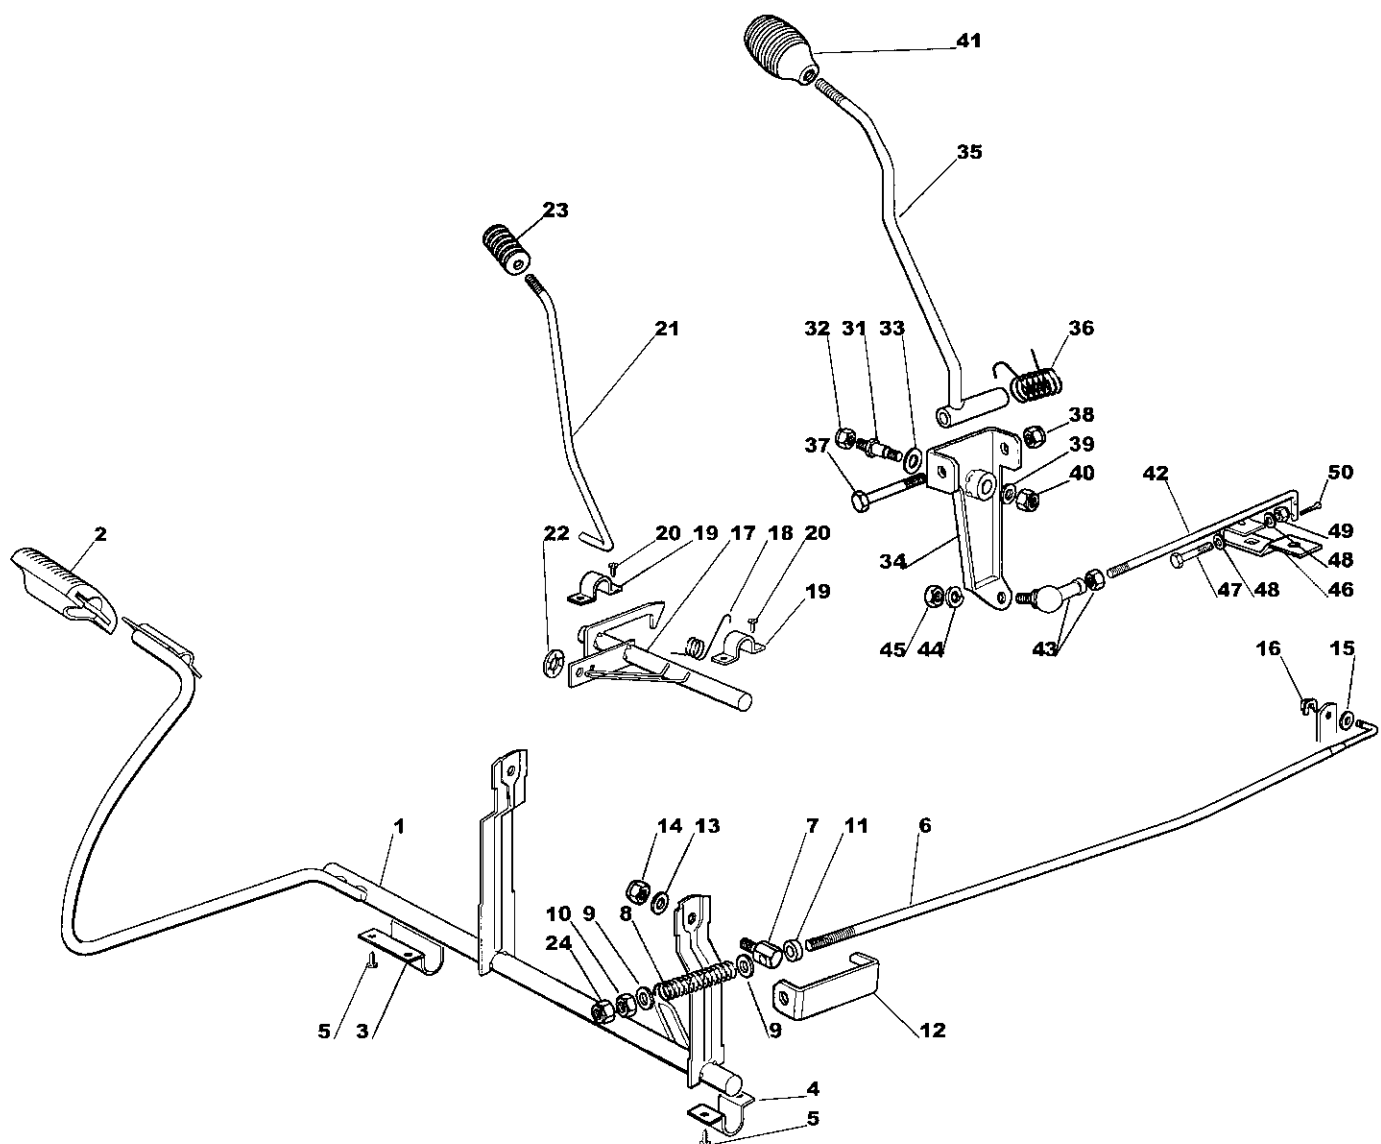


Utgåva Issue  2006-13		Bildnr Picture No  1214A		ESTATE BASIC ESTATE TORNADO BROMSREGLAGE VÄXELREGLAGE		ESTATE BASIC ESTATE TORNADO BRAKE CONTROL GEAR SHIFTER CONTROL		Sida Page  72	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2572	2546							
1	1			1136-0506-01	Bromspedal .....	Brake pedal .....			
2	1			1136-0152-01	Pedalskydd .....	Pedal cover .....			
3	1			1136-0254-01	Bygel .....	Clamp .....			
4	1			1136-0255-01	Bygel .....	Clamp .....			
5	6			9847-8016-16	Skruv .....	Screw .....			
6	1			1136-0116-01	Bromsstång .....	Brake rod .....			
7	1			1136-0244-01	Ledbult .....	Pivot bolt .....			
8	1			1136-0218-01	Fjäder .....	Spring .....			
9	2			9699-0035-02	Planbricka .....	Flat washer .....			
10	1			9799-1031-02	Mutter .....	Nut .....			
11	1			1136-0172-01	Distans .....	Spacer .....			
12	1			1136-0329-01	Bygel .....	Clamp .....			
13	1			9699-0060-02	Planbricka .....	Flat washer .....			
14	1			9747-0631-02	Låsmutter .....	Lock nut .....			
15	1			9699-0090-02	Planbricka .....	Flat washer .....			
16	1			1136-0009-01	Låsplatta .....	Lock plate .....			
17	1			1136-0441-01	Spärraxel .....	Axle .....			
18	1			1136-0217-01	Fjäder .....	Spring .....			
19	2			1136-0256-01	Bygel .....	Plate .....			
20	4			9847-8016-16	Skruv .....	Screw .....			
21	1			1136-0119-01	P- bromsarm .....	P- brake lever .....			
22	1			9675-0011-00	Starlock .....	Starlock .....			
23	1			1136-0392-01	Knopp .....	Knob .....			
24	1			9747-1031-02	Låsmutter .....	Lock nut .....			
31	1			1136-0233-01	Pinnbult .....	Stud bolt .....			
32	1			9712-0831-02	Låsmutter .....	Lock nut .....			
33	1			1136-0088-01	Bricka .....	Washer .....			
34	1			1136-0529-01	Spakhållare .....	Gear lever bracket .....			
35	1			1136-0490-01	Växelspak .....	Gear lever .....			
36	1			1136-0212-01	Fjäder .....	Spring .....			
37	1			9997-0880-16	Skruv .....	Screw .....			
38	1			9747-0831-02	Mutter .....	Lock nut .....			
39	1			9699-0056-02	Planbricka .....	Flat washer .....			
40	1			9712-0831-02	Låsmutter .....	Lock nut .....			
41	1			1136-0197-01	Handtag .....	Knob .....			
42	1			1136-0107-01	Växelstag .....	Shifter rod .....			
43	1			1136-0093-01	Kulled .....	Ball joint .....			
44	1			9683-0030-02	Låsbricka .....	Lock washer .....			
45	1			9799-0831-02	Mutter .....	Nut .....			
46	1			1136-0187-01	Växelarm .....	Gearshift arm .....			
47	1			9997-0640-12	Skruv .....	Screw .....			
48	2			9699-0035-02	Planbricka .....	Flat washer .....			
49	1			9747-0631-02	Låsmutter .....	Lock nut .....			
50	1			9599-0070-02	Saxsprint .....	Split pin .....			

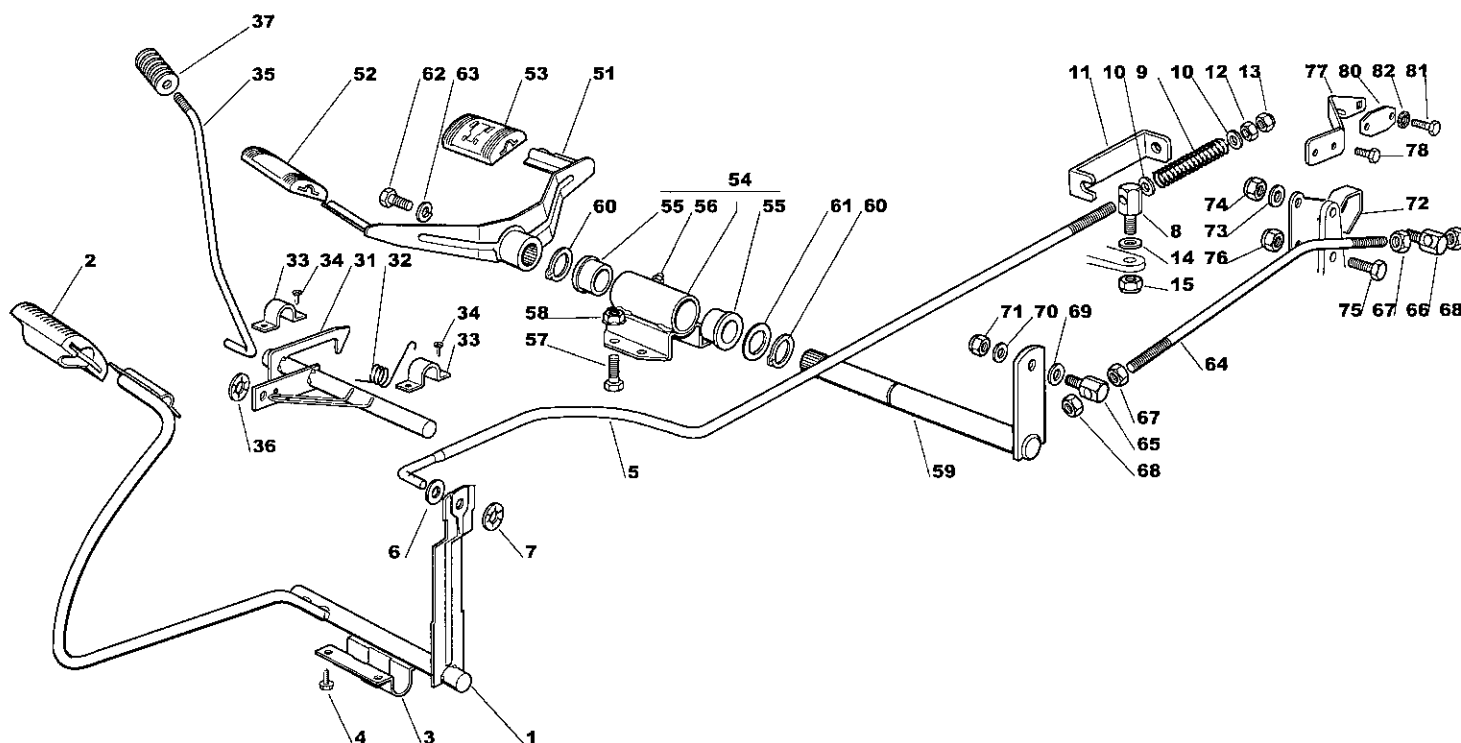





Utgåva Issue		Bildnr Picture No		ESTATE TORNADO HST BROMSREGLAGE DRIVREGLAGE		ESTATE TORNADO HST BRAKE CONTROL DRIVE CONTROL		Sida Page
2006- 13		1215B						74
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2547							
1	1			1136-0510-01	Pedal .....	Pedal .....		Inkl. pos 55 - 56
2	1			1136-0151-01	Pedalskydd .....	Pedal cover .....		
3	1			1136-0254-01	Bygel .....	Clamp .....		
4	4			9847-8016-16	Skruv .....	Screw .....		
5	1			1136-0117-01	Bromsstång .....	Brake rod .....		
6	1			9699-0090-02	Planbricka .....	Flat washer .....		
7	1			9675-0012-02	Starlock .....	Locking washer .....		
8	1			1136-0248-01	Ledbult .....	Pivot bolt .....		
9	1			1136-0218-01	Fjäder .....	Spring .....		
10	2			9699-0035-02	Planbricka .....	Flat washer .....		
11	1			1136-0329-01	Bygel .....	Clamp .....		
12	1			9799-1031-02	Mutter .....	Nut .....		
13	1			9747-1031-02	Låsmutter .....	Lock nut .....		
14	1			9699-0090-02	Planbricka .....	Flat washer .....		
15	1			9747-0831-02	Mutter .....	Lock nut .....		
31	1			1136-0441-01	Spärraxel .....	Axle .....		
32	1			1136-0217-01	Fjäder .....	Spring .....		
33	2			1136-0256-01	Bygel .....	Plate .....		
34	4			9847-8016-16	Skruv .....	Screw .....		
35	1			1136-0119-01	P- bromsarm .....	P- brake lever .....		
36	1			9675-0011-00	Starlock .....	Starlock .....		
37	1			1136-0392-01	Knopp .....	Knob .....		
51	1			1136-0507-01	Drivpedal .....	Drive pedal .....		
52	1			1136-0149-01	Pedalskydd- fram .....	Pedal cover- front .....		
53	1			1136-0150-01	Pedalskydd- bak .....	Pedal cover- rear .....		
54	1			1136-1495-01	Fäste kpl .....	Support assy .....		
55	2			1136-0121-01	• Bussning .....	• Bushing .....		
56	1			9501-0500-00	• Smörjnippel .....	• Grease joint .....		
57	2			9997-0616-16	Skruv .....	Screw .....		
58	2			9739-0631-22	Mutter .....	Nut .....		
59	1			1136-0500-01	Pedalaxel .....	Pedal axle .....		
60	2			9650-0020-04	Spårring .....	Circlip .....		
61	1			1136-0090-01	Bricka .....	Washer .....		
62	1			9997-0816-16	Skruv .....	Screw .....		
63	1			9683-0030-02	Låsbricka .....	Lock washer .....		
64	1			1136-0118-01	Stag .....	Drive rod .....		
65	1			1136-0241-01	Ledbult .....	Pivot bolt .....		
66	1			1136-0247-01	Ledbult .....	Pivot bolt .....		
67	2			9799-0831-02	Mutter .....	Nut .....		
68	2			9747-0831-02	Mutter .....	Lock nut .....		
69	1			9699-0035-02	Planbricka .....	Flat washer .....		
70	1			9699-0060-02	Planbricka .....	Flat washer .....		
71	1			9747-0631-02	Låsmutter .....	Lock nut .....		
72	1			1136-0533-01	Fäste .....	Support .....		
73	1			9699-0060-02	Planbricka .....	Flat washer .....		
74	1			9747-0631-02	Låsmutter .....	Lock nut .....		
75	1			9997-0620-16	Skruv .....	Screw .....		
76	1			9747-0631-02	Låsmutter .....	Lock nut .....		
77	1			1136-0330-01	Bygel .....	Clamp .....		
78	2			9848-8013-16	Skruv .....	Screw .....		
80	1			1136-0407-01	Plåt .....	Plate .....		
81	2			1136-1214-01	Skruv .....	Screw .....		
82	2			1136-0610-01	Bricka .....	Washer .....		

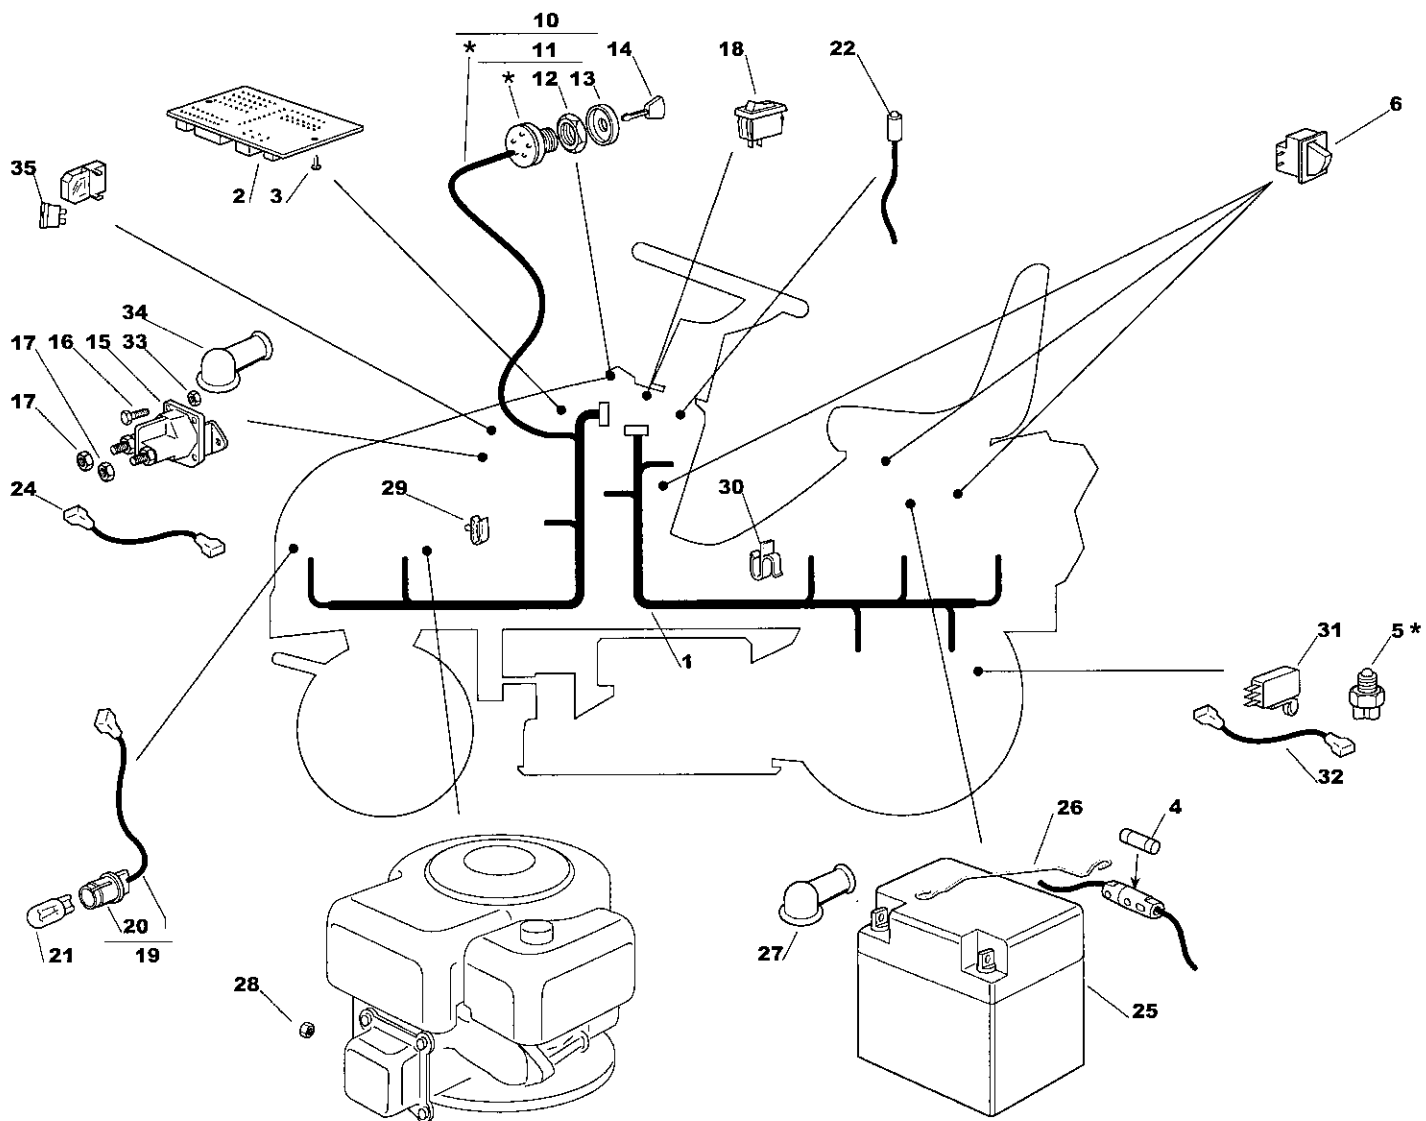


Utgåva Issue		Bildnr Picture No		ESTATE BASIC ESTATE TORNADO ESTATE TORNADO HST ELUTRUSTNING		ESTATE BASIC ESTATE TORNADO ESTATE TORNADO HST EL. EQUIPMENT		Sida Page
2006- 13		2076						76
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2546	2547	2572					
1	1	1	1	1136- 2170- 01	Kabelhärva.....	Cable harness .....		6.3 A Neutral  Inkl. pos 11 Inkl. pos 12 - 13   <

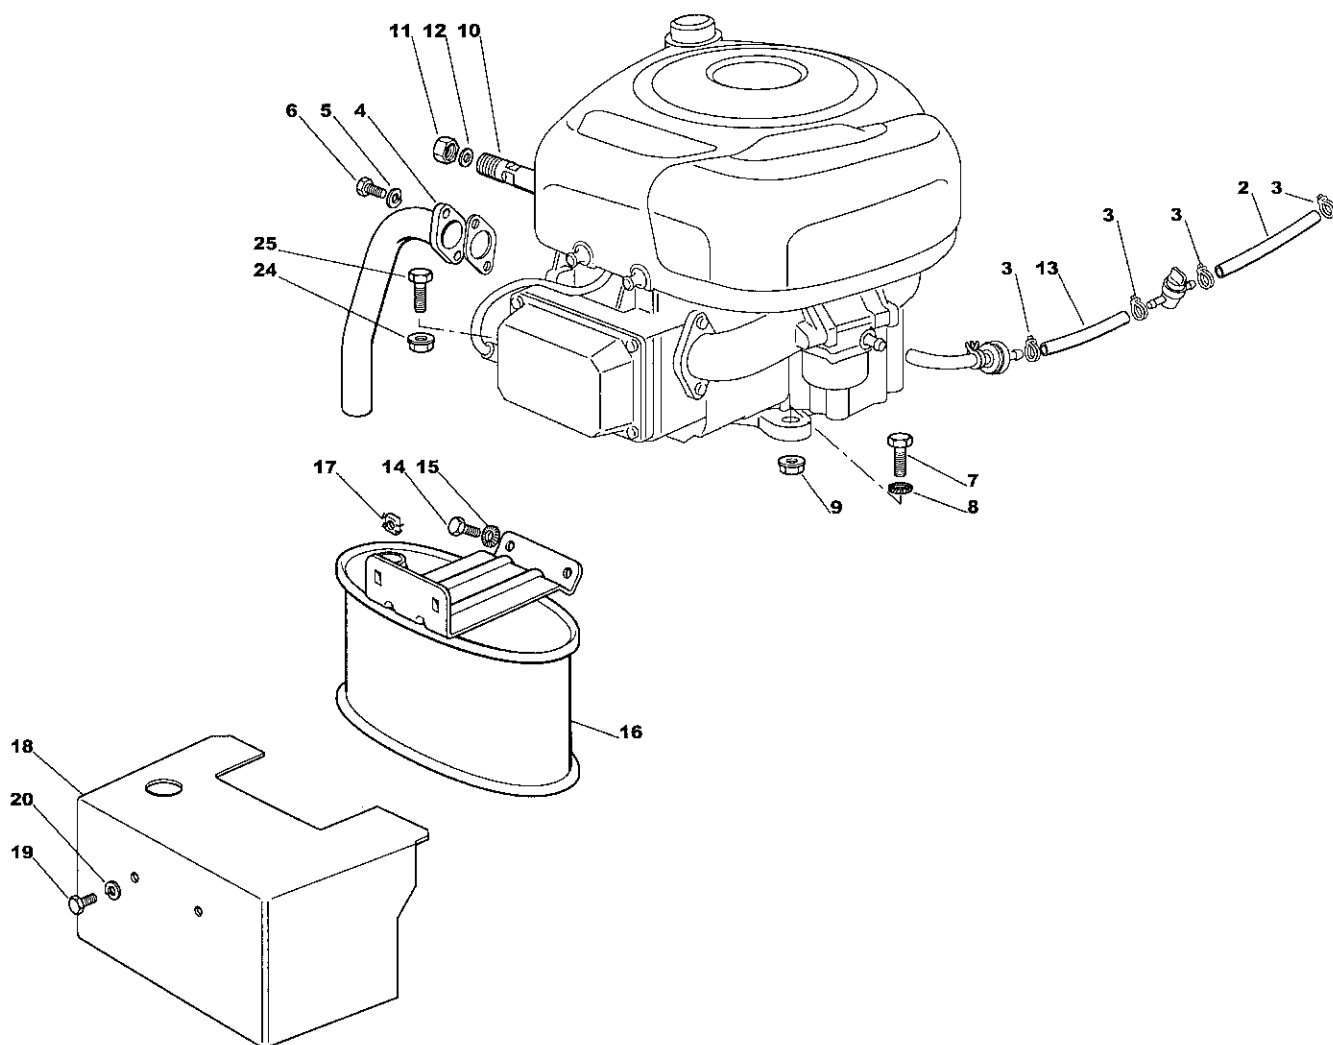

Utgåva Issue  2006- 13		Bildnr Picture No  1701A		ESTATE BASIC ESTATE TORNADO MOTOR (B&S 21A907)		ESTATE BASIC ESTATE TORNADO ENGINE (B&S 21A907)		Sida Page  78	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2572 2546								
2	1				1136- 1790- 01	Bränsleslang.....	Fuel hose.....		L = 40 mm
3	4				1136- 0045- 01	Slangklämma.....	Hose clamp.....		
4	1				1136- 1467- 01	Avgasrör.....	Exhaust tube.....		
5	2				9683- 0030- 02	Låsbricka.....	Lock washer.....		
6	2				9988- 3619- 16	Skruv.....	Screw.....		
7	1				9997- 0840- 16	Skruv.....	Screw.....		
8	1				9677- 0009- 02	Låsbricka.....	Lock washer.....		
9	1				9739- 0831- 22	Mutter.....	Nut.....		
10	1				1136- 0273- 01	Oljeavtappningsrör.....	Oil drain tube.....		
11	1				1136- 0066- 01	Oljeavtappningsplugg.....	Oil drain plug.....		
12	1				1136- 0054- 01	Tätningring.....	Oil seal.....		L = 35 mm
13	1				1136- 0353- 01	Bränsleslang.....	Fuel hose.....		
14	2				9997- 0820- 16	Skruv.....	Screw.....		
15	2				9677- 0009- 02	Låsbricka.....	Lock washer.....		
16	1				1136- 1054- 01	Ljuddämpare.....	Muffler.....		
17	2				1136- 0004- 01	Fyrkantmutter.....	Square nut.....		
18	1				1136- 1048- 01	Skydd.....	Guard.....		
19	2				9997- 0816- 16	Skruv.....	Screw.....		
20	2				9683- 0030- 02	Låsbricka.....	Lock washer.....		
24	3				9739- 0831- 22	Mutter.....	Nut.....		
25	3				9997- 0835- 12	Skruv.....	Screw.....		

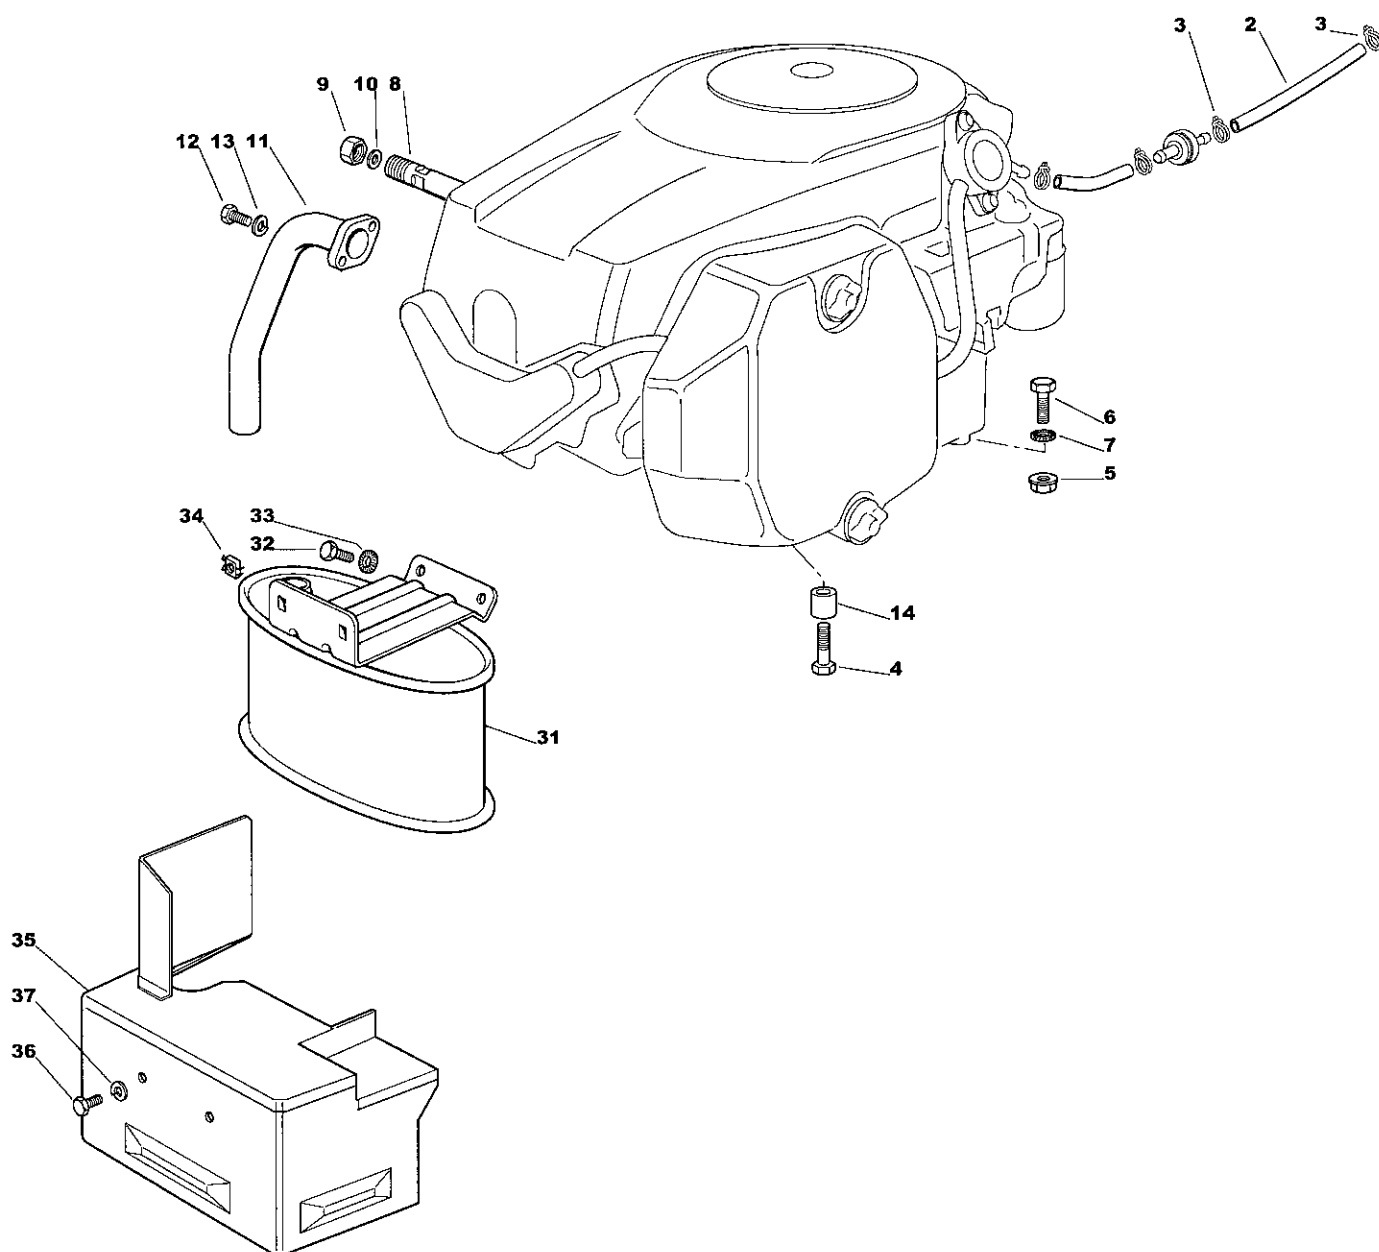


Utgåva Issue 2006-13		Bildnr Picture No 1863A		ESTATE TORNADO HST MOTOR (Kohler)		ESTATE TORNADO HST ENGINE (Kohler)		Sida Page 80	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2547								
2	1				1136-0354-01	Bränsleslang.....	Fuel hose.....		
3	2				1136-0045-01	Slangklämma.....	Hose clamp.....		
4	3				1136-2051-01	Skruv.....	Screw.....		
5	1				9739-0831-22	Mutter.....	Nut.....		
6	1				9997-0840-16	Skruv.....	Screw.....		
7	1				9677-0009-02	Låsbricka.....	Lock washer.....		
8	1				1136-0413-01	Oljeavtappningsrör.....	Oil drain pipe.....		
9	1				1136-0066-01	Oljeavtappningsplugg.....	Oil drain plug.....		
10	1				1136-0054-01	Tätningring.....	Oil seal.....		
11	1				1136-1780-01	Avgasrör.....	Exhaust tube.....		
12	2				9988-3619-16	Skruv.....	Screw.....		
13	2				9683-0030-02	Låsbricka.....	Lock washer.....		
14	3				1136-2097-01	Distans.....	Spacer.....		
31	1				1136-1054-01	Ljuddämpare.....	Muffler.....		
32	2				9997-0820-16	Skruv.....	Screw.....		
33	2				9677-0009-02	Låsbricka.....	Lock washer.....		
34	2				1136-0004-01	Fyrkantmutter.....	Square nut.....		
35	1				1136-1812-01	Skydd.....	Guard.....		
36	2				9997-0816-16	Skruv.....	Screw.....		
37	2				9683-0030-02	Låsbricka.....	Lock washer.....		

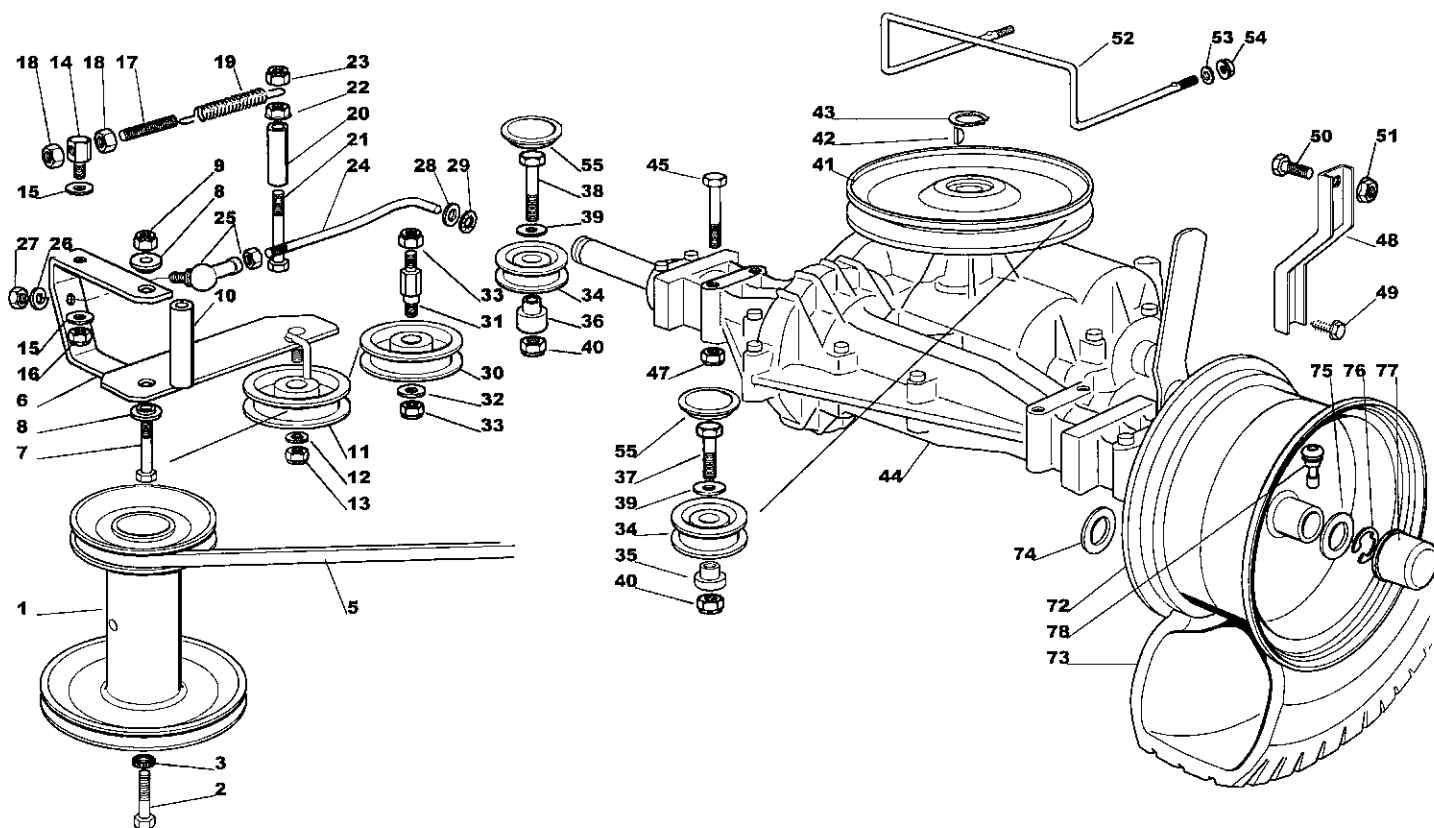



Utgåva Issue 2006-13		Bildnr Picture No 1217		ESTATE BASIC ESTATE TORNADO TRANSMISSION		ESTATE BASIC ESTATE TORNADO TRANSMISSION		Sida Page 82
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2546	2572						
1	1	1		1136-0286-01	Motorremskiva .....	Engine belt pulley .....		Peerless MST 205-535
2	1	1		9987-5351-12	Skruv .....	Screw .....		
3	1	1		9683-0045-02	Bricka .....	Washer .....		
5	1	1		1136-0433-01	Kilrem .....	V-belt .....		
6	1	1		1136-0489-01	Spännarm .....	Tension arm .....		
7	1	1		9997-0630-12	Skruv .....	Screw .....		
8	2	2		1136-0123-01	Bussning .....	Bushing .....		
9	1	1		9747-0831-02	Mutter .....	Lock nut .....		
10	1	1		1136-0166-01	Distans .....	Spacer .....		
11	1	1		1136-0289-01	Spännrulle .....	Idler pulley .....		
12	1	1		9699-0056-02	Planbricka .....	Flat washer .....		
13	1	1		9747-0831-02	Mutter .....	Lock nut .....		
14	1	1		1136-0235-01	Ledbult .....	Pivot bolt .....		
15	2	2		1136-0309-01	Bricka .....	Washer .....		
16	1	1		9747-0831-02	Mutter .....	Lock nut .....		
17	1	1		1136-0348-01	Spännstång .....	Tie rod .....		
18	2	2		9799-0831-02	Mutter .....	Nut .....		
19	1	1		1136-0208-01	Fjäder .....	Spring .....		
20	1	1		1136-0162-01	Distans .....	Spacer .....		
21	1	1		9997-0880-16	Skruv .....	Screw .....		
22	1	1		9739-0831-22	Mutter .....	Nut .....		
23	1	1		9747-0831-02	Mutter .....	Lock nut .....		
24	1	1		1136-0346-01	Spännstång .....	Tie rod .....		
25	1	1		1136-0093-01	Kulled .....	Ball joint .....		
26	1	1		9683-0030-02	Låsbricka .....	Lock washer .....		
27	1	1		9799-0831-02	Mutter .....	Nut .....		
28	1	1		9699-0090-02	Planbricka .....	Flat washer .....		
29	1	1		9675-0012-02	Starlock .....	Locking washer .....		
30	1	1		1136-0290-01	Remrulle .....	Belt roller .....		
31	1	1		1136-0234-01	Pinnbult .....	Stud bolt .....		
32	1	1		9699-0056-02	Planbricka .....	Flat washer .....		
33	2	2		9747-0831-02	Mutter .....	Lock nut .....		
34	2	2		1136-0915-01	Remrulle .....	Belt roller .....		
35	1	1		1136-0167-01	Distans- vä .....	Spacer- LH .....		
36	1	1		1136-0164-01	Distans- hö .....	Spacer- RH .....		
37	1	1		9997-0835-12	Skruv .....	Screw .....		
38	1	1		9997-0845-12	Skruv .....	Screw .....		
39	2	2		9699-0056-02	Planbricka .....	Flat washer .....		
40	2	2		9747-0831-02	Mutter .....	Lock nut .....		
41	1	1		1136-0520-01	Remskiva .....	Belt pulley .....		
42	1	1		9600-0050-00	Woodruffkil .....	Key .....		
43	1	1		9650-0016-04	Spärring .....	Lock ring .....		
44	1	1		1136-0050-01	Transaxel .....	Transaxle .....		
45	4	4		9997-0860-16	Skruv .....	Screw .....		
47	4	4		9739-0831-22	Mutter .....	Nut .....		
48	2	2		1136-0325-01	Momentstag .....	Stay .....		
49	2	2		1136-0017-01	Skruv .....	Screw .....		
50	2	2		9997-0816-16	Skruv .....	Screw .....		
51	2	2		9739-0831-22	Mutter .....	Nut .....		
52	1	1		1136-0181-01	Remstyrning .....	Belt guide .....		
53	4	4		9699-0035-02	Planbricka .....	Flat washer .....		
54	2	2		9747-0831-02	Mutter .....	Lock nut .....		
55	2	2		1136-0868-01	Lock .....	Cover .....		
72	2	2		1136-0455-01	Fälg .....	Rim .....		
73		2		1136-0270-01	Däck (Turf Saver) .....	Tire (Turf Saver) .....		
73		2		1136-0272-01	Däck (Deli) .....	Tire (Deli) .....		
73	2			1136-2132-01	Däck (Kenda) .....	Tire (Kenda) .....		
74	2-4	2-4		9699-0119-02	Bricka .....	Washer .....		
75	2	2		1136-0305-01	Bricka .....	Washer .....		
76	2	2		9652-0015-04	Låsring .....	Retaining ring .....		
77	2	2		1136-0081-01	Navkapsel .....	Hub cap .....		
78	2	2		9545-0500-00	Ventil .....	Valve .....		

Peerless MST 205-535

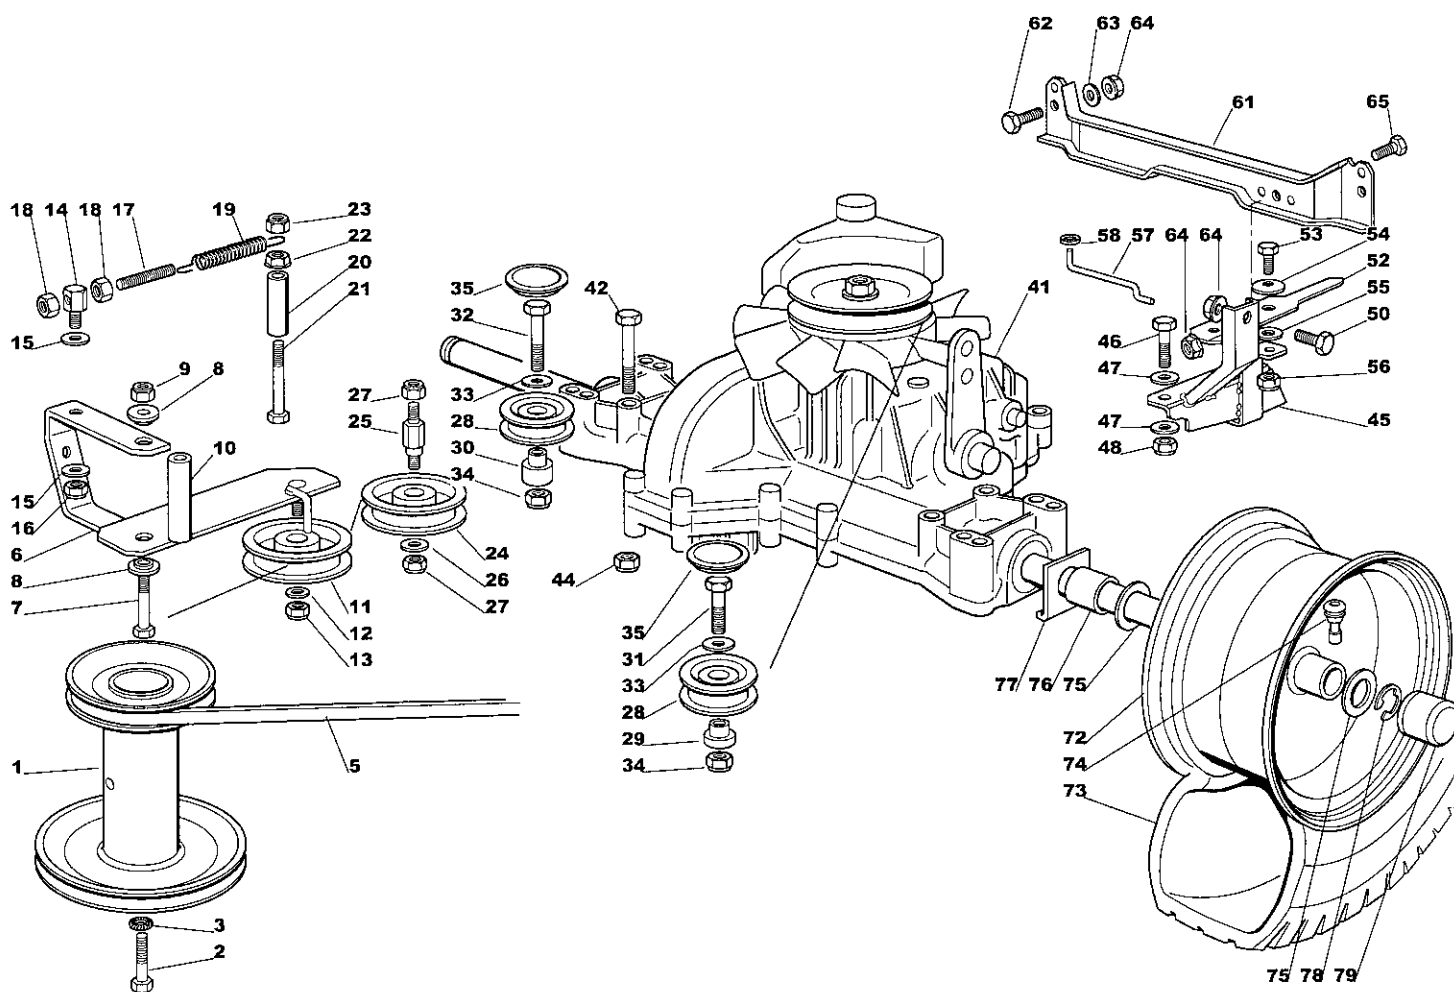


Utgåva Issue		Bildnr Picture No		ESTATE TORNADO HST TRANSMISSION		ESTATE TORNADO HST TRANSMISSION		Sida Page
2006-13		1564						84
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2547							
1	1			1136-0287-01	Motorremskiva .....	Engine belt pulley .....		
2	1			9987-5351-12	Skruv .....	Screw .....		
3	1			9683-0045-02	Bricka .....	Washer .....		
5	1			1136-0432-01	Kilrem .....	V- belt .....		
6	1			1136-0489-01	Spännarm .....	Tension arm .....		
7	1			9997-0630-12	Skruv .....	Screw .....		
8	2			1136-0123-01	Bussning .....	Bushing .....		
9	1			9747-0831-02	Mutter .....	Lock nut .....		
10	1			1136-0166-01	Distans .....	Spacer .....		
11	1			1136-0289-01	Spännrulle .....	Idler pulley .....		
12	1			9699-0056-02	Planbricka .....	Flat washer .....		
13	1			9747-0831-02	Mutter .....	Lock nut .....		
14	1			1136-0235-01	Ledbult .....	Pivot bolt .....		
15	2			1136-0309-01	Bricka .....	Washer .....		
16	1			9747-0831-02	Mutter .....	Lock nut .....		
17	1			1136-0348-01	Spännstång .....	Tie rod .....		
18	2			9799-0831-02	Mutter .....	Nut .....		
19	1			1136-0208-01	Fjäder .....	Spring .....		
20	1			1136-0162-01	Distans .....	Spacer .....		
21	1			9997-0880-16	Skruv .....	Screw .....		
22	1			9739-0831-22	Mutter .....	Nut .....		
23	1			9747-0831-02	Mutter .....	Lock nut .....		
24	1			1136-0290-01	Remrulle .....	Belt roller .....		
25	1			1136-0234-01	Pinnbult .....	Stud bolt .....		
26	1			9699-0056-02	Planbricka .....	Flat washer .....		
27	2			9747-0831-02	Mutter .....	Lock nut .....		
28	2			1136-0915-01	Remrulle .....	Belt roller .....		
29	1			1136-0174-01	Distans- vä .....	Spacer- LH .....		
30	1			1136-0170-01	Distans- hö .....	Spacer- RH .....		
31	1			9997-0840-16	Skruv .....	Screw .....		
32	1			9997-0850-16	Skruv .....	Screw .....		
33	2			9699-0056-02	Planbricka .....	Flat washer .....		
34	2			9747-0831-02	Mutter .....	Lock nut .....		
35	2			1136-0868-01	Lock .....	Cover .....		
41	1			1136-0053-01	Transaxel .....	Transaxle .....		Kanzaki K46S
42	4			9997-0860-16	Skruv .....	Screw .....		
44	4			9739-0831-22	Mutter .....	Nut .....		
45	1			1136-1056-01	Stöd .....	Support .....		
46	1			9997-0845-12	Skruv .....	Screw .....		
47	2			9699-0090-02	Planbricka .....	Flat washer .....		
48	1			9747-0831-02	Mutter .....	Lock nut .....		
50	1			9997-0816-16	Skruv .....	Screw .....		
52	1			1136-0190-01	Arm .....	Lever .....		
53	1			9997-0820-16	Skruv .....	Screw .....		
54	1			1136-0006-01	Fjäderbricka .....	Elastic washer .....		
55	1			1136-0309-01	Bricka .....	Washer .....		
56	1			9747-0831-02	Mutter .....	Lock nut .....		
57	1			1136-0114-01	Stag .....	Rod .....		
58	1			9675-0009-02	Starlock .....	Starlock .....		
61	1			1136-0918-01	Förstärkning .....	Reinforcement .....		
62	2			1136-0821-01	Skruv .....	Screw .....		
63	2			9699-0090-02	Planbricka .....	Flat washer .....		
64	4			9739-0831-22	Mutter .....	Nut .....		
65	1			1136-0822-01	Skruv .....	Screw .....		
72	2			1136-0455-01	Fälg .....	Rim .....		
73	2			1136-2132-01	Däck (Kenda) .....	Tire (Kenda) .....		
74	2			9545-0500-00	Ventil .....	Valve .....		
75	4			9699-0119-02	Bricka .....	Washer .....		
76	2			1136-0175-01	Distans .....	Spacer .....		
77	2			1136-0312-01	Bricka .....	Washer .....		
78	2			9652-0015-04	Låsring .....	Retaining ring .....		
79	2			1136-0081-01	Navkapsel .....	Hub cap .....		

Kanzaki K46S



X



Utgåva Issue  2006- 13		Bildnr Picture No  1702		ESTATE BASIC ESTATE TORNADO ESTATE TORNADO HST AGGREGATSLYFT		ESTATE BASIC ESTATE TORNADO ESTATE TORNADO HST MOWER DECK LIFT		Sida Page  86	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2572	2546	2547						
1	1				1136-0487-01	Lyftspak kpl .....	Lift lever assy .....		Inkl. pos 2 - 9
2	1				1136-0493-01	• Lyftspak .....	• Lift lever .....		
3	1				1136-0298-01	• Tryckknapp .....	• Button .....		
4	1				1136-0222-01	• Spärrhake .....	• Dog .....		
5	1				1136-0227-01	• Sprint .....	• Pin .....		
6	1				1136-0105-01	• Tryckstäng .....	• Push rod .....		
7	1				1136-0193-01	• Handtag .....	• Handle .....		
8	1				1136-0203-01	• Fjäder .....	• Spring .....		
9	1				9675-0012-02	• Starlock .....	• Locking washer .....		
10	1				1136-0444-01	Lyftaxel .....	Axle .....		
11	2				1136-0078-01	Bussning .....	Bushing .....		
12	1				1136-0163-01	Distans .....	Spacer .....		
13	1				9699-0119-02	Bricka .....	Washer .....		
14	2				9595-0235-00	Spännstift .....	Locating pin .....		
15	1				1136-0319-01	Höjdställn.segment .....	Height adjust sector .....		
16	2				9997-0816-16	Skruv .....	Screw .....		
17	2				9739-0831-22	Mutter .....	Nut .....		
18	1				1136-0460-01	Lyftwire .....	Lift wire .....		
19	1				1136-0291-01	Wirerulle .....	Cable pulley .....		
20	1				1136-0232-01	Distans .....	Spacer .....		
21	1				9997-0850-16	Skruv .....	Screw .....		
22	1				9699-0056-02	Planbricka .....	Flat washer .....		
23	1				9739-0831-22	Mutter .....	Nut .....		
24	1				1136-0443-01	Lyftaxel .....	Lift axle .....		
25	2				1136-0253-01	Bygel .....	Clamp .....		
26	4				9997-0616-16	Skruv .....	Screw .....		
27	4				9739-0631-22	Mutter .....	Nut .....		
28	1				1136-0492-01	Lyftarm .....	Lift arm .....		
29	2				1136-0255-01	Bygel .....	Clamp .....		
30	4				9847-8016-16	Skruv .....	Screw .....		
31	1				1136-0108-01	Lyftstag .....	Lift rod .....		
32	1				1136-0235-01	Ledbult .....	Pivot bolt .....		
33	1				9799-0831-02	Mutter .....	Nut .....		
34	1				9747-0831-02	Mutter .....	Lock nut .....		
35	2				1136-0309-01	Bricka .....	Washer .....		
36	1				9747-0831-02	Mutter .....	Lock nut .....		
37	1				9699-0090-02	Planbricka .....	Flat washer .....		
38	1				1136-0095-01	Låsnål .....	Hair pin .....		
51	1				1136-0347-01	Lyftlänk .....	Lift tie rod .....		
52	1				1136-0231-01	Ledbult .....	Pivot bolt .....		
53	1				9699-0035-02	Planbricka .....	Flat washer .....		
54	1				1136-0308-01	Bricka .....	Washer .....		
55	1				1136-0095-01	Låsnål .....	Hair pin .....		
56	2				1136-0308-01	Bricka .....	Washer .....		
57	2				9747-1031-02	Låsmutter .....	Lock nut .....		
58	1				9799-1031-02	Mutter .....	Nut .....		
61	1				1136-0347-01	Lyftlänk .....	Lift tie rod .....		
62	1				1136-0231-01	Ledbult .....	Pivot bolt .....		
63	1				9699-0035-02	Planbricka .....	Flat washer .....		
64	1				1136-0308-01	Bricka .....	Washer .....		
65	1				1136-0095-01	Låsnål .....	Hair pin .....		
66	2				1136-0308-01	Bricka .....	Washer .....		
67	2				9747-1031-02	Låsmutter .....	Lock nut .....		
68	1				9799-1031-02	Mutter .....	Nut .....		
71	1				1136-0928-01	Spännlänk .....	Tie rod .....		
72	1				1136-0231-01	Ledbult .....	Pivot bolt .....		
73	2				1136-0308-01	Bricka .....	Washer .....		
74	2				9747-1031-02	Låsmutter .....	Lock nut .....		
75	1				9699-0035-02	Planbricka .....	Flat washer .....		
76	1				1136-0308-01	Bricka .....	Washer .....		
77	1				1136-0095-01	Låsnål .....	Hair pin .....		
78	1				9799-1031-02	Mutter .....	Nut .....		

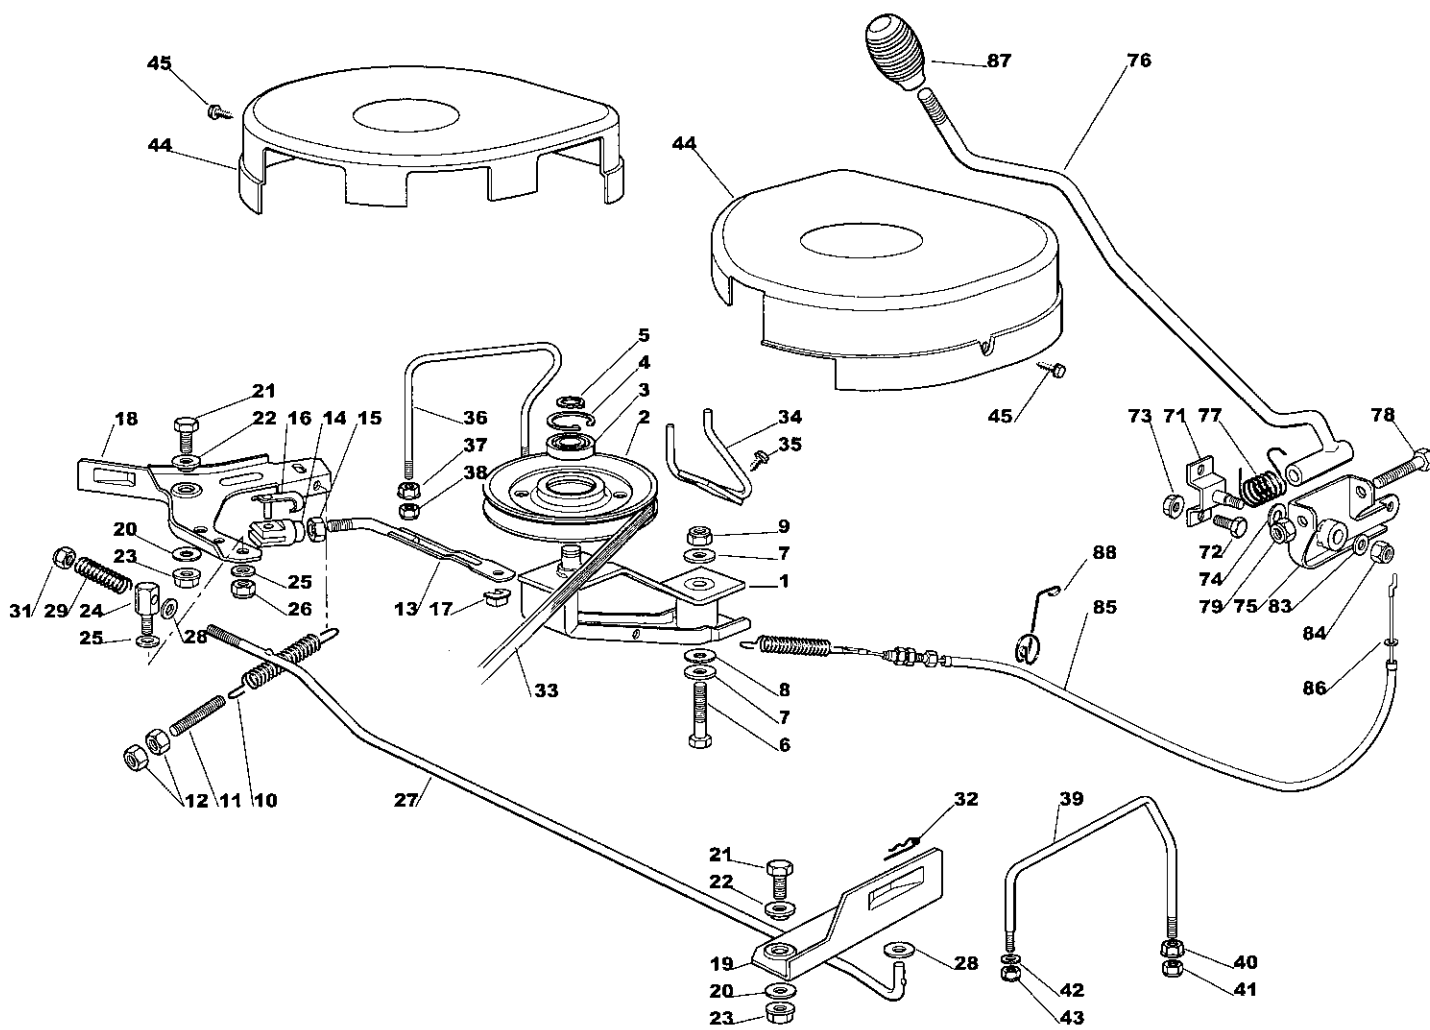

Utgåva Issue  2006-13		Bildnr Picture No  1448B		ESTATE BASIC ESTATE TORNADO ESTATE TORNADO HST AGGREGATSINKOPPLING		ESTATE BASIC ESTATE TORNADO ESTATE TORNADO HST MOWER DECK ENGAGEMENT		Sida Page  88	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2572	2546	2547						
1	1				1136-0494-01	Spännarm .....	Tension arm .....		
2	1				1136-0917-01	Remskiva .....	Pulley .....		
3	1				1136-0070-01	Kullager .....	Ball bearing .....		
4	1				9651-0035-04	Låsring .....	Lock ring .....		
5	1				9650-0015-04	Låsring .....	Lock ring .....		
6	1				9997-0890-12	Skruv .....	Screw .....		
7	2				1136-0014-01	Bricka .....	Washer .....		
8	1				1136-0089-01	Bricka .....	Washer .....		
9	1				9747-0831-02	Mutter .....	Lock nut .....		
10	1				1136-0859-01	Fjäder .....	Spring .....		
11	1				1136-0348-01	Spännstång .....	Tie rod .....		
12	2				9799-0831-02	Mutter .....	Nut .....		
13	1				1136-1797-01	Stag .....	Rod .....		
14	1				1136-0836-01	Gaffel .....	Fork .....		
15	1				9799-0831-02	Mutter .....	Nut .....		
16	1				1136-0835-01	Låsbult .....	Clip .....		
17	1				1136-0009-01	Låsplatta .....	Lock plate .....		
18	1				1136-0886-01	Arm- hö .....	Lever- RH .....		
19	1				1136-0885-01	Arm- vä .....	Lever- LH .....		
20	2				1136-0089-01	Bricka .....	Washer .....		
21	2				9997-0816-16	Skruv .....	Screw .....		
22	2				1136-0079-01	Bussning .....	Bushing .....		
23	2				9739-0831-22	Mutter .....	Nut .....		
24	1				1136-0904-01	Sprint .....	Pin .....		
25	2				1136-0309-01	Bricka .....	Washer .....		
26	1				9747-0831-02	Mutter .....	Lock nut .....		
27	1				1136-0862-01	Stång .....	Rod .....		
28	2				9699-0090-02	Planbricka .....	Flat washer .....		
29	1				1136-0895-01	Fjäder .....	Spring .....		
31	1				9739-0831-22	Mutter .....	Nut .....		
32	1				1136-0095-01	Låsnål .....	Hair pin .....		
33	1				1136-1022-01	Drivrem .....	Drive belt .....		
34	1				1136-0878-01	Remstyrning .....	Belt guide .....		
35	2				9847-8116-16	Skruv .....	Screw .....		
36	1				1136-0880-01	Remstyrning .....	Belt guide .....		
37	2				9739-0831-22	Mutter .....	Nut .....		
38	2				9747-0831-02	Mutter .....	Lock nut .....		
39	1				1136-0879-01	Remstyrning .....	Belt guide .....		
40	1				9739-0831-22	Mutter .....	Nut .....		
41	1				9747-0831-02	Mutter .....	Lock nut .....		
42	1				9699-0035-02	Planbricka .....	Flat washer .....		
43	1				9747-0631-02	Låsmutter .....	Lock nut .....		
44	2				1136-0864-01	Remkåpa .....	Belt cover .....		
45	4				9848-8013-16	Skruv .....	Screw .....		
71	1				1136-0537-01	Fäste .....	Support .....		
72	2				9997-0816-16	Skruv .....	Screw .....		
73	2				9739-0831-22	Mutter .....	Nut .....		
74	1				1136-0088-01	Bricka .....	Washer .....		
75	1				1136-0528-01	Spakhållare .....	Lever holder .....		
76	1				1136-0491-01	Inkopplingsspak .....	Engagement lever .....		
77	1				1136-0213-01	Fjäder .....	Spring .....		
78	1				9997-0880-16	Skruv .....	Screw .....		
79	1				9747-0831-02	Mutter .....	Lock nut .....		
83	1				9699-0056-02	Planbricka .....	Flat washer .....		
84	1				9712-0831-02	Låsmutter .....	Lock nut .....		
85	1				1136-1075-01	Inkopplingswire .....	Cable .....		
86	1				9699-0056-02	Planbricka .....	Flat washer .....		
87	1				1136-0197-01	Handtag .....	Knob .....		
88	1				1136-0957-01	Fjäder .....	Spring .....		

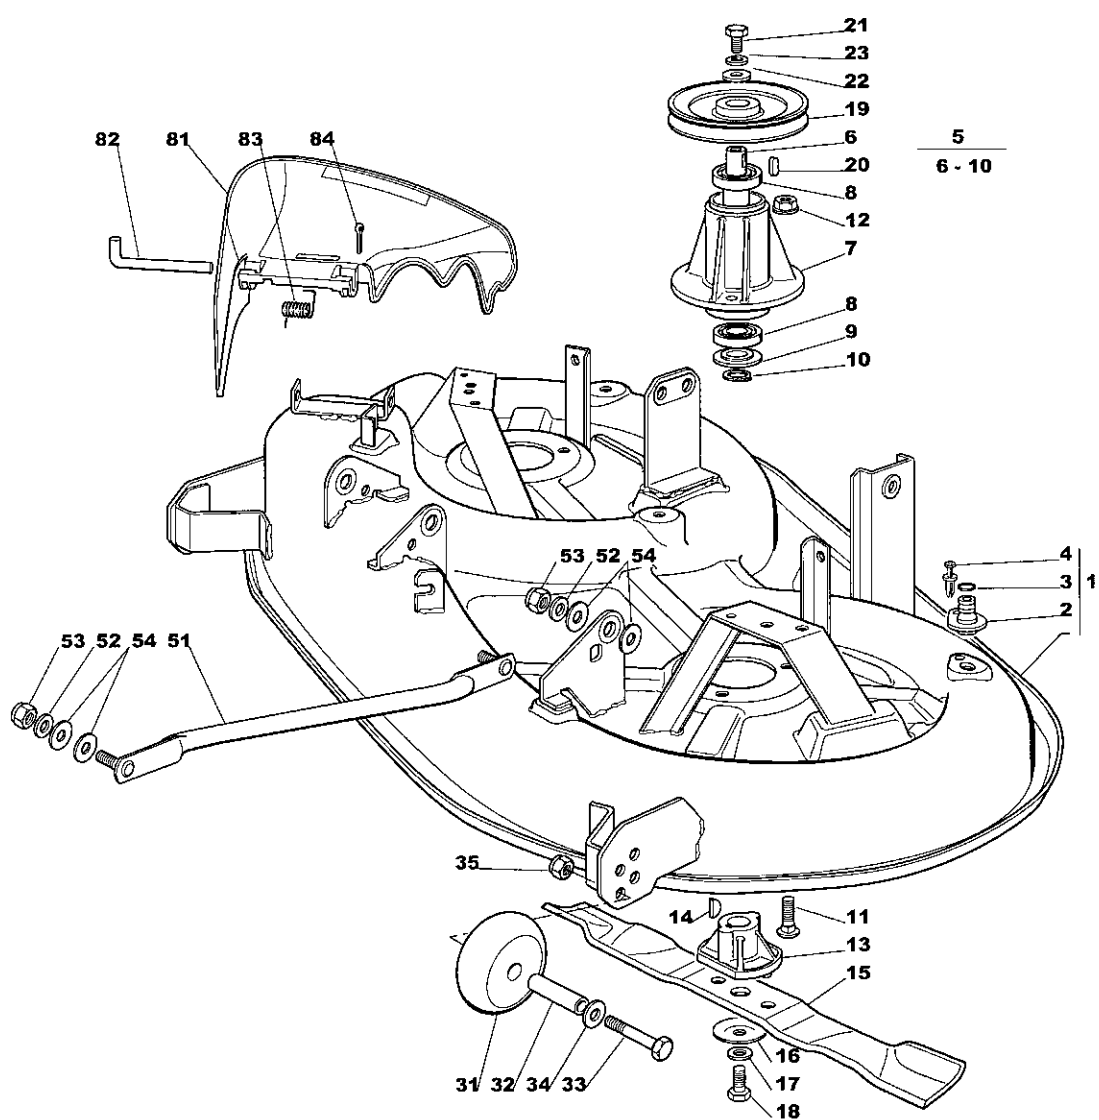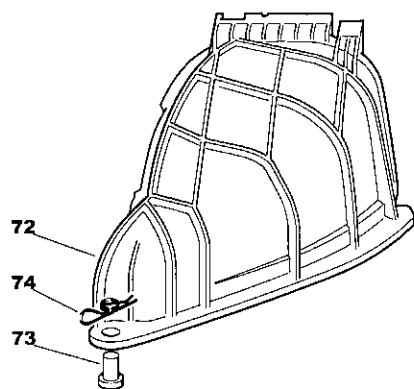



Utgåva Issue		Bildnr Picture No		ESTATE BASIC ESTATE TORNADO ESTATE TORNADO HST KLIPPAGGREGAT		ESTATE BASIC ESTATE TORNADO ESTATE TORNADO HST MOWER DECK		Sida Page
2006- 13		1449B						90
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2546 2547	2572						
1	1	1		1136- 1044- 01	Klippagggregatskåpa .....	Mower deck casing .....		Inkl. pos 2 - 4
2	2	2		1136- 0120- 01	• Vattenslangnippel .....	• Water hose connection.....		
3	2	2		1136- 0068- 01	• O- ring .....	• O- ring .....		
4	2	2		1136- 0012- 01	• Nit .....	• Rivet .....		
5	2	2		1136- 0481- 01	Lagerbox kpl .....	Bearing box assy .....		Inkl. pos 6 - 10
6	2	2		1136- 0099- 01	• Knivaxel .....	• Blade shaft .....		
8	4	4		1136- 0069- 01	• Kullager .....	• Ball bearing .....		
9	2	2		1136- 0176- 01	• Dammskydd .....	• Dust cover .....		
10	2	2		9650- 0020- 04	• Spårring .....	• Circlip .....		
11	6	6		9898- 0825- 16	Skruv .....	Screw .....		
12	6	6		9739- 0831- 22	Mutter .....	Nut .....		
13	2	2		1136- 0221- 01	Knivfäste .....	Blade hub .....		
14	2	2		9600- 0014- 00	Kil .....	Key .....		
15	2	2		1136- 1029- 01	Kniv .....	Blade .....		
16	2	2		1136- 0083- 01	Fjäderbricka .....	Elastic washer .....		
17	2	2		1136- 0015- 01	Bricka .....	Washer .....		
18	2	2		9987- 5238- 12	Knivbult .....	Blade bolt .....		
19	2	2		1136- 0916- 01	Remskiva .....	Pulley .....		
20	2	2		1136- 0001- 01	Kil .....	Key .....		
21	2	2		9997- 0820- 16	Skruv .....	Screw .....		
22	2	2		1136- 0307- 01	Bricka .....	Washer .....		
23	2	2		9683- 0030- 02	Låsbricka .....	Lock washer .....		
31	2	2		1136- 1052- 01	Stödhjul .....	Anti scalp wheel .....		
32	2	2		1136- 0901- 01	Distans .....	Spacer .....		
33	2	2		9997- 0880- 16	Skruv .....	Screw .....		
34	2	2		9699- 0056- 02	Planbricka .....	Flat washer .....		
35	2	2		9739- 0831- 22	Mutter .....	Nut .....		
51	2	2		1136- 0448- 01	Stång .....	Equalizer rod .....		
52	4	4		9699- 0035- 02	Planbricka .....	Flat washer .....		
53	4	4		9747- 1031- 02	Låsmutter .....	Lock nut .....		
54	8	8		1136- 0308- 01	Bricka .....	Washer .....		
72	1			1136- 1107- 01	Deflektor .....	Deflector .....		
73	1			1136- 0229- 01	Sprint .....	Pin .....		
74	1			9598- 0002- 02	Låsnål .....	Pin lock .....		
81	1	1		1136- 0910- 01	Utkastskydd .....	Discharge protection .....		
82	1	1		1136- 0902- 01	Axel .....	Pivot .....		
83	1	1		1136- 0894- 01	Fjäder .....	Spring .....		
84	1	1		9599- 0070- 02	Saxsprint .....	Split pin .....		