 
 
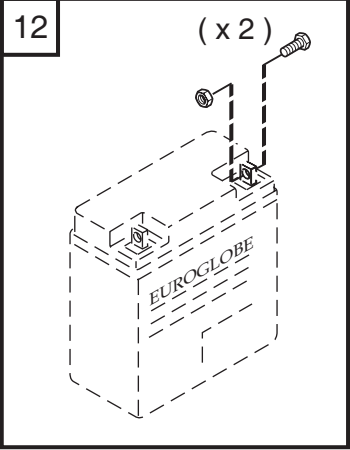 
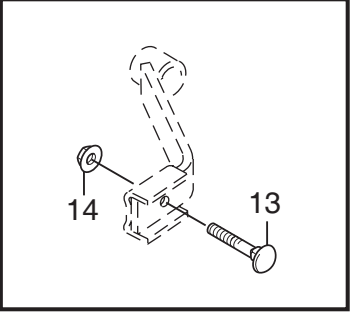 
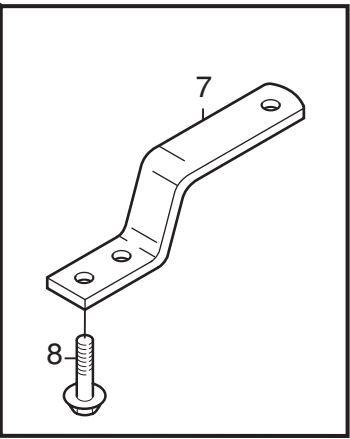 
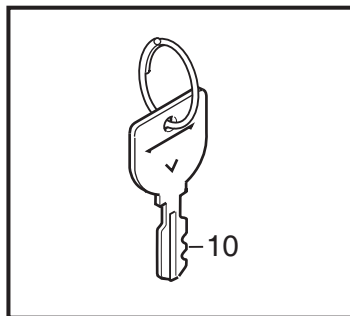 
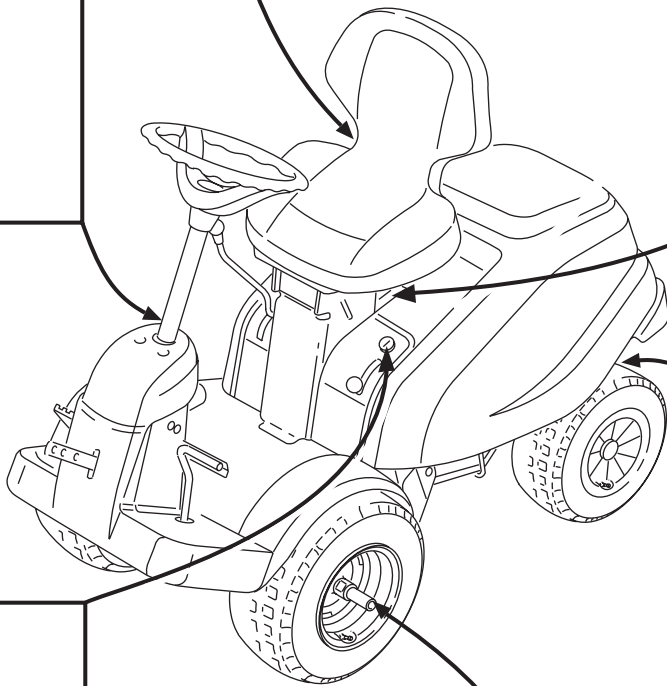 
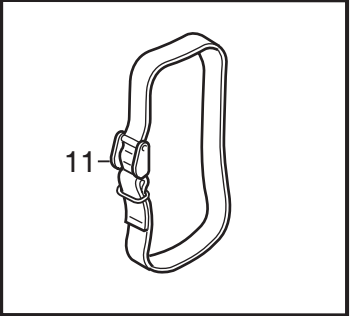 
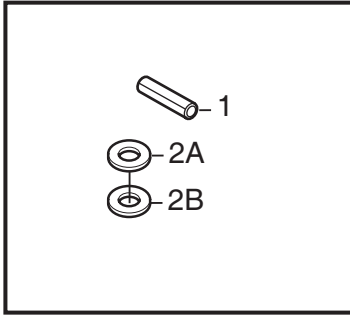 


# Genuine Spare Parts

 
---

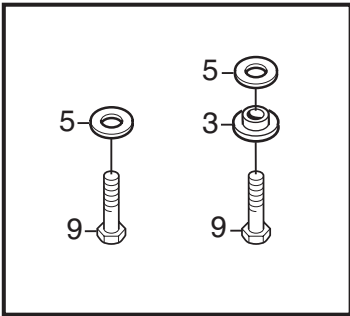


21

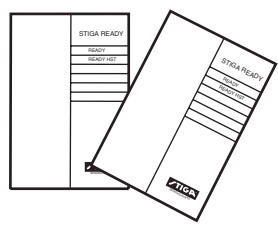




Utgåva Issue		Bildnr Picture No		READY MONTERINGSDETALJER		READY ASSEMBLY PARTS		Sida Page	
2007- 11		1637B						202	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2715								
1	1				9595-0262-00	Spännstift .....	Locating pin .....		
2A	1				9699-0103-02	Shims .....	Flat washer .....		0.5 mm
2B	1				9699-0114-02	Shims .....	Flat washer .....		1.0 mm
3	2				1134-4185-01	Ansatsbricka .....	Flange washer .....		
5	4				9699-0056-02	Planbricka .....	Flat washer .....		
7	1				1134-4627-01	Dragögla .....	Tow bar .....		
8	2				9959-0820-16	Skruv .....	Screw .....		
9	4				9997-0820-16	Skruv .....	Screw .....		
10	1				1134-6125-01	Tändningsnyckel .....	Ignition key .....		
11	1				1134-5245-01	Batterirem .....	Battery strap .....		
12	1				1134-6113-01	Batteriskruvar .....	Battery screws .....		
13	2				9898-1035-16	Skruv .....	Screw .....		
14	2				9739-1031-22	Mutter .....	Nut .....		
X	21	1			8211-0009-70	Bruksanvisning .....	Owner's manual .....		
X	21	1			8211-0010-70	Bruksanvisning .....	Owner's manual .....		
X	21	1			8211-0701-70	Säkerhetsföreskrifter .....	Safety regulations .....		
X	21	1			8211-0950-70	Garantikort .....	Warranty card .....		

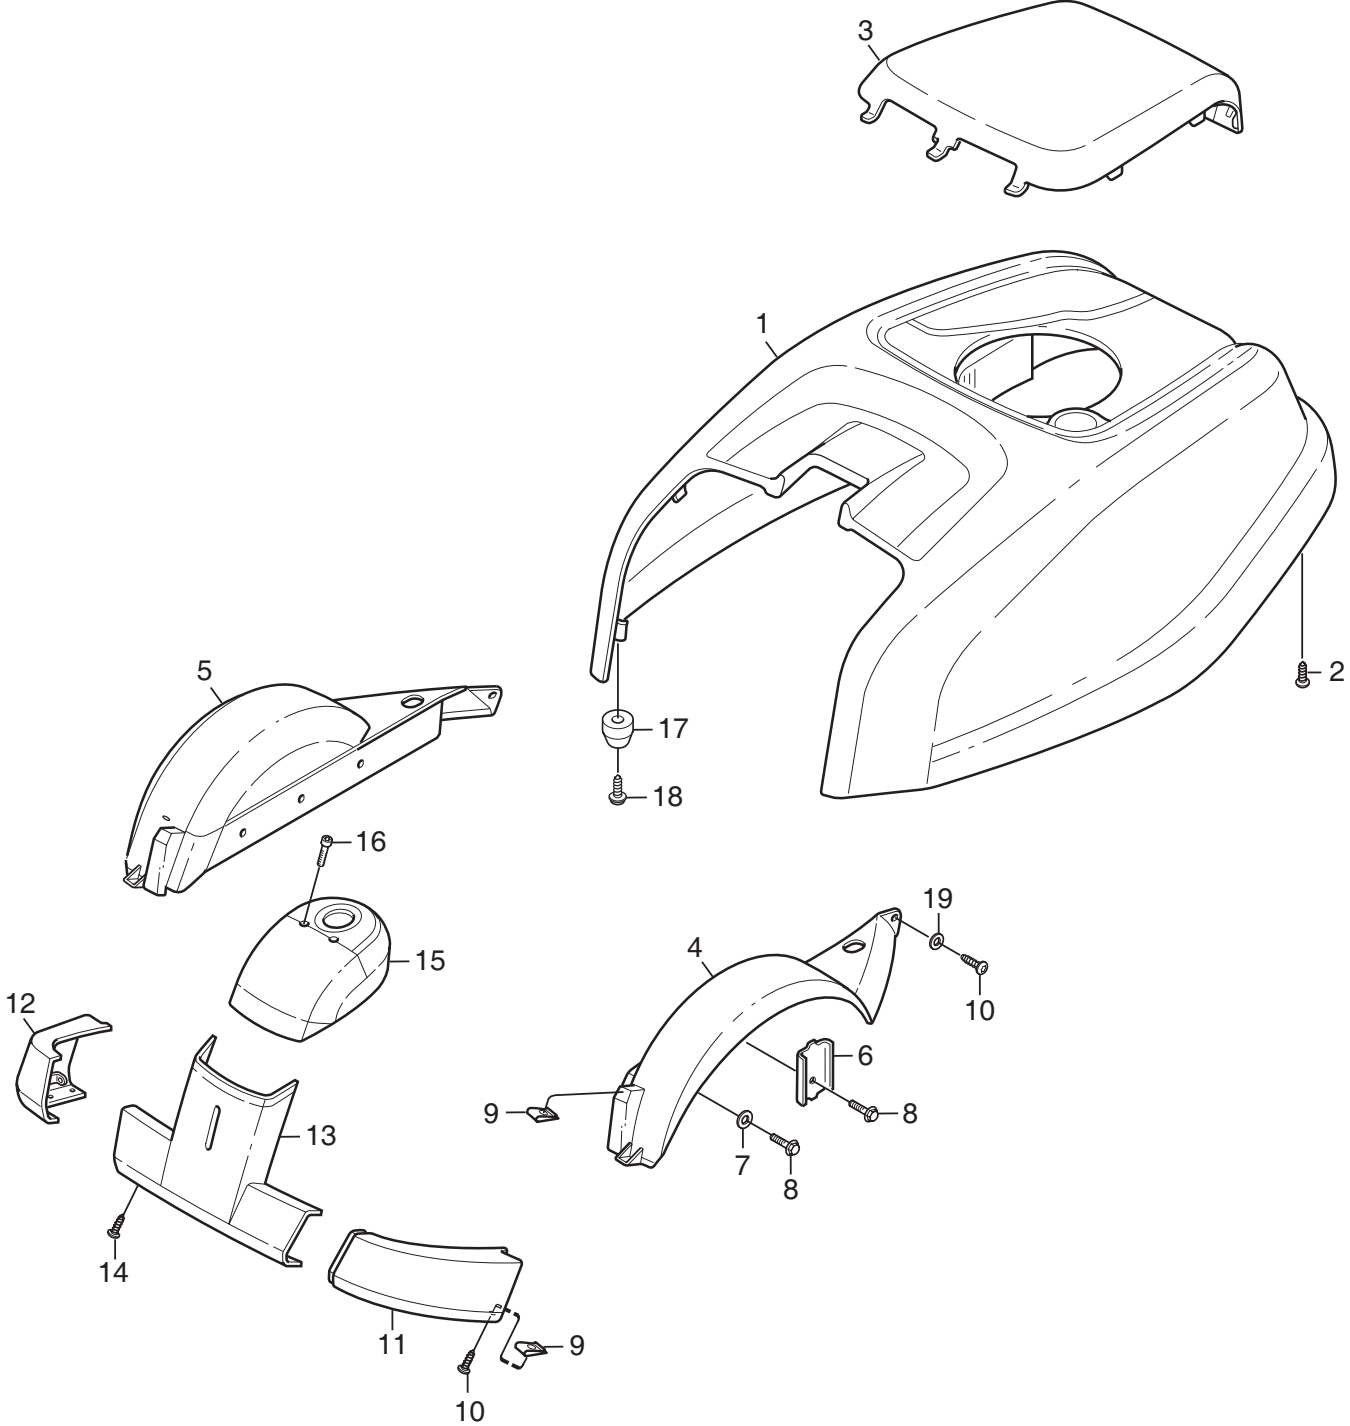

Utgåva Issue		Bildnr Picture No		READY KAROSS		READY BODY WORK		Sida Page	
2007- 11		1641A						204	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2715								
1	1				1134-5283-01	Motorhuv- grå.....	Engine hood- grey .....		
2	7				9838-9530-12	Skruv .....	Screw .....		
3	1				1134-5284-01	Motorlucka- gul .....	Engine cover- yellow .....		
4	1				1134-5307-01	Stänkskärm- vä, grå .....	Mud guard- LH, grey .....		
5	1				1134-5307-02	Stänkskärm- hö, grå .....	Mud guard- RH, grey .....		
6	2				1134-0225-00	Stödplåt .....	Support plate .....		
7	4				9699-0056-02	Planbricka.....	Flat washer .....		
8	6				9945-0816-16	Skruv .....	Screw .....		
9	4				1134-4176-01	Clips .....	Clips .....		
10	4				9893-0616-16	Skruv .....	Screw .....		
11	1				1134-5306-01	Stötfångare, front- vä.....	Bumper, front- LH .....		
12	1				1134-5306-02	Stötfångare, front- hö .....	Bumper, front- RH .....		
13	1				1134-5305-01	Front- nedre .....	Front plate- lower .....		
14	6				9893-0616-16	Skruv .....	Screw .....		
15	1				1134-5304-01	Front- övre .....	Front- upper .....		
16	2				9946-0525-16	Skruv .....	Screw .....		
17	2				1134-4790-02	Styrning .....	Hood guide .....		
18	2				9838-9530-12	Skruv .....	Screw .....		
19	2				9699-0060-02	Planbricka.....	Flat washer .....		
99	1				1134-5591-01	Dekalsats .....	Label kit .....		

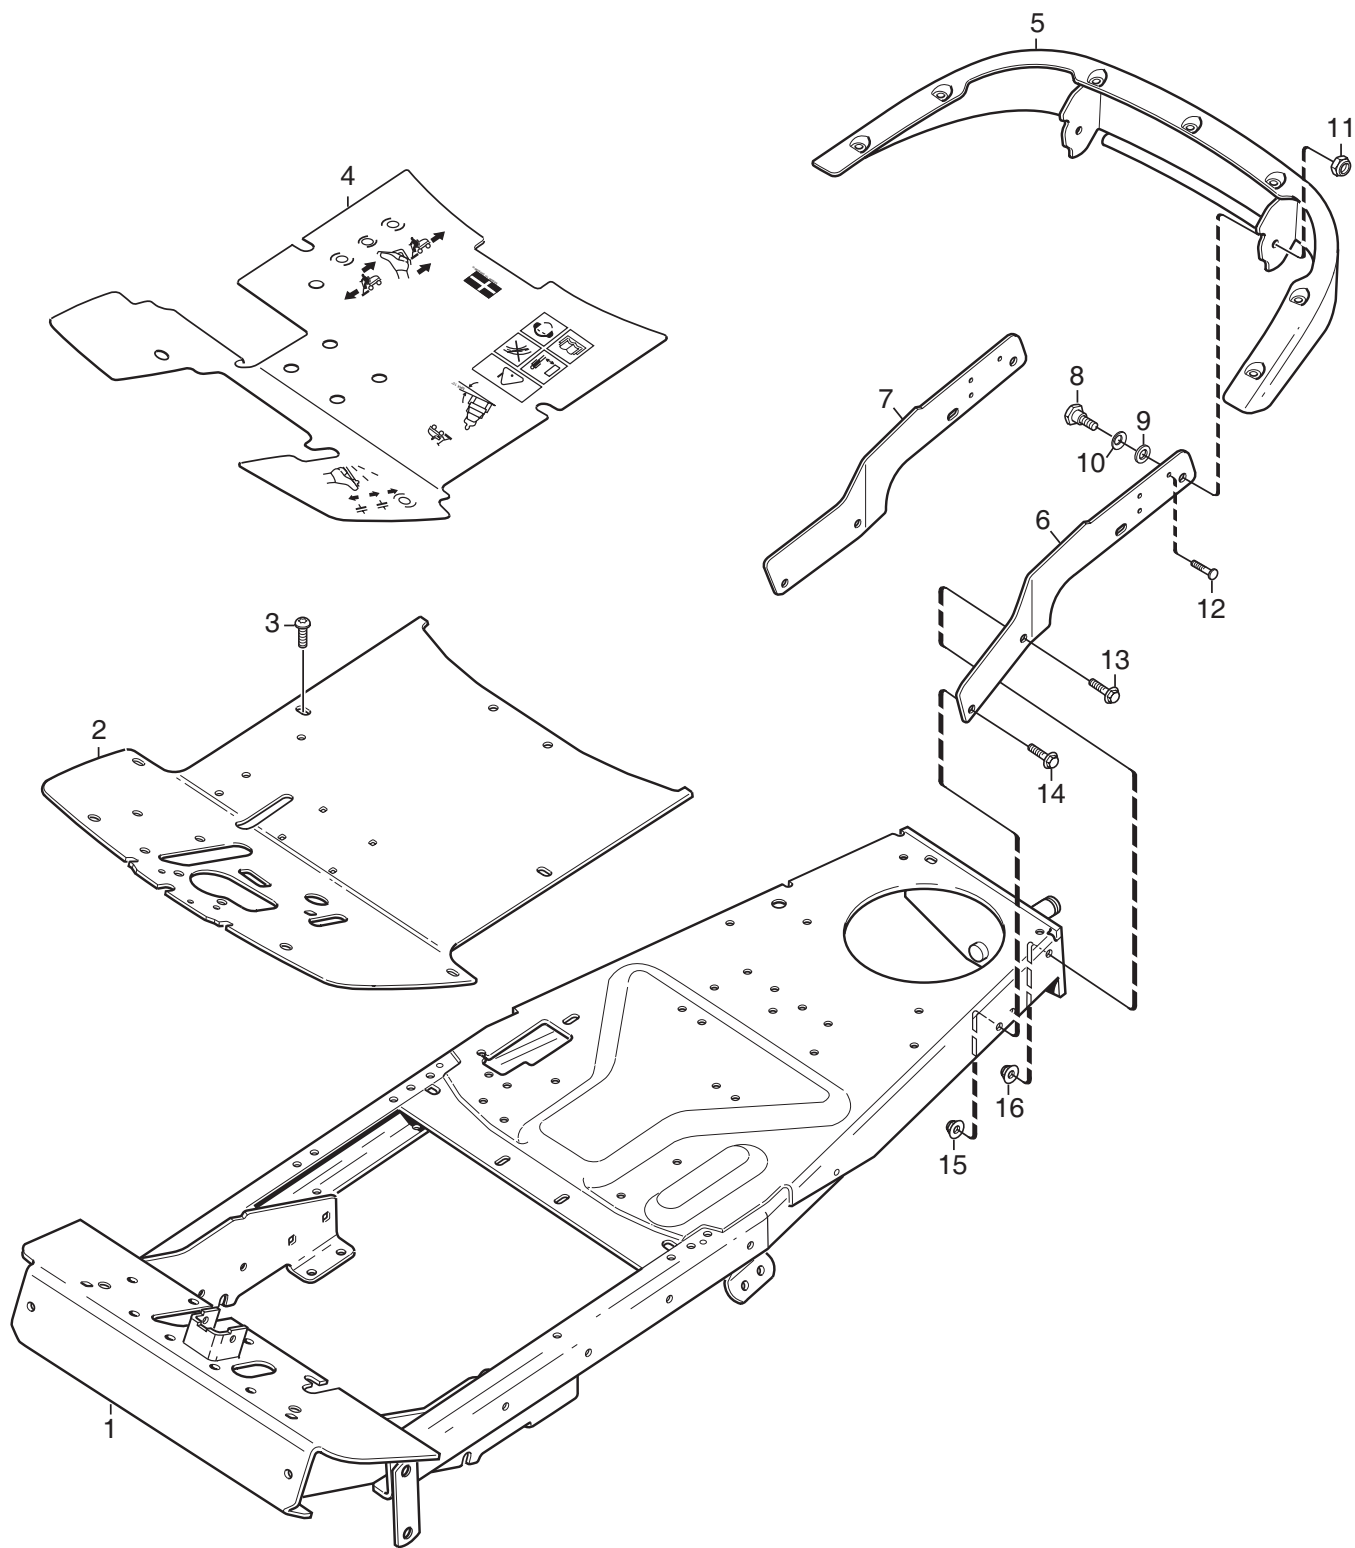 


Utgåva Issue		Bildnr Picture No		READY RAM		READY FRAME		Sida Page	
2007- 11		1642A						206	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2715								
1	1				1134-5546-02 Ram.....	Frame.....			
2	1				1134-5293-01 Durk.....	Floor plate.....			
3	2				9893-0616-16 Skruv.....	Screw.....			
4	1				1134-5338-01 Durkmatta.....	Floor mat.....			
5	1				1134-5453-01 Stötfångare- bak.....	Bumper- rear.....			
6	1				1134-5334-01 Stag- vä.....	Attachment- LH.....			
7	1				1134-5334-02 Stag- hö.....	Attachment- RH.....			
8	2				1134-0240-00 Ansatsskruv.....	Shoulder screw.....			
9	2				1134-4242-01 Distansbricka.....	Spacer washer.....			
10	2				9694-0001-00 Fjäderbricka.....	Washer.....			
11	2				9747-0831-02 Mutter.....	Lock nut.....			
12	2				9943-0516-16 Skruv.....	Screw.....			
13	2				9959-0820-16 Skruv.....	Screw.....			
14	2				9959-0825-16 Skruv.....	Screw.....			
15	1				9739-0831-22 Mutter.....	Nut.....			
16	3				9739-0831-22 Mutter.....	Nut.....			

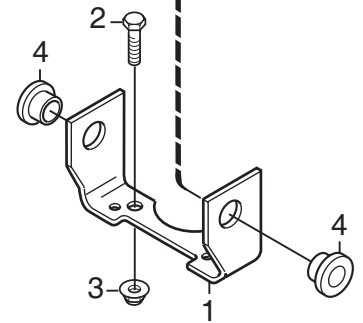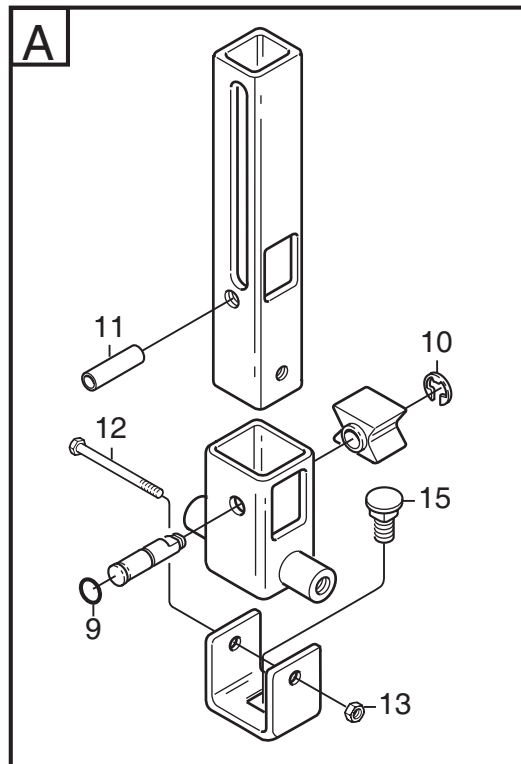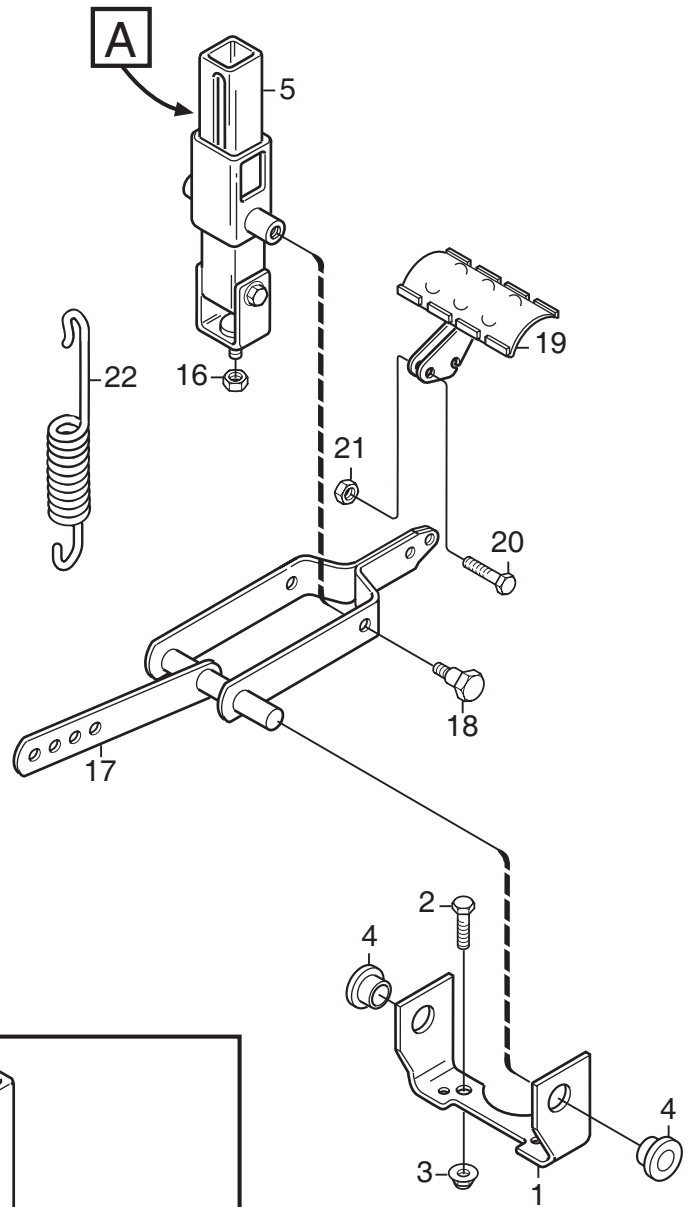   





Utgåva Issue		Bildnr Picture No		READY REDSKAPSLYFT		READY LIFTING DEVICE		Sida Page	
2007- 11		1151C						208	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2715								
1	1				1134-4117-01 Fäste .....	Bracket .....			
2	2				9959-1025-16 Skruv .....	Screw .....			
3	2				9739-1031-22 Mutter .....	Nut .....			
4	2				1134-2684-01 Lager .....	Bearing .....			
5	1				1134-4945-01 Lyftspärr kpl .....	Lift catch assy .....			
9	1				9404-0027-01 • O-ring .....	• O-ring .....			
10	1				9650-0039-04 • Seegersäkring .....	• Lock ring .....			
11	1				9595-0276-01 • Spännstift .....	• Locating pin .....			
12	1				9997-0640-12 • Skruv .....	• Screw .....			
13	1				9747-0631-02 • Låsmutter .....	• Lock nut .....			
15	1				9897-0820-16 • Skruv .....	• Screw .....			
16	1				9747-0831-02 Mutter .....	Lock nut .....			
17	1				1134-4860-01 Lyftgaffel .....	Lift fork .....			
18	2				1134-0240-00 Ansätsskruv .....	Shoulder screw .....			
19	1				1134-4938-01 Lyftpedal .....	Lift pedal .....			
20	2				9997-0625-16 Skruv .....	Screw .....			
21	2				9739-0631-22 Mutter .....	Nut .....			
22	1				4231-0013-00 Fjäder .....	Spring .....			

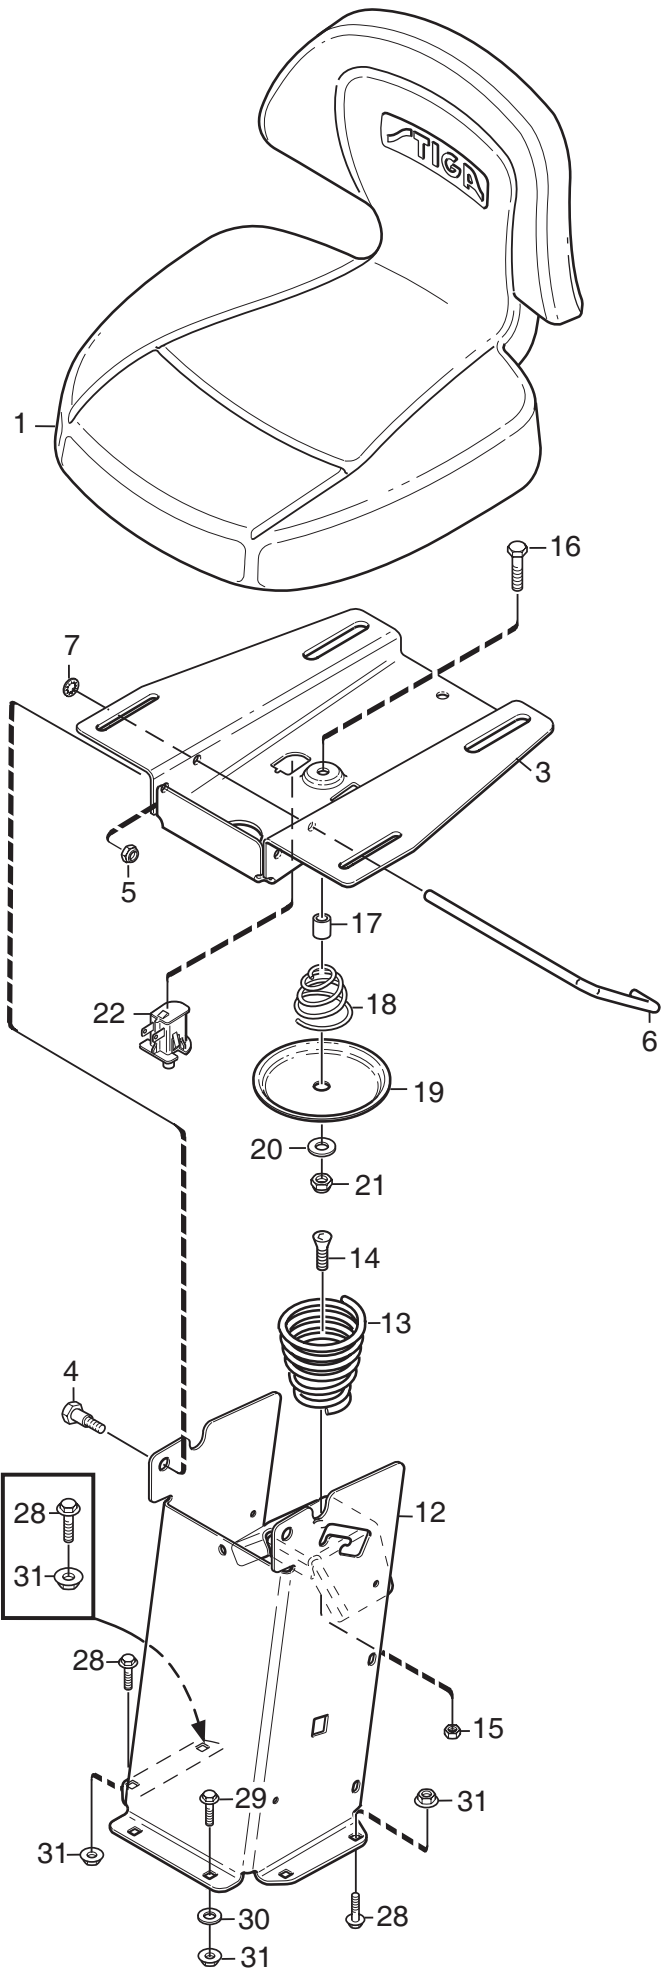 


Utgåva Issue		Bildnr Picture No		READY SITS		READY SEAT		Sida Page	
2007- 11		1652A						210	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2715								
1	1				1134-5506-01 Sits .....	Seat .....			
3	1				1134-5301-01 Sitsplatta .....	Seat plate .....			
4	2				1134-0240-00 Ansatsskruv .....	Shoulder screw .....			
5	2				9747-0831-02 Mutter .....	Lock nut .....			
6	1				1134-5454-01 Spärr .....	Catch .....			
7	1				9675-0012-02 Starlock .....	Locking washer .....			
12	1				1134-5296-04 Sitskonsol- gul .....	Seat bracket- yellow .....			
13	1				1134-4256-01 Sitsfjäder .....	Seat spring .....			
14	1				9924-1235-19 Skruv .....	Screw .....			
15	1				9747-1231-02 Låsmutter .....	Lock nut .....			
16	1				9997-0840-16 Skruv .....	Screw .....			
17	1				1134-1565-06 Distans .....	Spacer .....			
18	1				1134-5302-01 Fjäder .....	Spring .....			
19	1				1134-5299-01 Tryckplatta .....	Push plate .....			
20	1				9699-0090-02 Planbricka .....	Flat washer .....			
21	1				9747-0831-02 Mutter .....	Lock nut .....			
22	1				1134-3156-02 Brytare (grå) .....	Switch (grey) .....			
28	4				9959-0820-16 Skruv .....	Screw .....			L = 20 mm
29	2				9959-0825-16 Skruv .....	Screw .....			L = 25 mm
30	2				9699-0056-02 Planbricka .....	Flat washer .....			
31	6				9739-0831-22 Mutter .....	Nut .....			

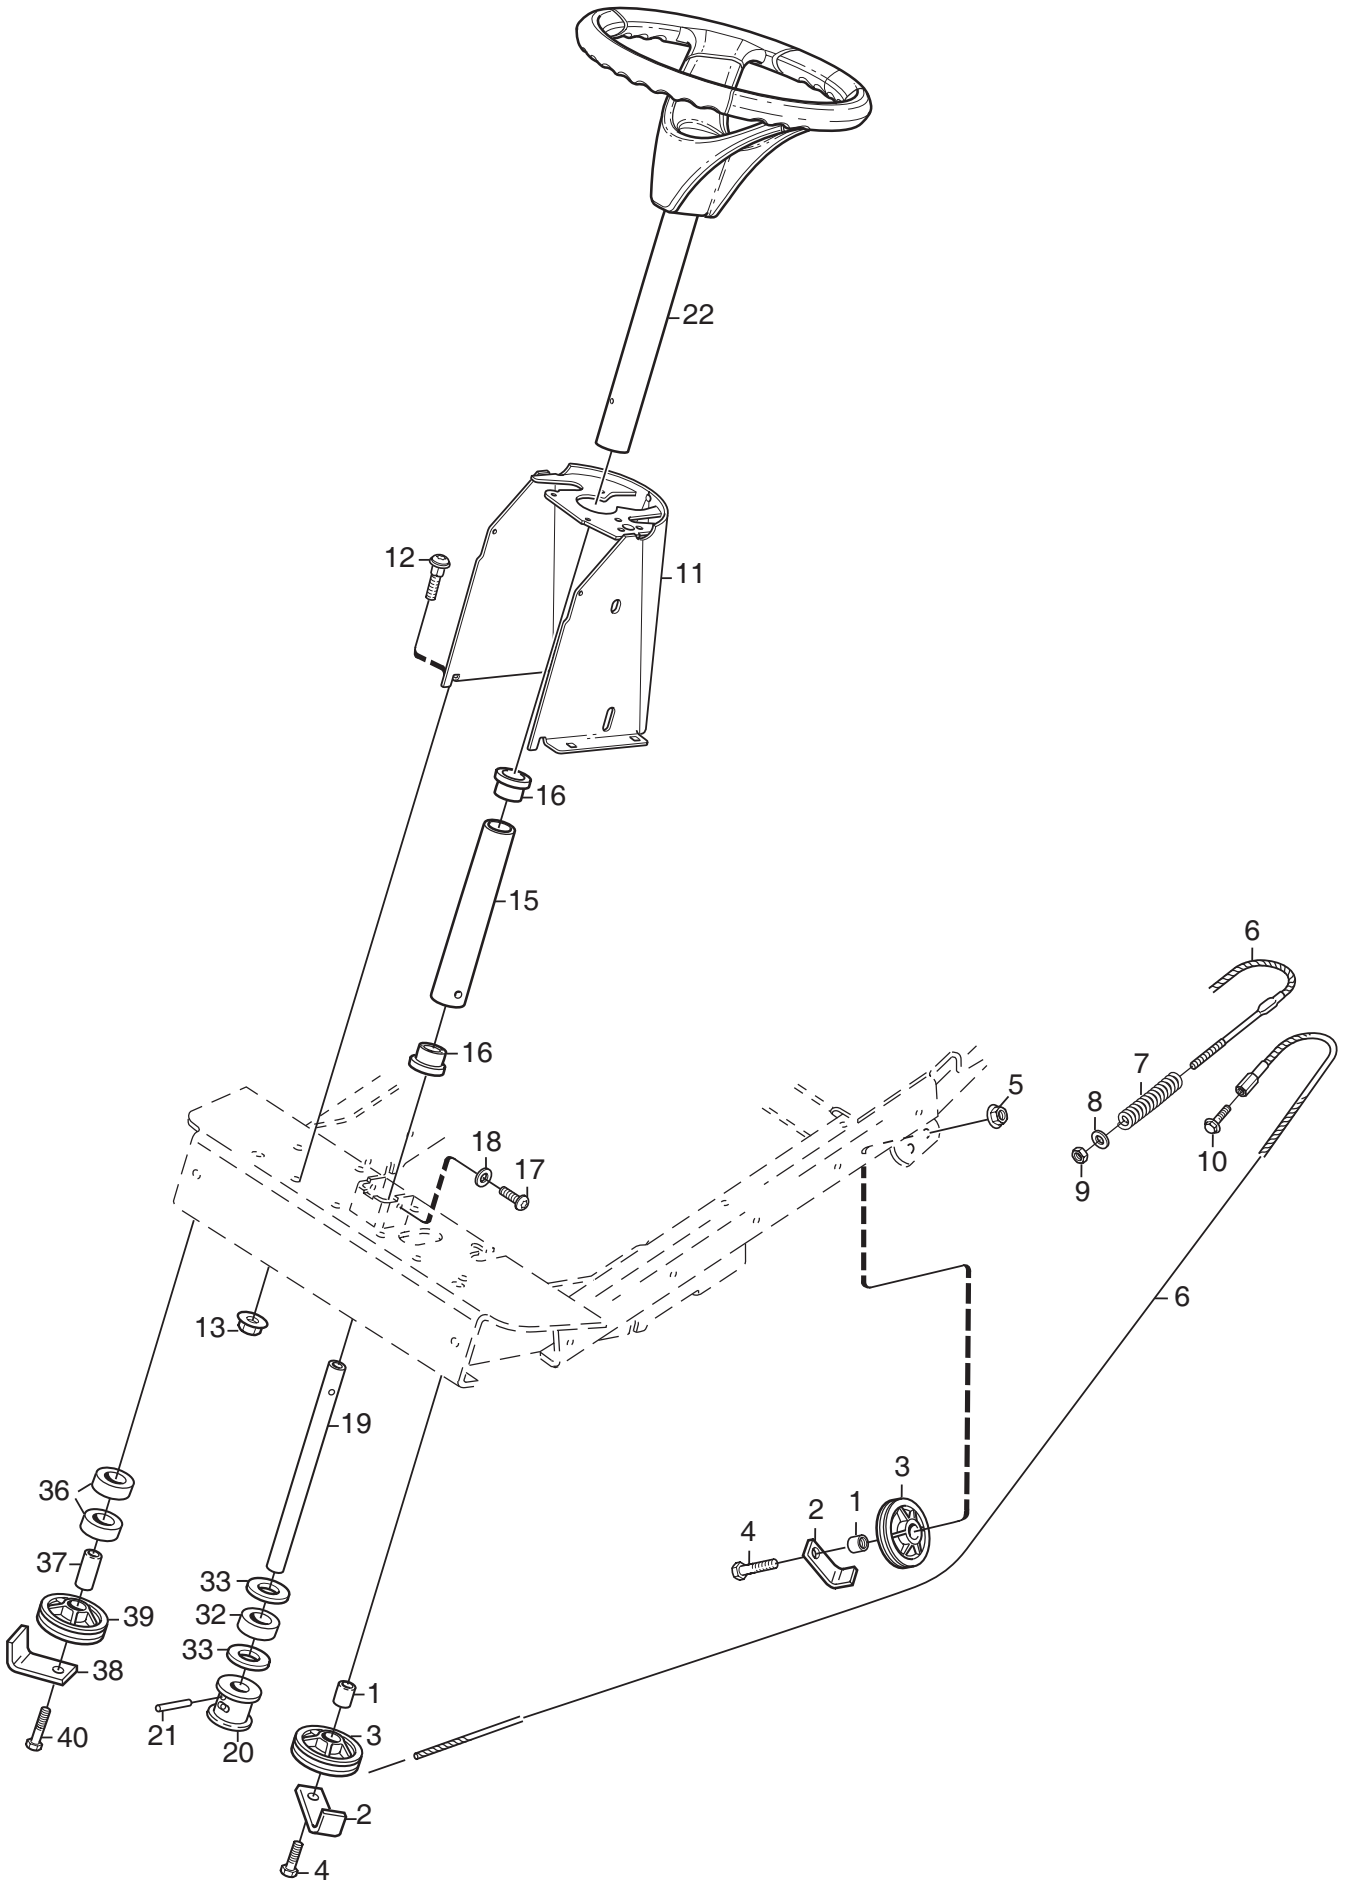 

Utgåva Issue		Bildnr Picture No		READY STYRNING		READY STEERING		Sida Page	
2007- 11		1653						212	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2715								
1	3				1134-0041-01 Linhjulshylsa .....	Bushing.....			
2	3				1134-3022-01 Linhållare .....	Cable holder .....			
3	1				1134-9025-01 Linhjul- sats .....	Steering pulley- kit .....			Sats 2 st/kit of 2
4	3				9997-1040-16 Skruv .....	Screw .....			
5	2				9739-1031-22 Mutter .....	Nut .....			
6	1				1134-2032-04 Styrwire .....	Steering cable .....			
7	1				1134-1310-01 Tryckfjäder .....	Compression spring .....			
8	1				9699-0056-02 Planbricka .....	Flat washer .....			
9	1				9747-0831-02 Mutter .....	Lock nut .....			
10	1				9959-0820-16 Skruv .....	Screw .....			
11	1				1134-5349-03 Styrkonsol- grå .....	Steering console- grey .....			
12	4				9897-0820-16 Skruv .....	Screw .....			
13	4				9739-0831-22 Mutter .....	Nut .....			
15	1				1134-1305-05 Rattrör- nedre .....	Steering column- lower .....			
16	2				1134-1901-01 Lager .....	Bearing .....			
17	2				9893-0616-16 Skruv .....	Screw .....			
18	2				9699-0060-02 Planbricka .....	Flat washer .....			
19	1				1134-5495-01 Rattstång .....	Steering rod .....			
20	1				1134-1933-01 Styrrulle .....	Steering pulley .....			
21	1				9595-0262-00 Spännstift .....	Locating pin .....			
22	1				1134-5496-01 Ratt .....	Steering wheel .....			
32	1				1134-3047-01 Distans .....	Spacer .....			
33	2				9699-0104-02 Bricka .....	Washer .....			
36	2				1134-3047-01 Distans .....	Spacer .....			
37	1				1134-0041-05 Hylsa .....	Bushing .....			
38	1				1134-3022-01 Linhållare .....	Cable holder .....			
39	1				1134-9025-01 Linhjul- sats .....	Steering pulley- kit .....			Sats 2 st/kit of 2
40	1				9997-1060-12 Skruv .....	Screw .....			

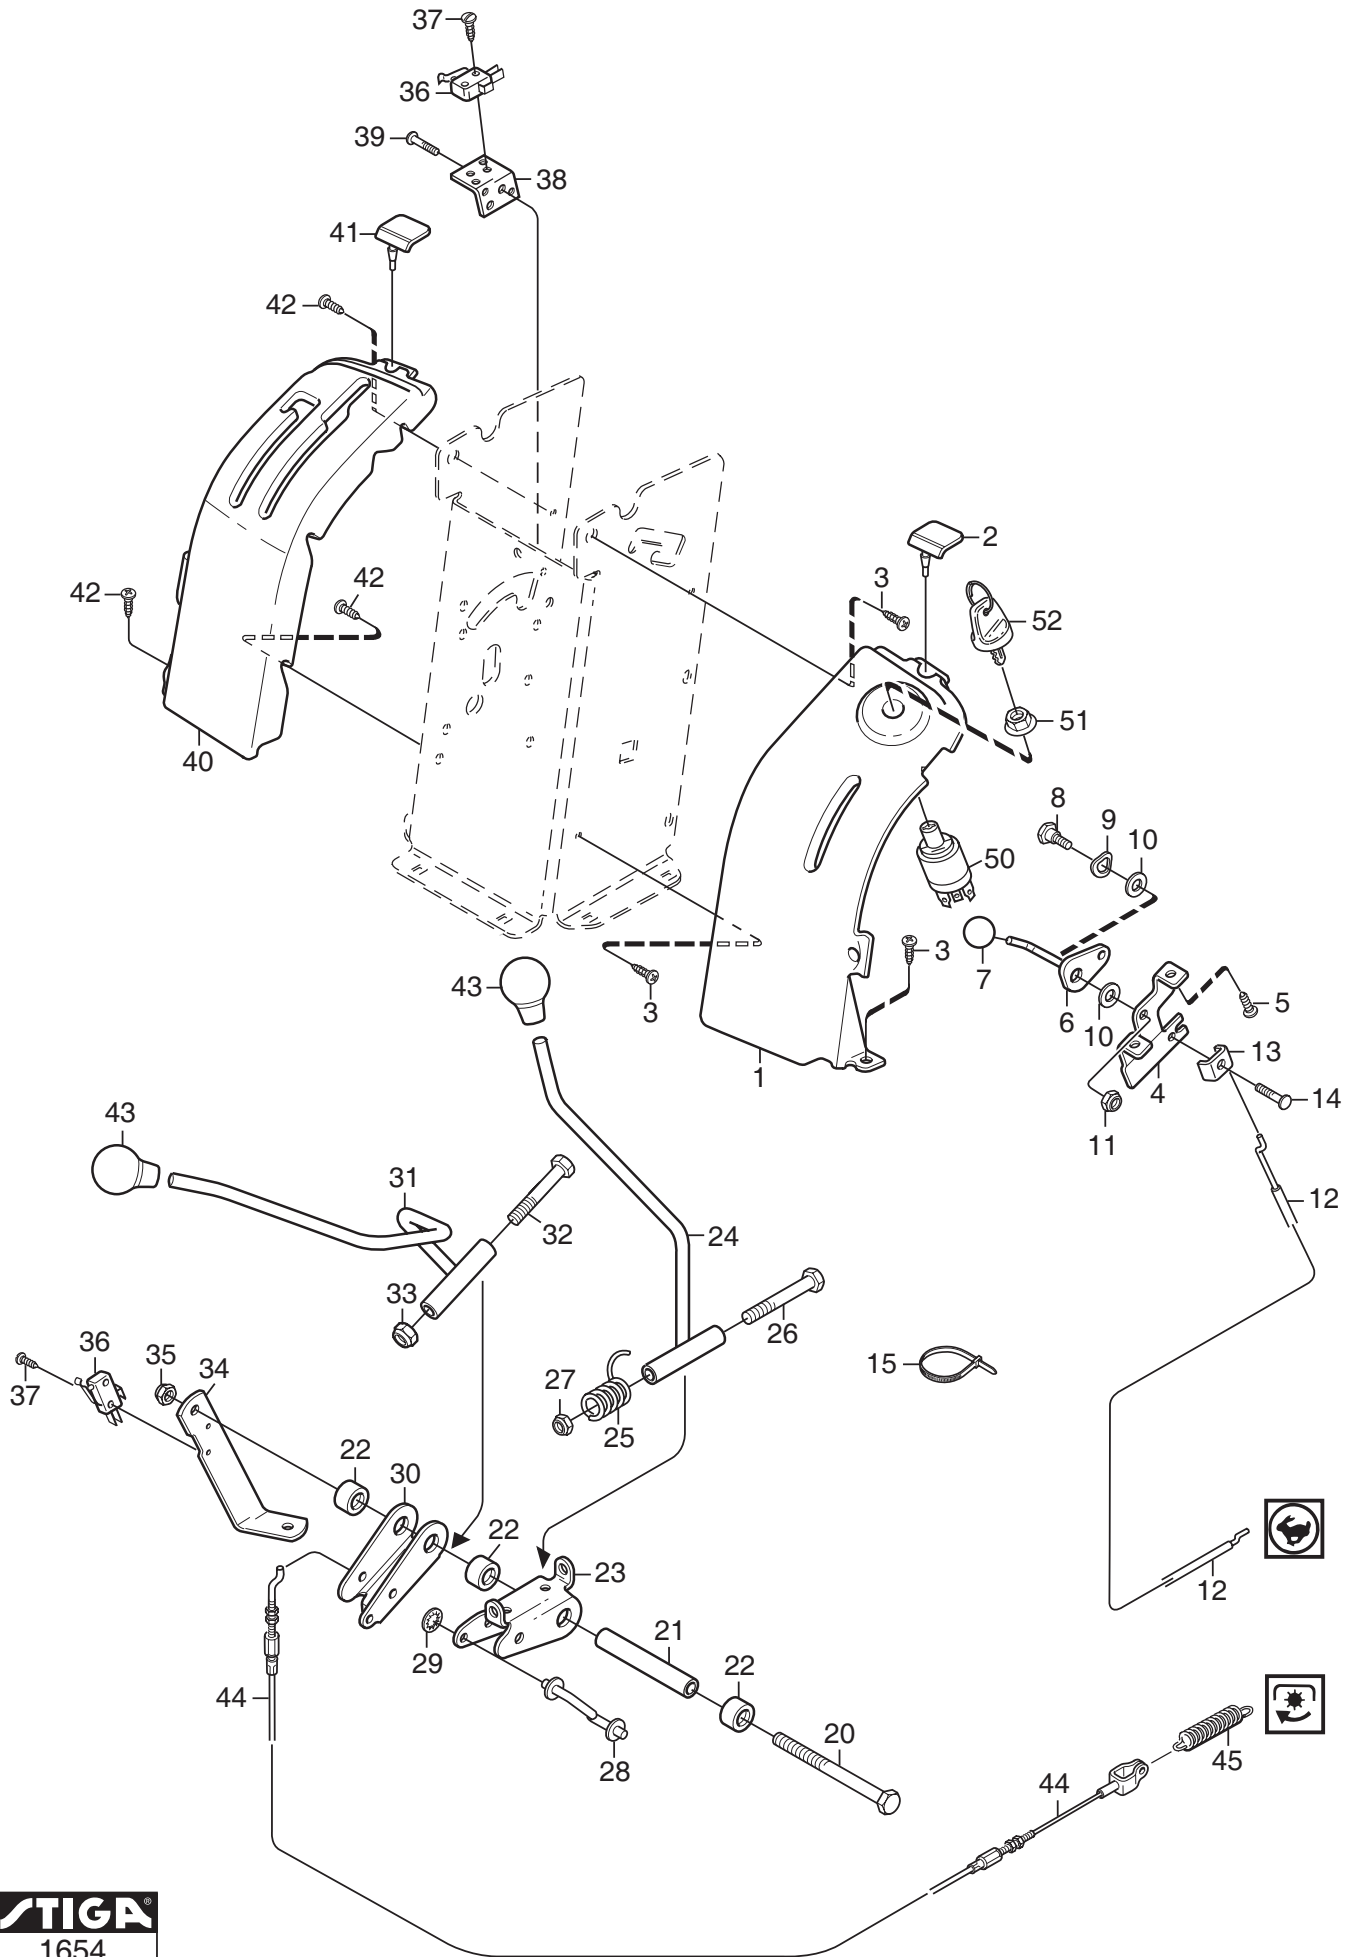 


Utgåva Issue		Bildnr Picture No		READY HANDREGLAGE		READY HAND CONTROLS		Sida Page	
2007- 11		1654						214	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2715								
1	1				1134-5286-01	Reglagepanel- vä .....	Control panel- LH .....		
2	2				1134-5531-01	Dämpare .....	Absorber .....		
3	3				9893-0616-16	Skruv .....	Screw .....		
4	1				1134-5357-01	Fäste .....	Bracket .....		
5	2				9838-9516-12	Skruv .....	Screw .....		
6	1				1134-4077-01	Gasreglage .....	Throttle control .....		
7	1				1134-4078-01	Knopp .....	Knob .....		
8	1				1134-0240-00	Ansatssskruv .....	Shoulder screw .....		
9	1				9694-0001-00	Fjäderbricka .....	Washer .....		
10	2				1134-4242-01	Distansbricka .....	Spacer washer .....		
11	1				9747-0831-02	Mutter .....	Lock nut .....		
12	1				1134-1597-13	Gaswire .....	Throttle cable .....		
13	1				9500-9991-00	Wireklämma .....	Cable clamp .....		
14	1				9943-0516-16	Skruv .....	Screw .....		
15	1				9579-0003-00	Buntband .....	Cable holder .....		
20	1				9997-0812-02	Skruv .....	Screw .....		
21	1				1134-5274-02	Distans .....	Spacer .....		
22	3				1134-3047-01	Distans .....	Spacer .....		
23	1				1134-5271-01	Reglagefäste .....	Control bracket .....		
24	1				1134-5275-01	Växelspak .....	Gear shift lever .....		
25	1				1134-5535-01	Fjäder .....	Spring .....		
26	1				9997-0890-12	Skruv .....	Screw .....		
27	1				9747-0831-02	Mutter .....	Lock nut .....		
28	1				1134-5268-01	Stag .....	Shifter rod .....		
29	1				9675-0009-02	Starlock .....	Starlock .....		
30	1				1134-5271-01	Reglagefäste .....	Control bracket .....		
31	1				1134-5276-01	Reglagespak .....	Control lever .....		
32	1				9997-0890-12	Skruv .....	Screw .....		
33	1				9747-0831-02	Mutter .....	Lock nut .....		
34	1				1134-5356-01	Stag .....	Strut .....		
35	1				9747-0831-02	Mutter .....	Lock nut .....		
36	2				9400-0312-01	Mikrobrytare .....	Micro switch .....		
37	4				9840-7716-16	Skruv .....	Screw .....		
38	1				1134-5358-01	Brytarfäste .....	Switch bracket .....		
39	2				9943-0516-16	Skruv .....	Screw .....		
40	1				1134-5285-01	Reglagepanel- hö .....	Control panel- RH .....		
41	2				1134-5531-01	Dämpare .....	Absorber .....		
42	4				9893-0616-16	Skruv .....	Screw .....		
43	2				1134-2551-01	Reglageknopp .....	Knob .....		
44	1				1134-3573-06	Kraftttagwire .....	PTO cable .....		
45	1				1134-1242-02	Fjäder .....	Spring .....		
50	1				1134-4093-01	Tändningslås .....	Ignition switch .....		
51	1				1134-4749-01	Mutter .....	Nut .....		
52	1				1134-4734-01	Tändningsnyckel .....	Ignition key .....		




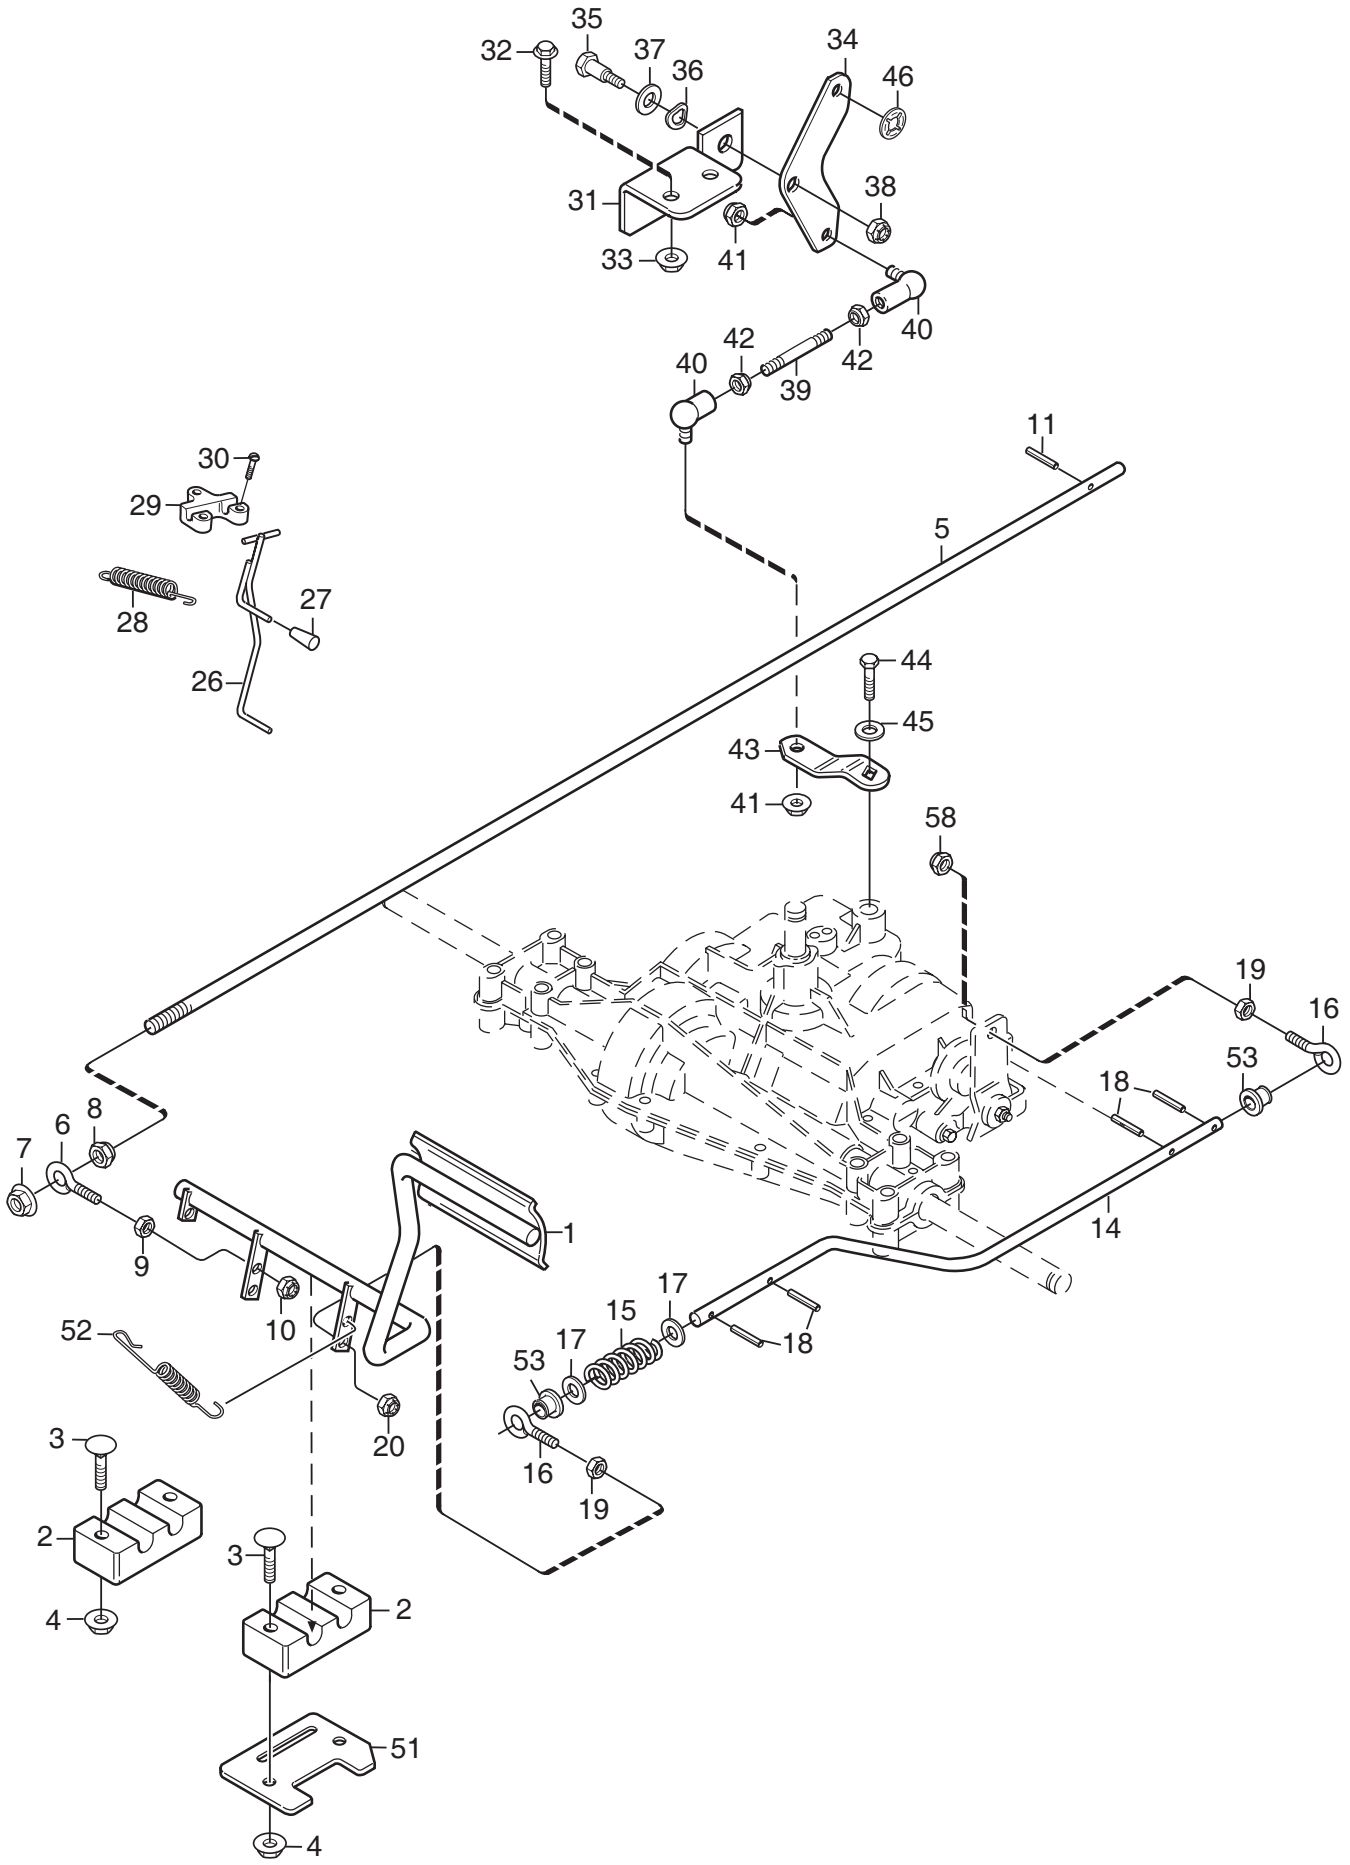 






Utgåva Issue		Bildnr Picture No		READY FOTREGLAGE		READY FOOT CONTROLS		Sida Page	
2007- 11		1644B						216	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2715								
X	1	1			1134-4802-01	Pedal .....	Pedal .....		
	2	2			1134-4624-01	Lager .....	Bearing .....		
	3	4			9897-0640-12	Skruv .....	Screw .....		
	4	4			9739-0631-22	Mutter .....	Nut .....		
	5	1			1134-4795-01	Kopplingsstång .....	Clutch rod .....		
	6	1			1134-2138-01	Skruvögla .....	Eye bolt .....		
	7	1			9739-1031-22	Mutter .....	Nut .....		
	8	1			9731-1031-22	Mutter .....	Nut .....		
	9	1			9739-0831-22	Mutter .....	Nut .....		
	10	1			9747-0831-02	Mutter .....	Lock nut .....		
	11	1			9595-0208-00	Spännstift .....	Locating pin .....		
	14	1			1134-4777-01	Bromsstag .....	Brake rod .....		
	15	1			1134-4617-01	Fjäder .....	Spring .....		
	16	2			1134-2138-01	Skruvögla .....	Eye bolt .....		
	17	2			9699-0035-02	Planbricka .....	Flat washer .....		
	18	4			9595-0208-00	Spännstift .....	Locating pin .....		
	19	2			9739-0831-22	Mutter .....	Nut .....		
	20	1			9747-0831-02	Mutter .....	Lock nut .....		
	26	1			1134-5353-01	Bromsstång .....	Brake rod .....		
	27	1			1134-2786-01	Plastknopp .....	Plastic knob .....		
	28	1			1131-1497-01	Fjäder .....	Spring .....		
	29	1			1134-4002-01	Fäste .....	Brake rod attachment .....		
	30	3			9838-9516-12	Skruv .....	Screw .....		
	31	1			1134-4714-01	Fästvinkel .....	Angle bracket .....		
	32	2			9959-0820-16	Skruv .....	Screw .....		
	33	2			9739-0831-22	Mutter .....	Nut .....		
	34	1			1134-4715-01	Triangel .....	Triangular plate .....		
	35	1			1134-0240-00	Ansattsskruv .....	Shoulder screw .....		
	36	1			9694-0001-00	Fjäderbricka .....	Washer .....		
	37	1			9699-0036-02	Planbricka .....	Flat washer .....		
	38	1			9747-0831-02	Mutter .....	Lock nut .....		
	39	1			1134-4717-02	Gångstång .....	Threaded rod .....		
	40	2			9570-0004-00	Vinkellänk .....	Elbow link .....		
	41	2			9747-0631-02	Låsmutter .....	Lock nut .....		
	42	2			9739-0631-22	Mutter .....	Nut .....		
	43	1			1134-5279-01	Växelarm .....	Shift lever .....		
X	43	1			1134-6351-01	Växelarm .....	Shift lever .....		Dana 4360-197 Dana 6800-7
	44	1			9987-5016-16	Skruv .....	Screw .....		
	45	1			9699-0060-02	Planbricka .....	Flat washer .....		
	46	1			9675-0009-02	Starlock .....	Starlock .....		
	51	1			1134-4793-01	Stopplåt .....	Stop plate .....		
	52	1			4231-0013-00	Fjäder .....	Spring .....		
	53	2			1134-4779-01	Plastbusning .....	Plastic bushing .....		
	58	1			9747-0831-02	Mutter .....	Lock nut .....		

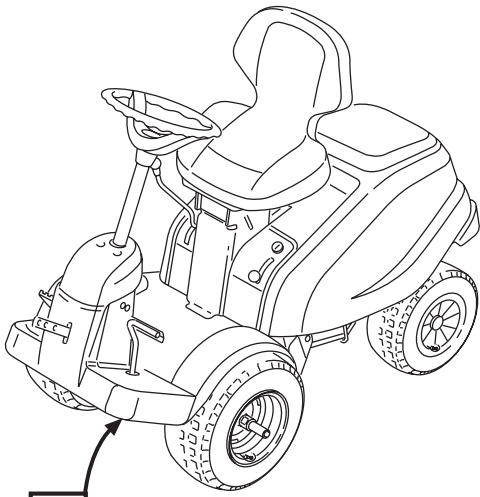 




**A**

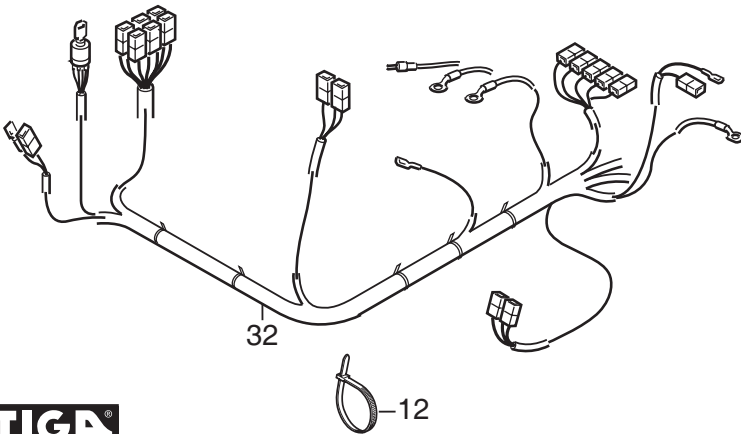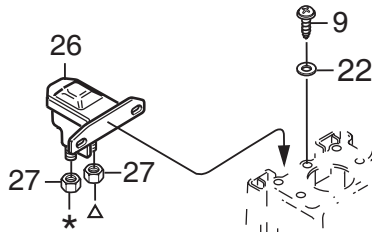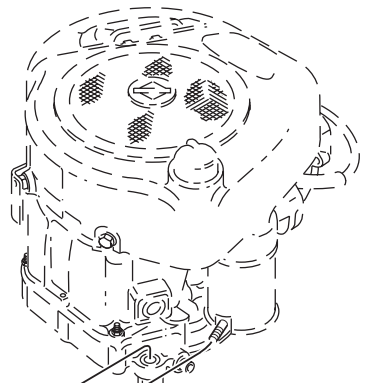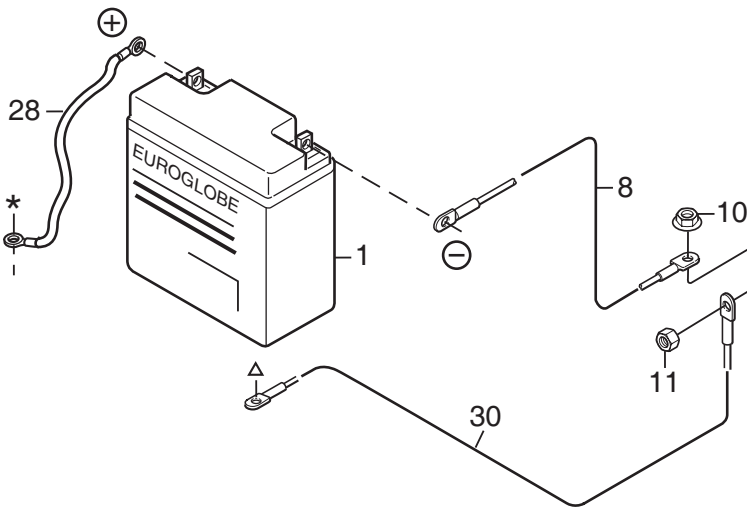    



Utgåva Issue		Bildnr Picture No		READY ELUTRUSTNING		READY EL. EQUIPMENT		Sida Page	
2007- 11		1650A						218	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2715								
1	1				1134-4804-01	Batteri.....	Battery .....		
8	1				1134-2042-02	Kabel- svart.....	Cable- black.....		L = 350 mm
9	1				9838-9516-12	Skruv.....	Screw .....		
10	1				9747-0831-02	Mutter.....	Lock nut .....		
11	1				9795-3531-02	Mutter.....	Nut .....		1/4 UNC
12	3				9579-0003-00	Buntband .....	Cable holder .....		
22	1				9699-0060-02	Planbricka.....	Flat washer.....		
26	1				1134-2962-01	Solenoid kpl .....	Solenoid assy.....		
27	2				9794-5131-02	• Mutter.....	• Nut .....		
28	1				1134-0234-02	Batterikabel ( + ).....	Battery cable ( + ).....		L = 395 mm
29	1				1134-2310-01	Batteriskydd.....	Guard cap .....		
30	1				1134-4702-02	Kabel- röd .....	Cable- red .....		L = 480 mm
32	1				1134-5766-01	Kablage.....	Harness.....		

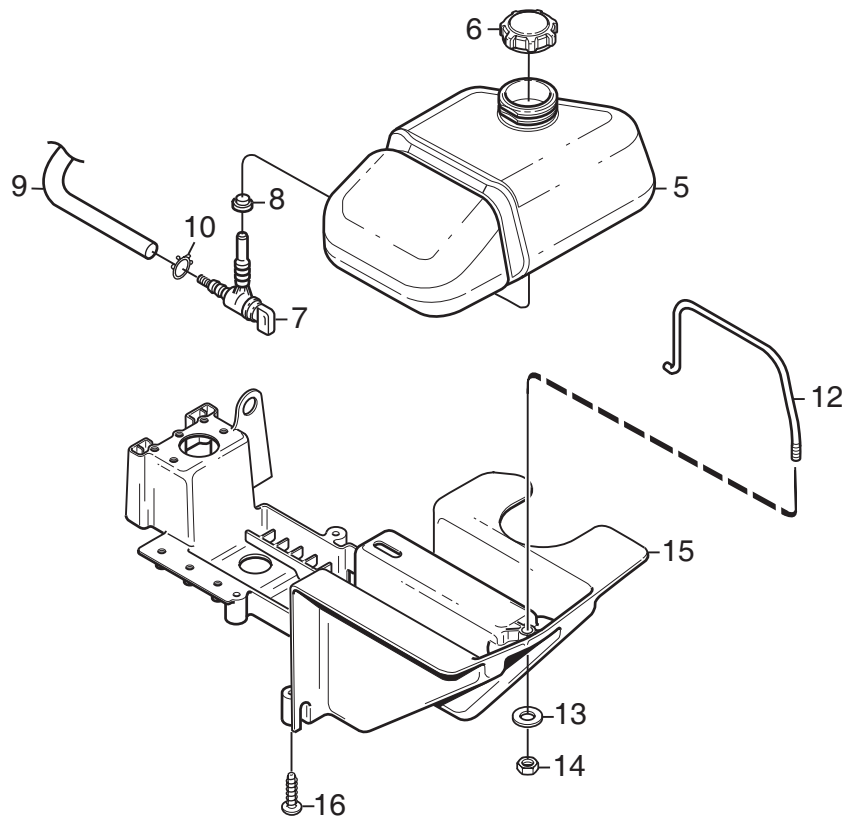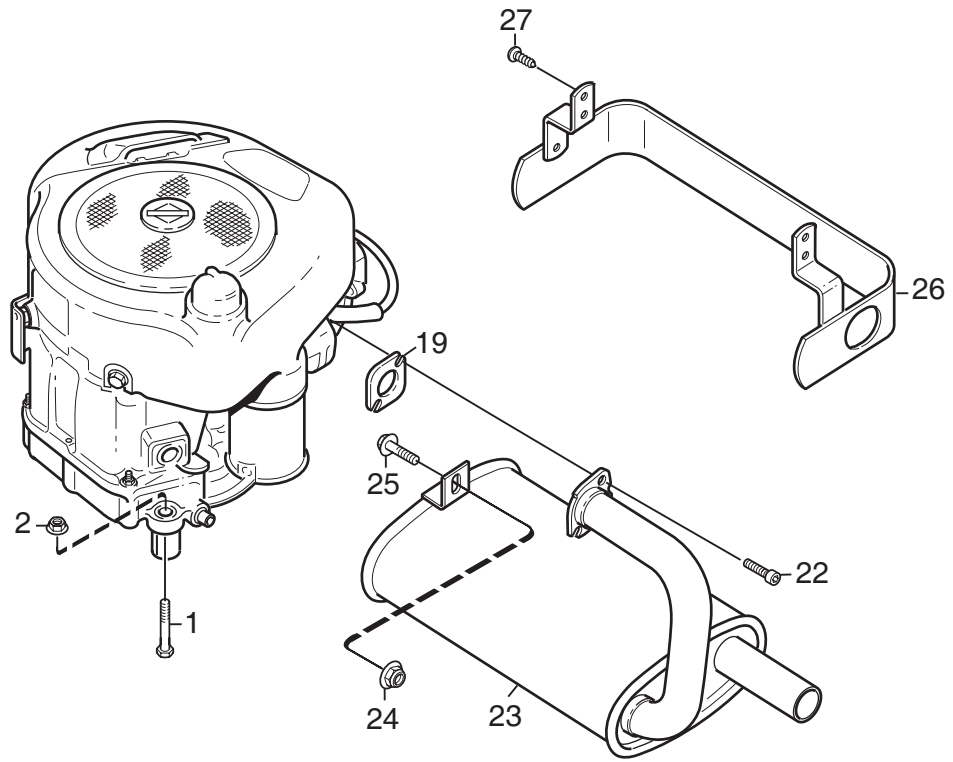  

Utgåva Issue		Bildnr Picture No		READY MOTOR		READY ENGINE		Sida Page	
2007- 11		1651A						220	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2715								
1	4				9997-0840-16 Skruv.....	Screw.....		L = 460 mm	
2	4				9747-0831-02 Mutter.....	Lock nut.....			
5	1				1134-5266-01 Bränsletank.....	Fuel tank.....			
6	1				1134-5532-01 Tanklock.....	Fuel tank cap.....			
7	1				1134-3224-01 Bensinkran.....	Fuel shut-off valve.....			
8	1				1134-3225-01 Gummibussning.....	Grommet.....			
9	1				1134-2975-05 Bensinslang.....	Fuel hose.....			
10	2				9578-0023-02 Slangklämma.....	Hose clamp.....			
12	1				1134-4808-01 Tankbygel.....	Tank clamp.....			
13	1				9699-0060-02 Planbricka.....	Flat washer.....			
14	1				9747-0631-02 Låsmutter.....	Lock nut.....			
15	1				1134-4807-02 Tank/batterihylla.....	Tank/battery shelf.....			
16	4				9829-8830-12 Skruv.....	Screw.....			
19	1				1134-0433-00 Ljuddämparpackning.....	Muffler gasket.....			
22	2				1134-4930-01 Skruv.....	Screw.....			
23	1				1134-5455-01 Ljuddämpare.....	Muffler.....			
24	1				9739-0831-22 Mutter.....	Nut.....			
25	1				9959-0820-16 Skruv.....	Screw.....			
26	1				1134-5457-01 Värmskydd.....	Heat guard.....			
27	4				9893-0616-16 Skruv.....	Screw.....			

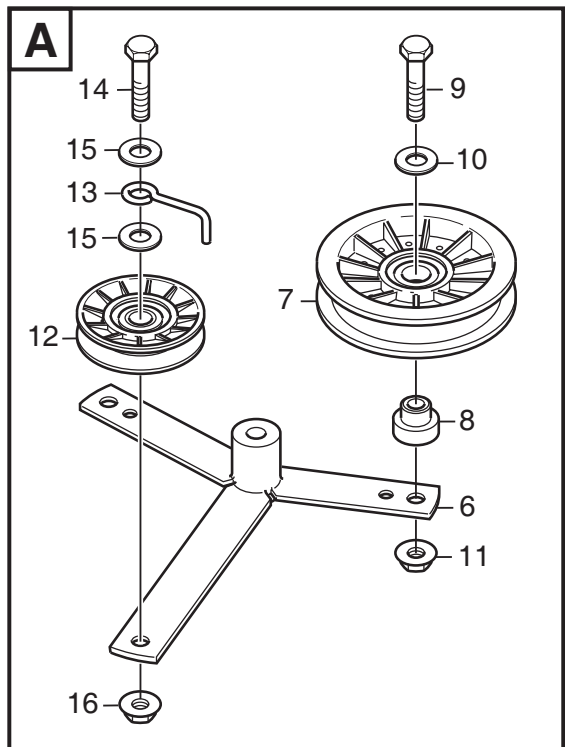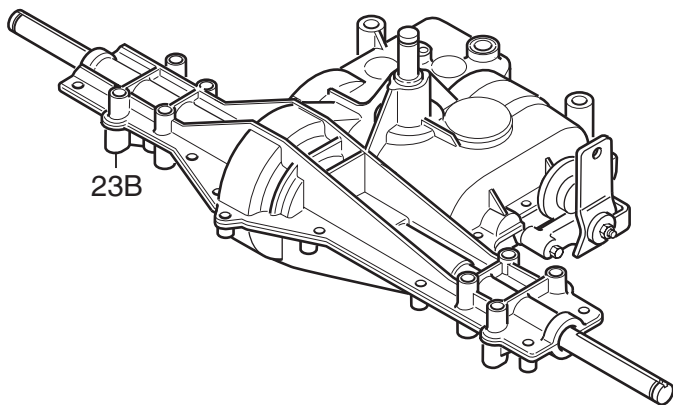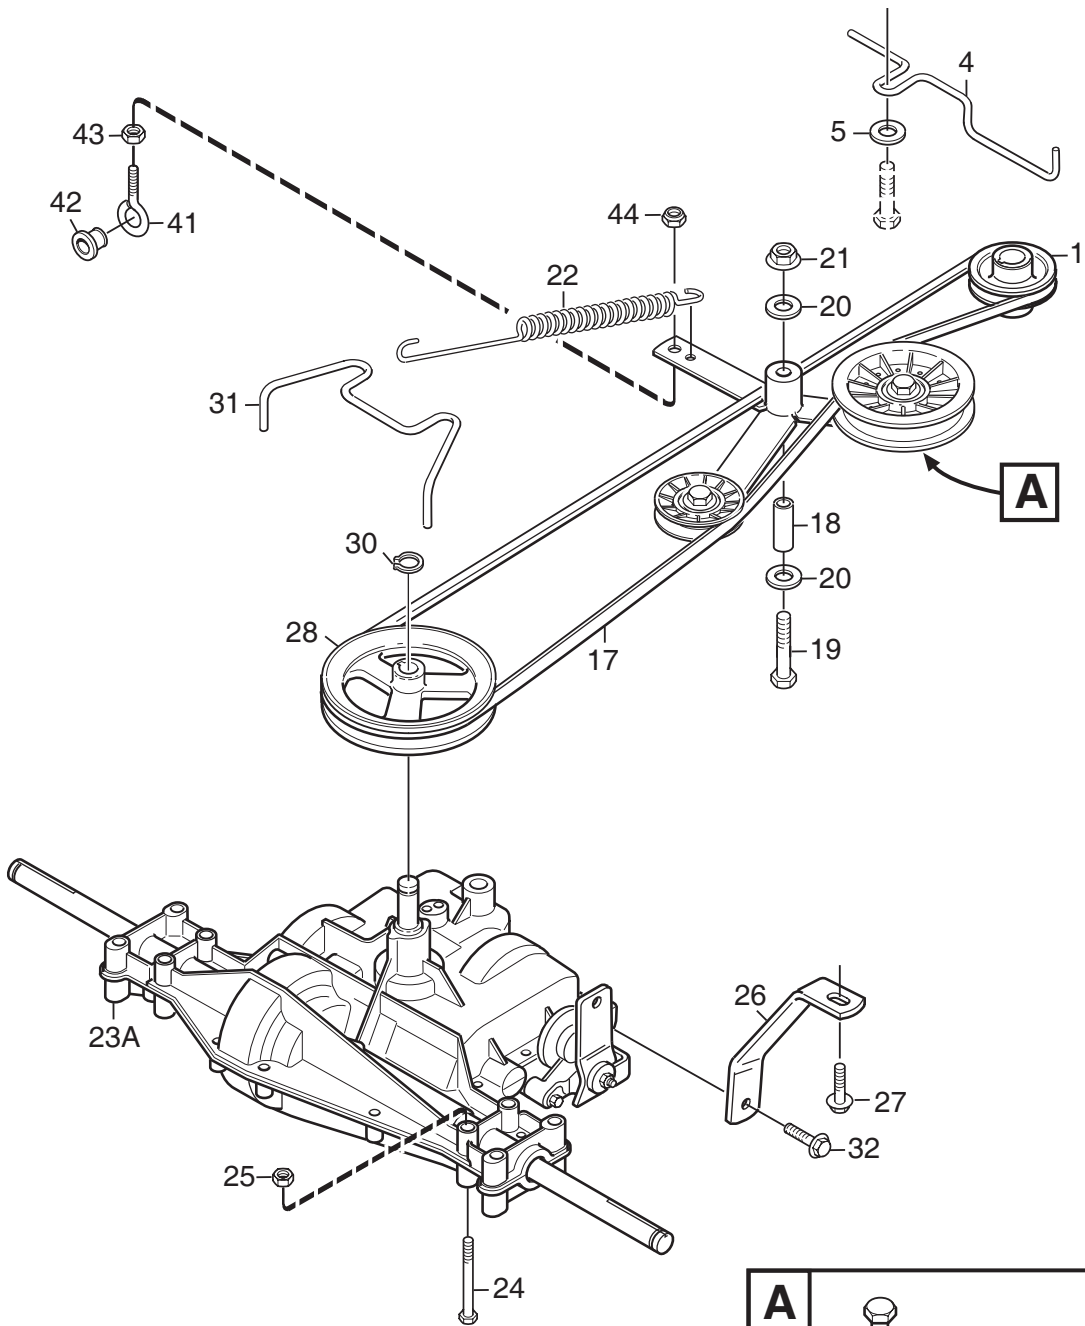   

Utgåva Issue		Bildnr Picture No		READY TRANSMISSION		READY TRANSMISSION		Sida Page	
2007- 11		1643A						222	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2715								
	1				1134-4611-01	Motorremskiva .....	Engine belt pulley .....		
	4				1134-5414-01	Remstyrning .....	Belt guide .....		
	5				9699-0056-02	Planbricka .....	Flat washer .....		
	6				1134-4519-01	Spännarm .....	Tension arm .....		
	7				1134-9091-01	Spännrulle .....	Tension roller .....		
	8				1134-4614-01	Ansats .....	Shoulder spacer .....		
	9				9997-1040-16	Skruv .....	Screw .....		
	10				9699-0035-02	Planbricka .....	Flat washer .....		
	11				9739-1031-22	Mutter .....	Nut .....		
X	12				1134-9027-02	Spännrulle- grå .....	Tension roller- grey .....		
	13				1134-1795-01	Rembygel .....	Belt stirrup .....		
	14				9997-1040-16	Skruv .....	Screw .....		
	15	2			9699-0035-02	Planbricka .....	Flat washer .....		
	16	1			9739-1031-22	Mutter .....	Nut .....		
	17	1			1134-9065-01	Drivrem .....	Drive belt .....		= 9585-0124-01
	18	1			1134-1565-08	Distans .....	Spacer .....		
	19	1			9997-0870-16	Skruv .....	Screw .....		
	20	2			9699-0056-02	Planbricka .....	Flat washer .....		
	21	1			9739-0831-22	Mutter .....	Nut .....		
	22	1			1134-5214-01	Fjäder .....	Spring .....		
	23A	1			1134-5281-01	Transaxel kpl. ....	Transaxle assy .....		Dana 4360-197
X	23B	1			1134-6338-01	Transaxel kpl. ....	Transaxle assy .....		Dana 6800-7
X	24	4			9960-0860-12	Skruv .....	Screw .....		
	25	4			9747-0831-02	Mutter .....	Lock nut .....		
	26	1			1134-4687-01	Momentstag .....	Strut .....		
	27	1			9945-0816-16	Skruv .....	Screw .....		
	28	1			1134-1849-01	Remskiva .....	Belt pulley .....		
	30	1			9650-0016-04	Spårring .....	Lock ring .....		
	31	1			1134-4707-01	Remstyrning .....	Belt guide .....		
	32	1			9942-0820-16	Skruv .....	Screw .....		
	41	1			1134-2138-01	Skruvögla .....	Eye bolt .....		
	42	1			1134-4779-01	Plastbussning .....	Plastic bushing .....		
	43	1			9739-0831-22	Mutter .....	Nut .....		
	44	1			9747-0831-02	Mutter .....	Lock nut .....		

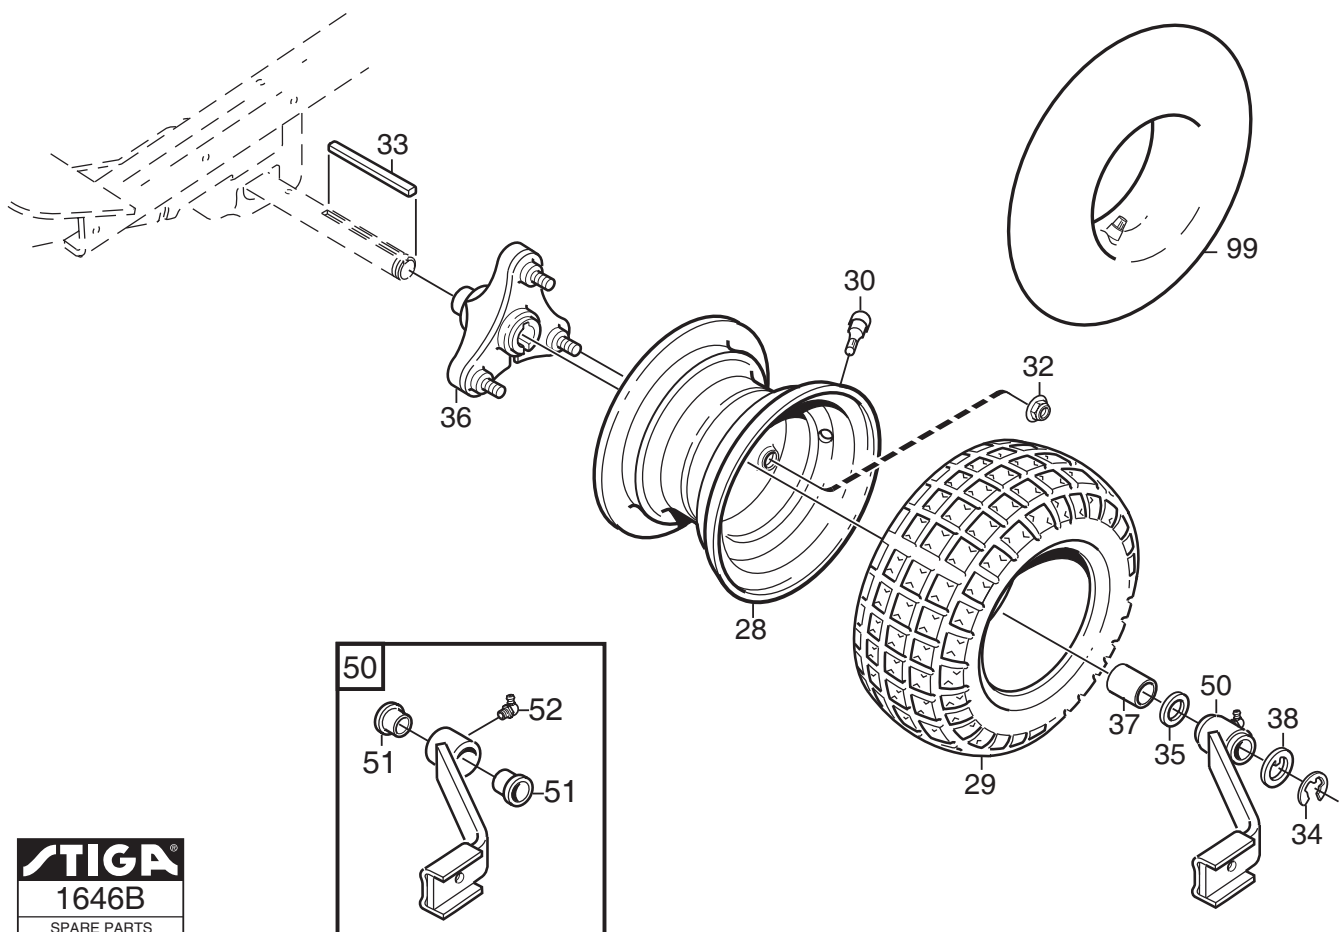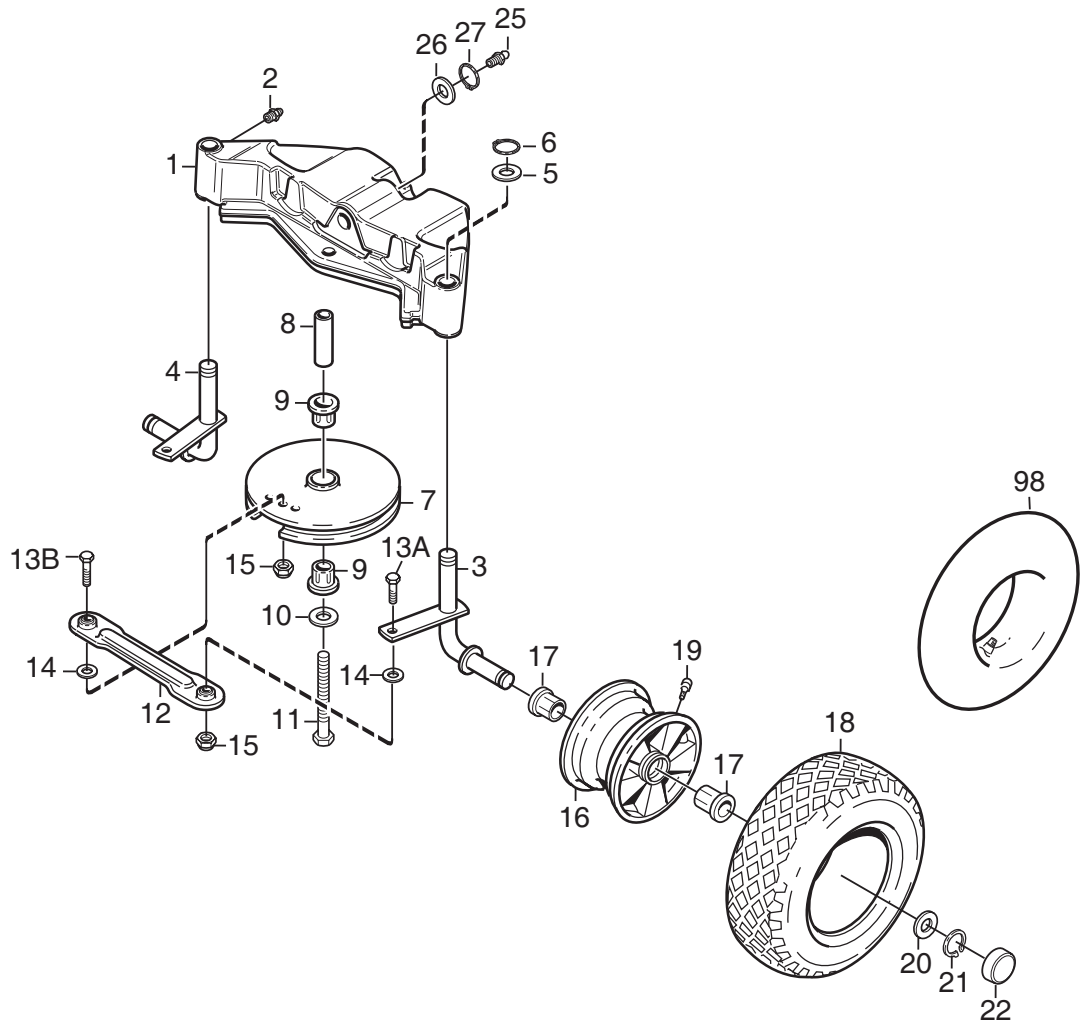  



Utgåva Issue		Bildnr Picture No		READY HJUL	READY WHEELS	Sida Page			
2007- 11		1646B				224			
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2715								
1	1			1134-5894-01	Bakaxel .....	Rear axle .....			
2	2			9501-0500-00	Smörjnippel .....	Grease joint .....			
3	1			1134-5009-02	Spindel- vä .....	Spindle- LH .....			
4	1			1134-5009-01	Spindel- hö .....	Spindle- RH .....			
5	2			9699-0088-02	Planbricka .....	Flat washer .....			
6	2			9650-0020-04	Spårring .....	Circlip .....			
7	1			1134-5316-01	Styrskiva .....	Steering pulley .....			
8	1			1134-5575-01	Distans .....	Spacer .....			
9	1			1134-9024-01	Lager .....	Bearing .....		Sats 4 st/kit of 4	
10	1			9699-0104-02	Bricka .....	Washer .....			
11	1			9997-1680-12	Skruv .....	Screw .....			
12	2			1134-3247-05	Styrstag .....	Tie rod .....			
13A	2			9997-0825-16	Skruv .....	Screw .....		L = 25 mm	
13B	1			9997-0835-12	Skruv .....	Screw .....		L = 35 mm	
14	2			9699-0090-02	Planbricka .....	Flat washer .....			
15	3			9747-0831-02	Mutter .....	Lock nut .....			
16	2			1134-4706-01	Fälg .....	Rim .....			
17	1			1134-9026-01	Lagerbussning .....	Bearing bush kit .....		Sats 4 st/kit of 4	
18	2			9545-0117-00	Däck .....	Tyre .....		13 x 5.00 - 6	
19	2			9545-0500-00	Ventil .....	Valve .....			
20	2			1134-0341-01	Bricka .....	Washer .....			
21	2			9650-0020-04	Spårring .....	Circlip .....			
22	2			1134-4344-01	Navkapsel .....	Hub cap .....			
25	1			9501-0500-00	Smörjnippel .....	Grease joint .....			
26	1			9699-0088-02	Planbricka .....	Flat washer .....			
27	1			9650-0020-04	Spårring .....	Circlip .....			
28	2			1134-5255-01	Fälg .....	Rim .....			
29	2			9545-0126-01	Däck .....	Tyre .....		16 x 6.00 - 8	
30	2			9545-0500-00	Ventil .....	Valve .....			
X 32	6			9731-1031-22	Mutter .....	Nut .....			
33	2			1134-2471-03	Kil .....	Key .....			
34	2			9653-0001-04	Spårryttare .....	Lock ring .....			
35	2			1134-0341-01	Bricka .....	Washer .....			
36	2			1134-4844-02	Hjulnav .....	Wheel hub .....			
X 37	2			1134-4845-02	Navhylsa .....	Hub sleeve .....			
38	2			1134-4981-01	Bricka .....	Washer .....			
X 50	2			1134-6274-01	Redskapsfäste kpl. ....	Attachment assy .....		Inkl. pos 51 - 52	
51	1			1134-9026-01	• Lagerbussning .....	• Bearing bush kit .....		Sats 4 st/kit of 4	
52	1			9501-0502-00	• Smörjnippel .....	• Grease joint .....			
98				9545-0204-00	Innerslang .....	Inner tube .....		Reservdel/spare part	
99				9545-0203-00	Innerslang .....	Inner tube .....		Reservdel/spare part	



