


Utgåva Issue		Bildnr Picture No		DANA TRANSAXEL		DANA TRANSAXLE		Sida Page	
2011-11		2215		6800-7 6800-8		6800-7 6800-8		430	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	6800 -7	6800 -8							
0	1			1134-6338-01	Transaxel kpl.....	Transaxle assy.....		DANA 6800-7 DANA 6800-8 Inkl. pos 4, 7-8 Pos 10- 12, 14- 15 12T 18T 37T 30T 25T 22T 19T 30T 10T 9T 12T 20T 25T 28T 31T 12T 41T 12T	
0		1		1134-6349-01	Transaxel kpl.....	Transaxle assy.....			
1	1			F000-6768-00	Hus- övre kpl	Housing- upper assy			
1		1		F000-6769-00	Hus- övre kpl	Housing- upper assy			
2	18	18		F000-1919-00	Skruv	Screw			
3	1	1		F004-1356-00	Gummiplugg.....	Rubber plug			
4	1	1		F000-7089-00	• Tätningsring	• Oil seal			
5	1	1		F000-5947-00	Kula	Ball			
6	1	1		F000-5948-00	Fjäder.....	Spring			
7	1	1		F000-7101-00	• Lock.....	• Detent cover			
8	1	1		F084-0052-00	• Skruv	• Screw			
9	1	1		F000-6670-00	Växelförare	Shifter			
10	1	1		F000-1106-00	• Låsring	• Retaining ring.....			
11	3	3		F000-4689-00	• Sats- shims.....	• Kit- shim.....			
12	3	3		F000-3876-00	• Bricka	• Washer			
13	1	1		F000-6753-00	Ingående axel kpl.....	Input shaft assy			
14	1	1		F000-1746-00	• Kil	• Key			
15	1	1		F000-3956-00	• Låsring	• Retaining ring.....			
16	1	1		F000-3625-00	Kedja	Chain.....			
17	5	5		F000-7091-00	Bussning	Bushing.....			
18	1	1		F000-7080-00	Drev	Spur gear			
19	1	1		F000-6692-00	Växelkrage.....	Shift collar.....			
20	1	1		F000-7086-00	Axel	Intermediate shaft.....			
21	1	1		F000-3830-00	Kedjehjul.....	Sprocket.....			
22	1	1		F000-7094-00	Distans	Spacer			
23	1	1		F000-5365-00	Drev	Gear, spur			
24	1	1		F000-3867-00	Drev	Gear, spur			
25	1	1		F000-3783-00	Drev.....	Gear, spur			
26	1	1		F000-3869-00	Drev.....	Gear, spur			
27	1	1		F000-5202-00	Drev.....	Gear, spur			
28	1	1		F000-5027-00	Distans	Spacer			
29	1	1		F000-7115-00	Tätningring	Oil seal			
30	1	1		F000-7092-00	Bussning	Bushing			
31	1	1		F000-3890-00	Bricka	Plain washer			
32	1	1		F000-7079-00	Drev	Spur gear			
33	1	1		F000-7083-00	Axel	Idler shaft.....			
34	1	1		F000-3410-00	Distans	Spacer			
35	1	1		F000-5180-00	Drev	Spur gear			
36	2	2		F000-1425-00	Bricka	Washer.....			
37	2	2		F000-3714-00	Distans	Spacer			
38	1	1		F000-3645-00	Kedjehjul.....	Sprocket.....			
39	1	1		F000-7162-00	Distans	Spacer			
40	1	1		F000-7084-00	Axel	Drive shaft.....			
41	1	1		F000-5364-00	Drev.....	Gear, spur			
42	1	1		F000-3866-00	Drev.....	Gear, spur			
43	1	1		F000-3719-00	Drev.....	Gear, spur			
44	1	1		F000-3868-00	Drev.....	Gear, spur			
45	1	1		F000-3683-00	Drev.....	Gear, spur			
46	2	2		F000-7088-00	Tätningring	Oil seal			
47	2	2		F000-3184-00	Bricka	Washer.....			
48	1			F000-7165-10	Hjulaxel- vä	Wheel axle- LH			
48		1		F000-7166-10	Hjulaxel- vä	Wheel axle- LH			
49	2	2		F000-5622-00	Drev.....	Miter gear			
50	2	2		F000-5270-00	Låsring	Retaining ring			
51	1	1		F000-5181-00	Drev.....	Spur gear			
52	2	2		F000-5623-00	Drev.....	Miter gear			
53	1	1		F000-3919-00	Axel	Cross shaft.....			
54	1			F000-7165-20	Hjulaxel- hö.....	Wheel axle- RH.....			
54		1		F000-7166-20	Hjulaxel- hö.....	Wheel axle- RH.....			
55	1	1		F000-4691-00	Sats- shims.....	Kit- shim.....			
56	1	1		F000-7071-A0	Hus- nedre	Housing- lower			
57	1	1		F000-6754-00	Friktionsbelägg- sats.....	Friction puck kit			
58	1	1		F000-7103-00	Bromsskiva.....	Brake disc			

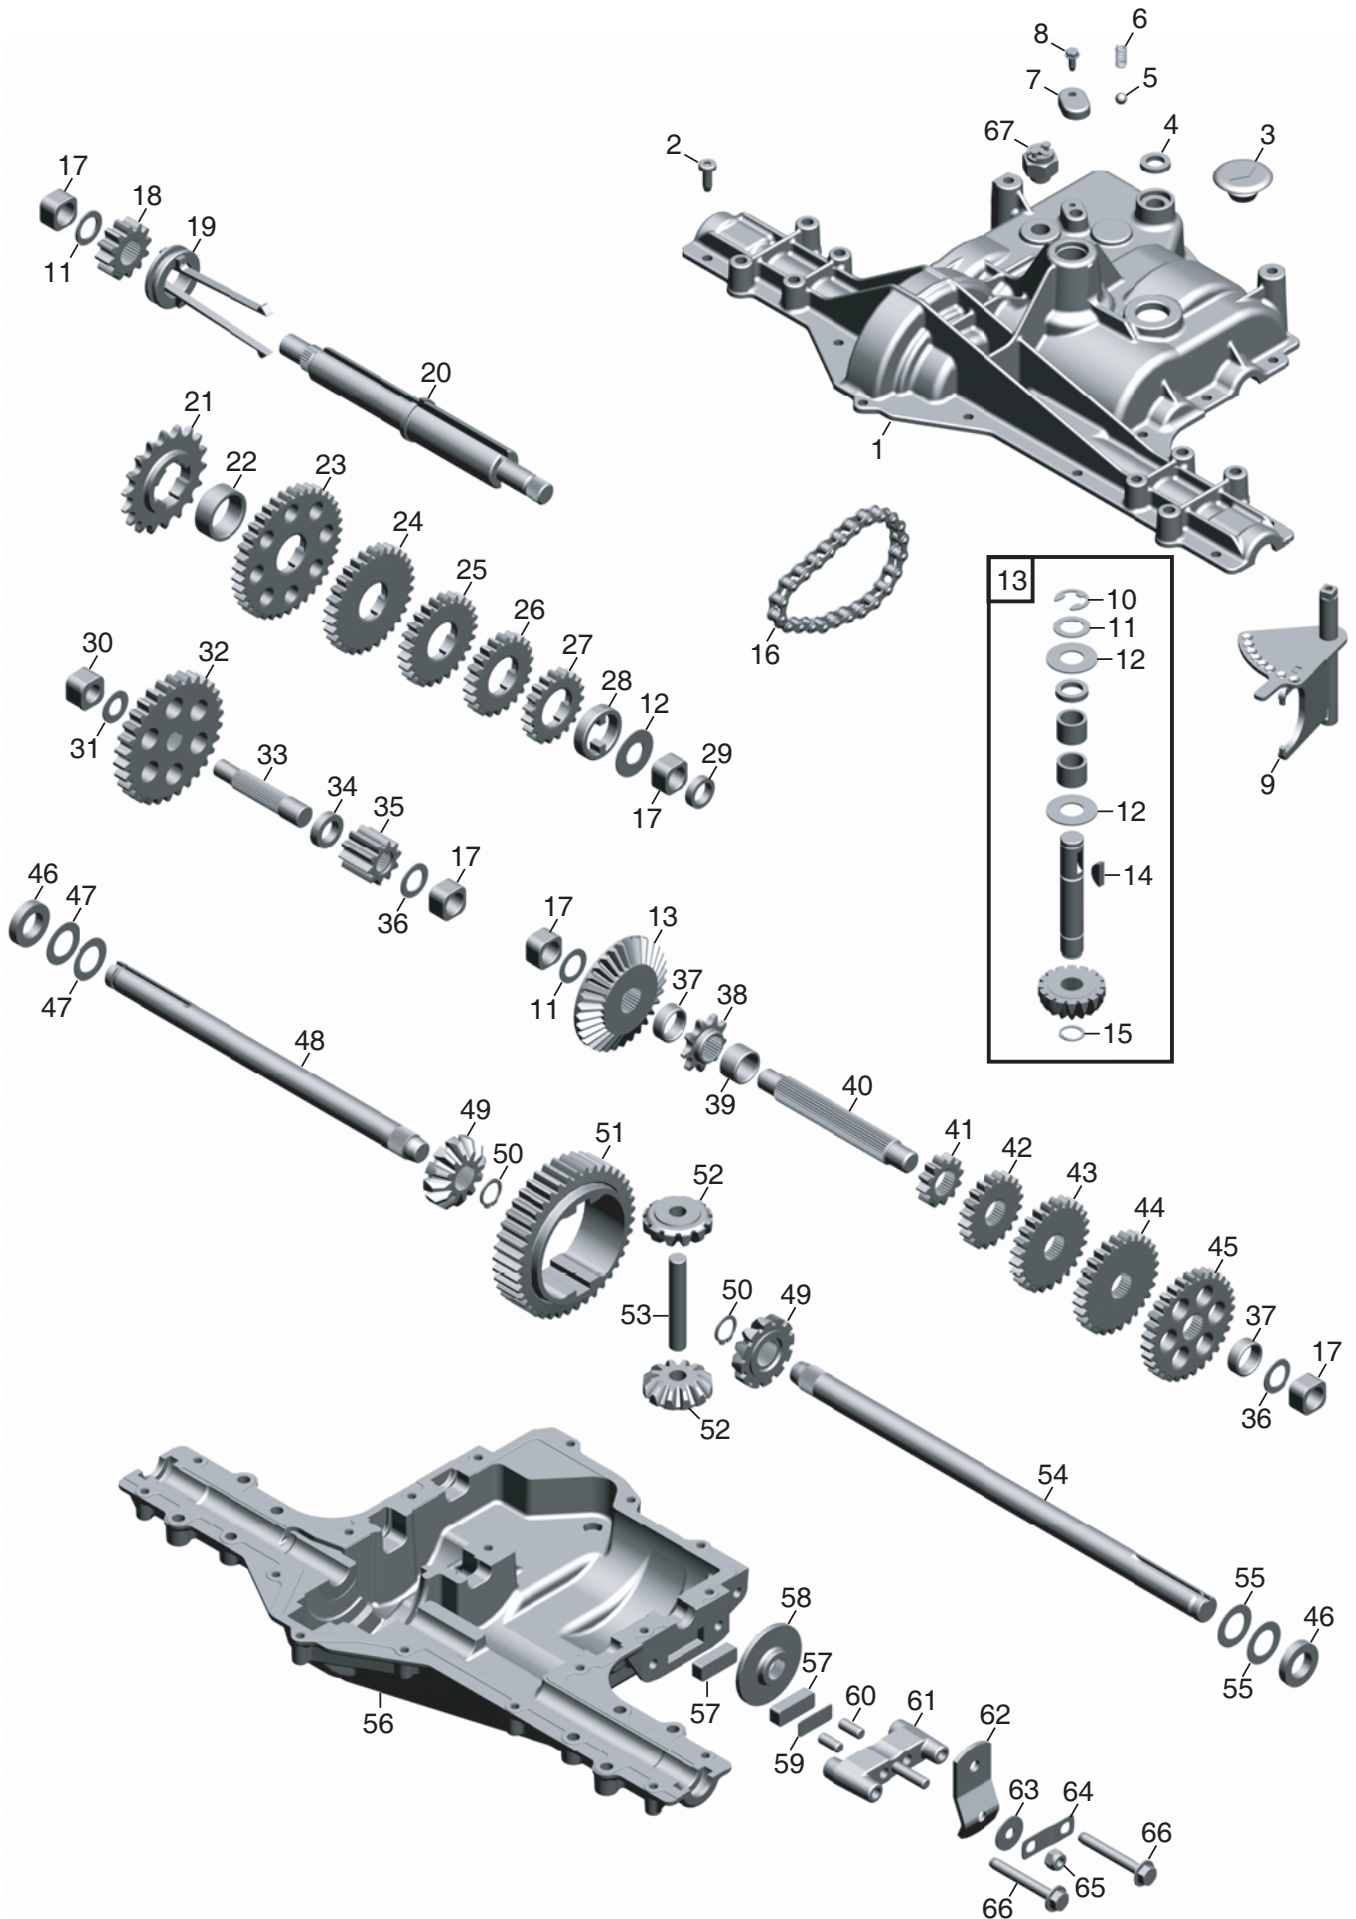

Utgåva Issue 2011-11		Bildnr Picture No 2215		DANA TRANSAXEL 6800-7 6800-8		DANA TRANSAXLE 6800-7 6800-8		Sida Page 432	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	6800 -7	6800 -8							
59	1	1		F000-3758-00	Distans	Spacer			
60	2	2		F000-3843-00	Pinne	Dowel pin			
61	1	1		F000-5554-00	Bromshållare	Brake jaw			
62		1		F000-7029-00	Bromsarm	Actuating lever			
62	1			F000-7032-00	Bromsarm	Actuating lever			
63	1	1		F000-3760-00	Bricka	Washer			
64	1	1		F000-5555-00	Bricka	Bracket			
65	1	1		F000-3847-00	Låsmutter	Lock nut			
66	2	2		F000-5562-00	Skruv	Screw			
67		1		F000-7034-00	Brytare	Switch			