



Reservdelskatalog Parts Catalogue

PARK COMPACT

13-6101-15 - Season 2004


- Use GLOBAL GARDEN PRODUCT Genuine Spare Parts specified in the parts list for repair and/or replacement.
 - The contents described in the parts list may change due to improvement.
 - The drawings of the spare parts are only indicative and might not represent the part in question exactly.
 - The indications "right" - "left" - "front" - "rear" refer to the position of the operator when using the machine.
- When placing orders of parts for repair and/or replacement, make sure that the illustrated parts list is the one applying to the machine's year of manufacture, as shown on the identification plate attached to the machine.

© Copyright 2004 Global Garden Products

All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from GLOBAL GARDEN PRODUCTS.


www.stiga.com

A

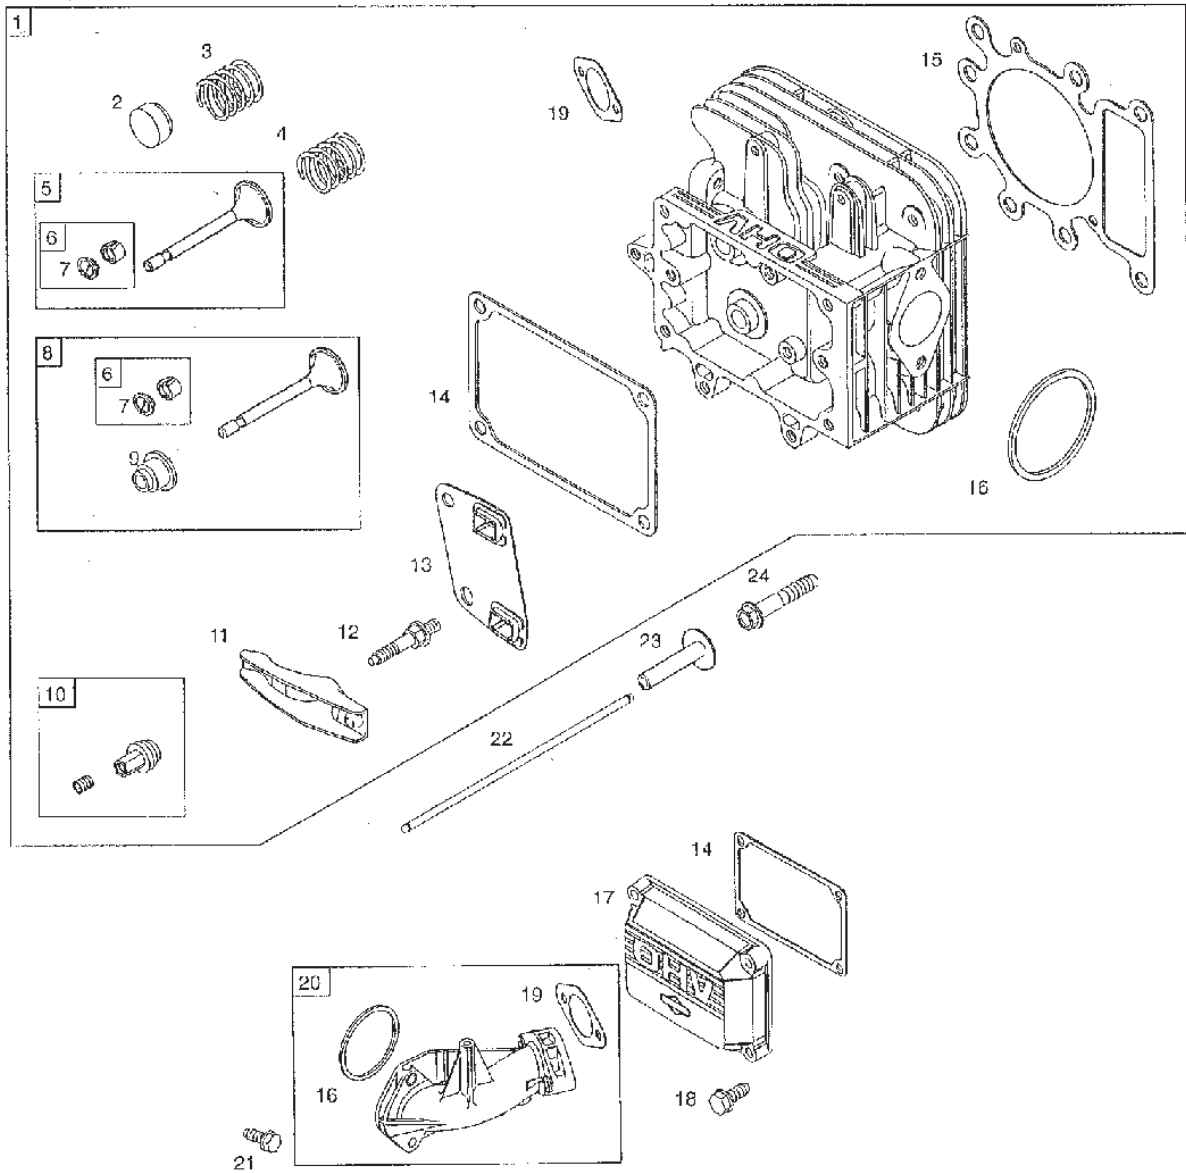


Utgåva Issue 20 - 2015		Topplöck (A)		Cylinder Head (A)	
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
1	1	697396	Topplöck	Cylinder Head	21A907-0113
2	1	691843	Valve cap	Valve cap	21A907-0113
3	1	691279	Valve spring	Valve spring	21A907-0113
4	1	691279	Valve spring	Valve spring	21A907-0113
5	1	495856	Valve-exhaust	Valve-exhaust	21A907-0113
6	2	499586	Valve keeper	Valve keeper	21A907-0113
7	2	690964	Valve retainer	Valve retainer	21A907-0113
8	1	495857	Valve-intake	Valve-intake	21A907-0113
9	1	690968	Valve seal	Valve seal	21A907-0113
10	2	691986	Vipparmsjustering	Rocker arm adjuster	21A907-0113
11	2	691751	Vipparm	Rocker arm	21A907-0113
12	2	691095	Stud	Stud	21A907-0113
13	1	690822	Stötstangsstyrning	Push rod guide	21A907-0113
14	1	272475	Packning	Gasket	21A907-0113
15	1	273280	Topplöckspackning	Cylinder head gasket	21A907-0113
16	1	692138	O-ring	O-ring	21A907-0113
17	1	692492	Ventilkapa	Rocker cover	21A907-0113
18	4	691108	Skruv	Screw	21A907-0113
19	1	692137	Packning	Gasket	21A907-0113
20	1	697361	Insugningsrör	Intake Manifold	21A907-0113
21	2	691148	Skruv	Screw	21A907-0113
22	1	697394	Stötstang (insug)	Push rod (intake)	21A907-0146
22	1	697395	Stötstang (utblas)	Push rod (exhaust)	21A907-0113
23	2	690564	Valve tappet	Valve tappet	21A907-0113
24	8	690360	Skruv	Screw	21A907-0113

A


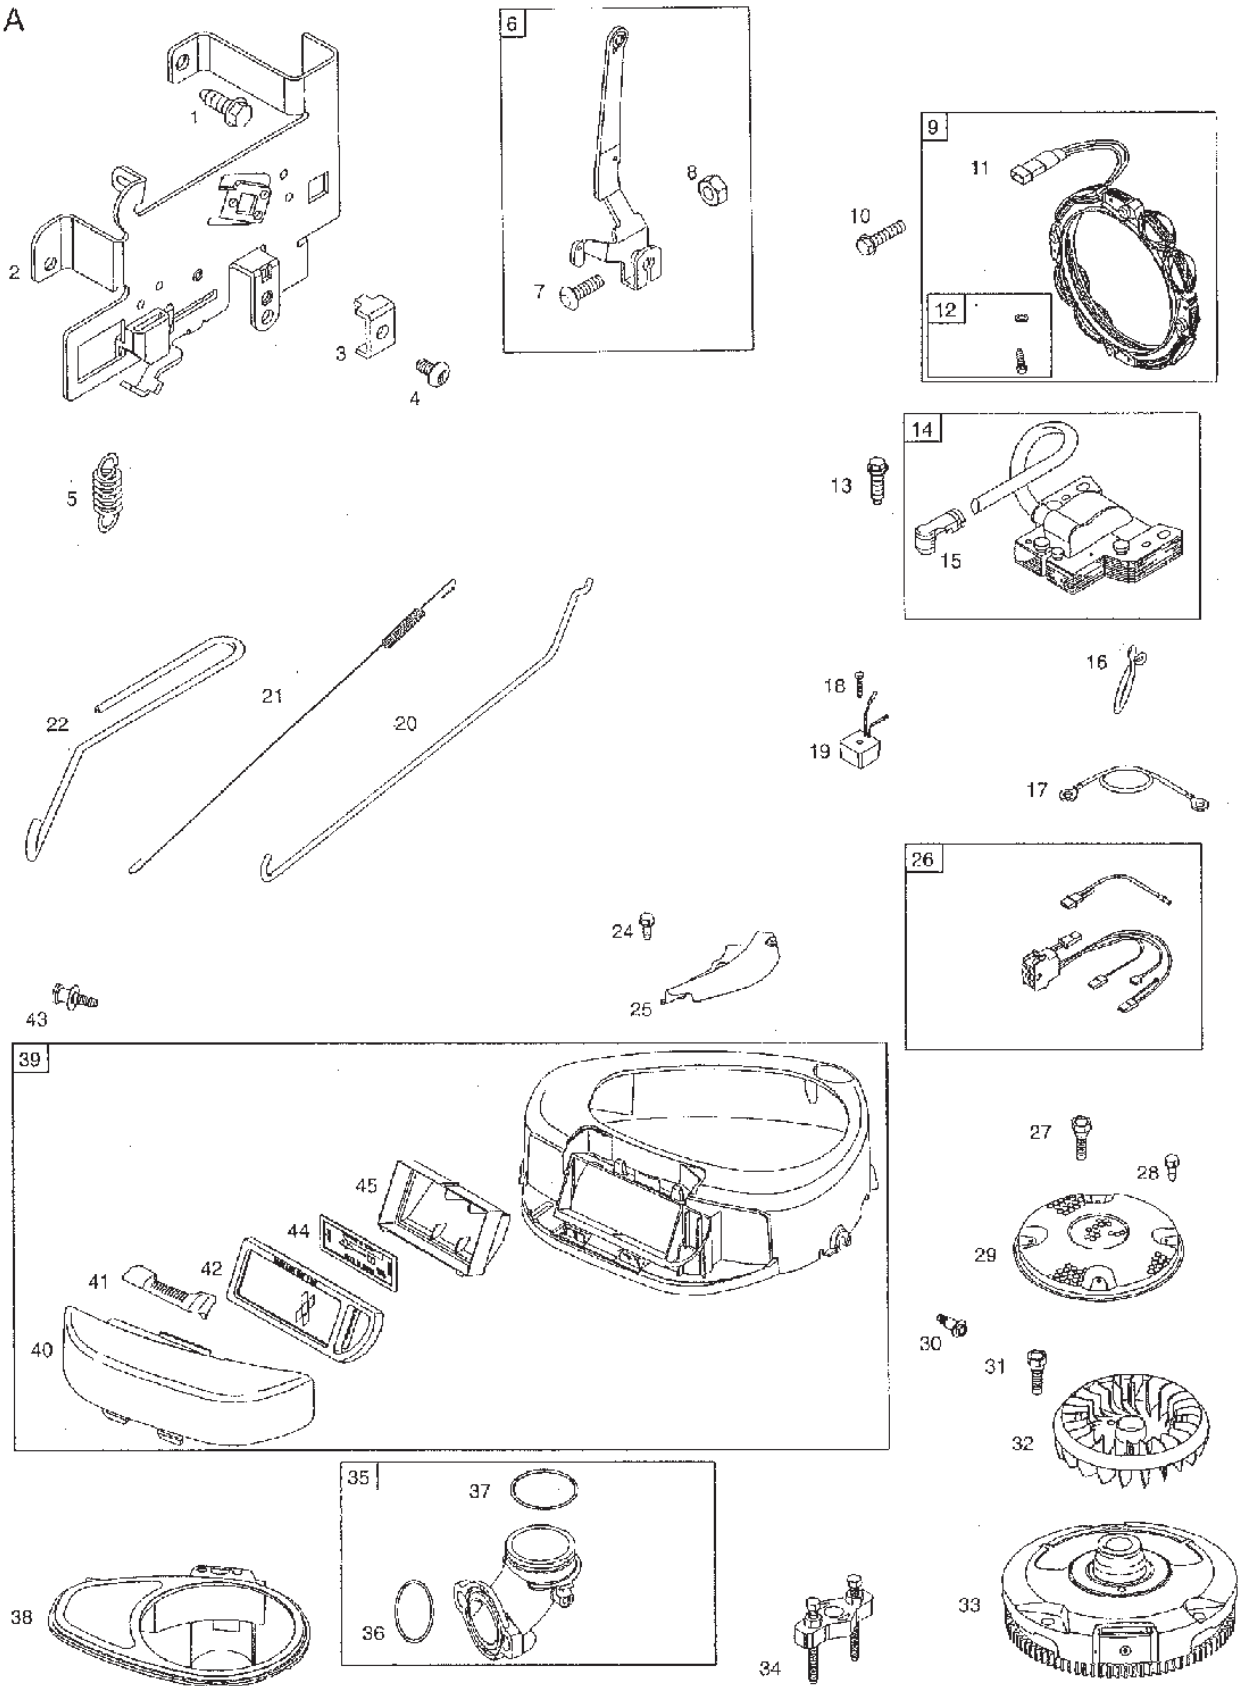


Utgåva Issue 20 - 2015		Regulator (A) Fläkthus (A)		Governor (A) Blower Housing (A)	
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
1	2	691693	Skruv	Screw	
2	1	694042	Fäste	Control Bracket	
3	1	691024	Clamp	Clamp	
4	1	690804	Skruv	Screw	
5	1	690480	Regulatorfjäder	Governor Spring	
5	1	691795	Regulatorfjäder	Governor Spring	21A907-0113
6	1	691374	Governor lever	Governor lever	
7	1	691119	Bult	Bolt	
8	1	691251	Mutter	Nut	
9	1	696457	Generator	Alternator	
10	4	691183	Skruv	Screw	
11	1	393537	Anslutning	Connector	
12	1	698516	Bricka	Washer	
13	2	691061	Skruv	Screw	
14	1	492341	Armature magneto	Armature magneto	
15	1	493880	Terminal	Terminal	
16	1	694123	Wire clip	Wire clip	
17	1	697089	Stop wire	Stop wire	
18	1	697088	Skruv	Screw	
19	1	691188	Regulator	Regulator	
20	1	691841	Governor link	Governor link	
21	1	691842	Fjäder	Spring	
22	1	691840	Choke link	Choke link	
24	2	691003	Skruv	Screw	
25	1	697352	Guard	Guard	
26	1	698329	Kabelhärva	Wiring harness	
27	1	698139	Skruv	Screw	
28	4	697897	Skruv	Screw	
29	1	697133	Roterande skydd	Rotating screen	
30	2	697102	Skruv	Screw	
31	2	690372	Skruv	Screw	
32	1	699044	Fan	Fan	
33	1	698282	Flywheel	Flywheel	
34	1	19203	Avdragare	Puller	
35	1	697122	Insugningsrör	Intake elbow	
36	1	691917	O-ring	O-ring	
37	1	697123	O-ring	O-ring	
38	1	698368	Trim plate	Trim plate	
39	1	697870	Blower housing	Blower housing	
40	1	697420	Cover	Cover	
41	1	697419	Spärr	Latch	
42	1	698413	Luftfilter	Air Cleaner Filter	
43	1	697103	Skruv	Screw	
44	1	697292	Förfilter	Pre-cleaner filter	
45	1	697155	Retainer	Retainer	

A

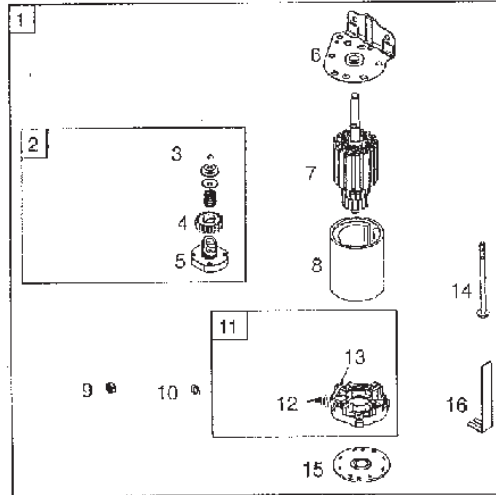


17
18

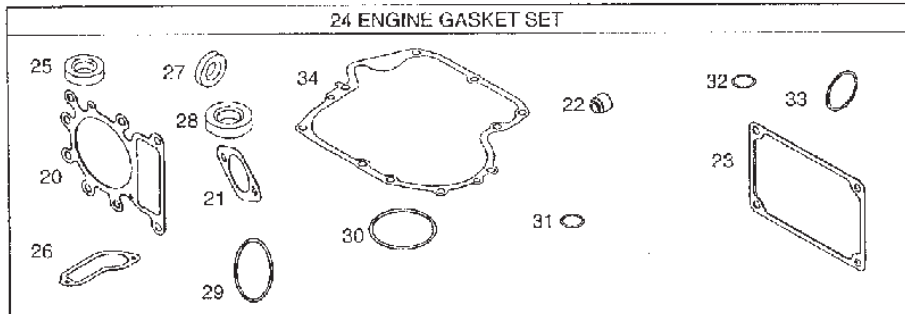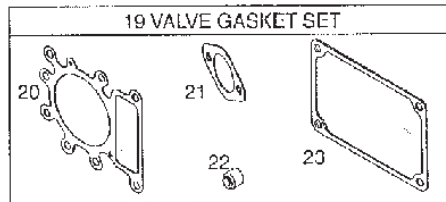

Utgåva Issue 20 - 2015		Startmotor (A) Packningssats (A)		Starter Motor (A) Gasket Set (A)	
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
1	1	693551	Starter motor assy	Starter motor assy	
2	1	693699	Startdrev	Starter Drive	
3	1	691265	Retaining ring	Retaining ring	
4	1	693713	Drev	Pinion gear	
5	1	692024	Koppling	Drive clutch	
6	1	691283	Lock	Drive cap	
7	1	692034	Armature	Armature	
8	1	693757	Starter housing	Starter housing	
9	1	691029	Mutter	Nut	
10	1	691261	Bricka	Washer	
11	1	691293	Brush retainer	Brush retainer	
12	1	693167	Mutter	Nut	
13	1	497608	Brush set	Brush set	
14	2	690323	Bult	Bolt	
15	1	691286	Botten	End Cap	
16	1	691532	Strap	Strap	
17	1	691224	Wire clip	Wire clip	
18	1	690372	Skruv	Screw	
19	1	691581	Packningssats-motor	Gasket set-valve	
20	1	273280	Topplöckspackning	Cylinder head gasket	
21	1	692137	Packning	Gasket	
22	1	690968	Valve seal	Valve seal	
23	1	272475	Packning	Gasket	
24	1	697151	Packningssats-motor	Gasket set-engine	
25	1	391086	Tätningring	Seal	
26	1	697109	Packning	Gasket	
27	1	692407	Seal	Seal	
28	1	690947	Oil seal	Oil seal	
29	1	691917	O-ring	O-ring	
30	1	697123	O-ring	O-ring	
31	1	691032	Tube seal	Tube seal	
32	1	691031	O-ring	O-ring	
33	1	692138	O-ring	O-ring	
34	1	697110	Packning	Gasket	

A




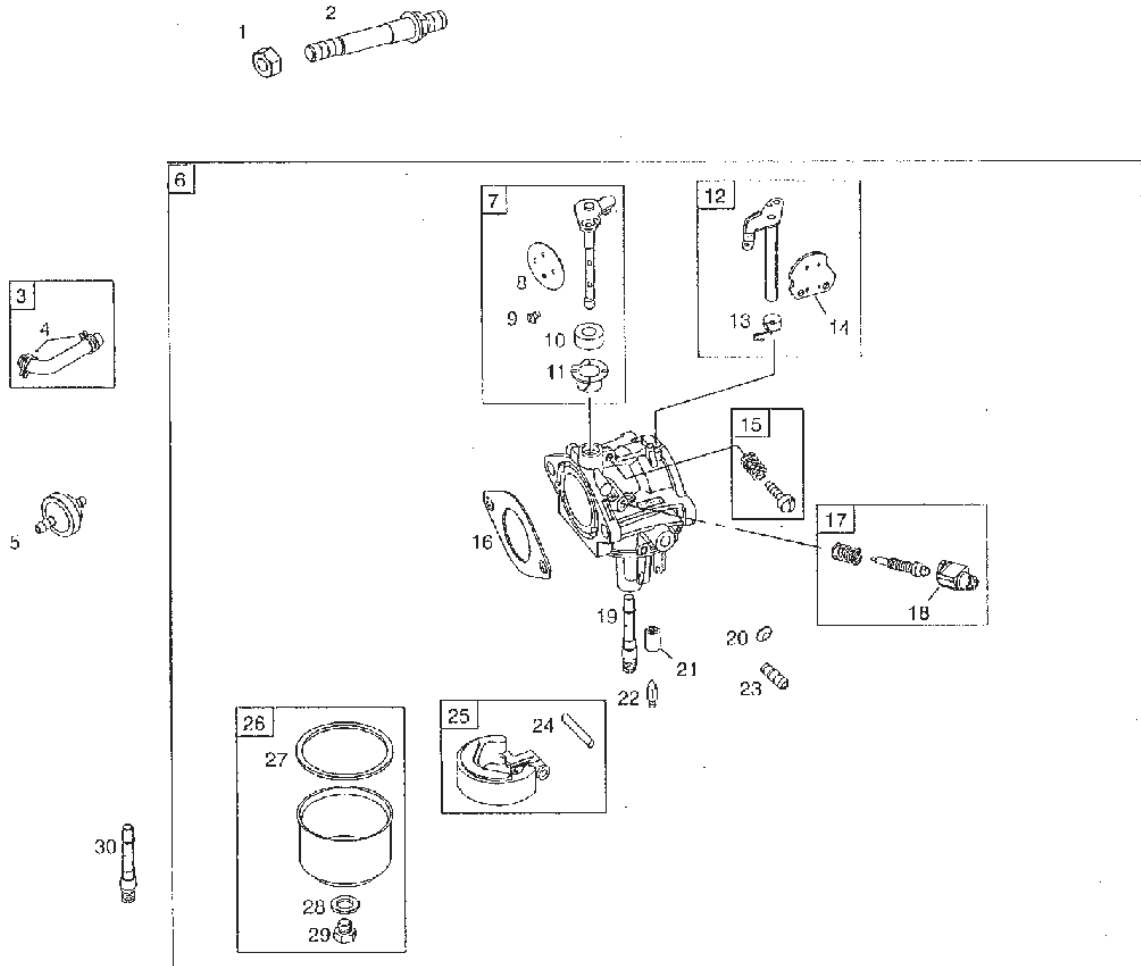


31 CARBURETOR OVERHAUL KIT			
16	22	27	10
11	21	19	32
9	20	26	33
24			









Utgåva Issue 20 - 2015		Förgasare (A) Packningssats (A)		Carburettor (A) Gasket Set (A)	
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
1	2	690958	Mutter	Nut	
2	2	690227	Stud	Stud	
3	1	699331	Fuel line	Fuel line	
4	2	95162	Slangklämma	Hose clamp	
5	1	394358	Bränslefilter	Fuel filter	
6	1	790019	Förgasare kpl	Carburettor Assy	
7	1	790175	Spjällsaxeln	Throttle Shaft	
8	1	790024	Gasspjäll	Throttle Valve	
9	1	691636	Skruv	Screw	
10	1	691326	Shaft seal	Shaft seal	
11	1	690602	Shaft bushing	Shaft bushing	
12	1	699027	Choke shaft	Choke shaft	
13	1	690802	Spring and seal	Spring and seal	
14	1	691227	Choke valve	Choke valve	
15	1	495800	Skruv	Screw	
16	1	692137	Packning	Gasket	
17	1	498030	Nalventil	Needle valve	
18	1	691333	Begränsningshuv	Limiter cap	
19	1	790025.	Nozzle	Nozzle	Standard
20	1	694524	Welch plug	Welch plug	
21	1	690577	Säte	Inlet seat	
22	1	231855	Nalventil	Inlet needle valve	
23	1	698174	Nippel	Hose connector	
24	1	690525	Flottörxel	Float hinge pin	
25	1	494381	Flottör	Float	
26	1	495933	Bowl	Bowl	
27	1	281165	Packning	Gasket	
28	1	692255	Bricka	Washer	
29	1	691657	Skruv	Screw	
30	1	790028	Nozzle	Nozzle	High altitude
31	1	790031.	Carb.overhaul kit	Carb.overhaul kit	
32	1	691917	O-ring	O-ring	
33	1	697123	O-ring	O-ring	

A

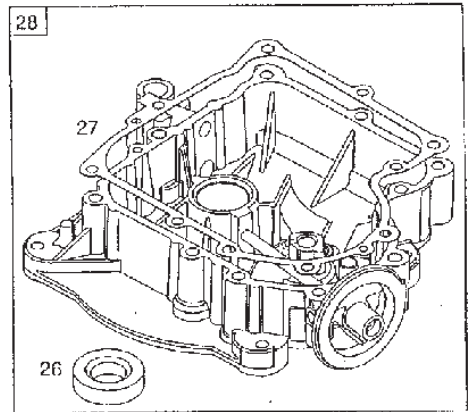
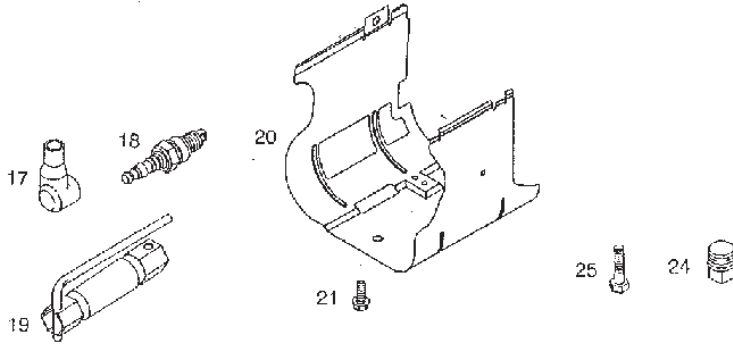
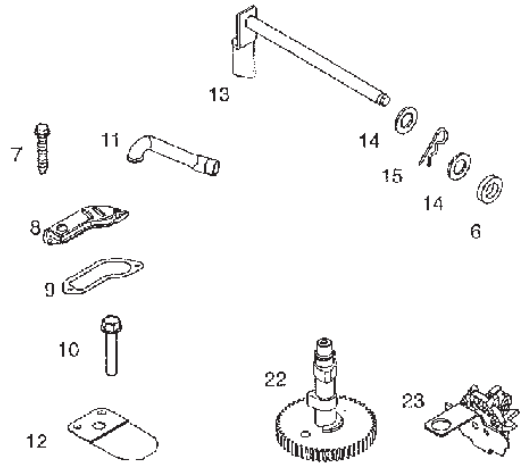
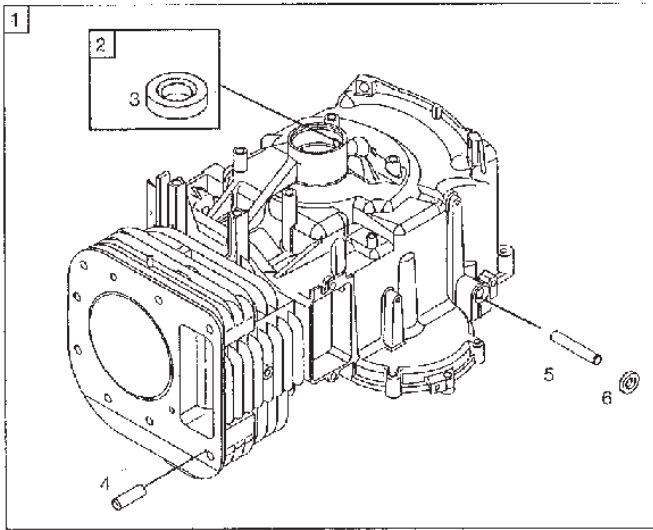


B

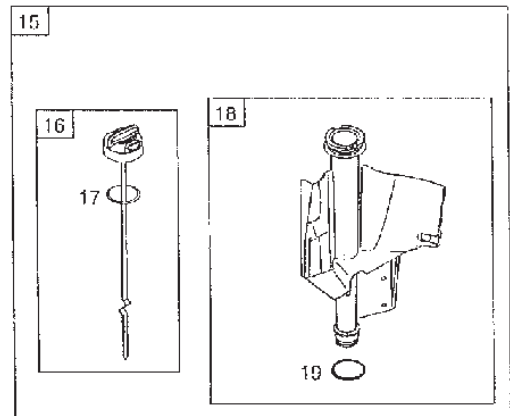
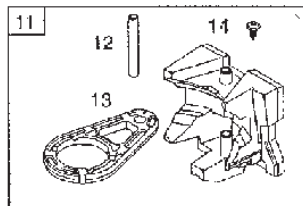
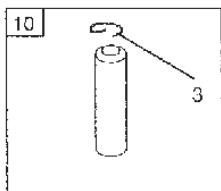
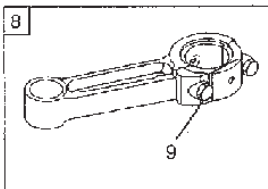
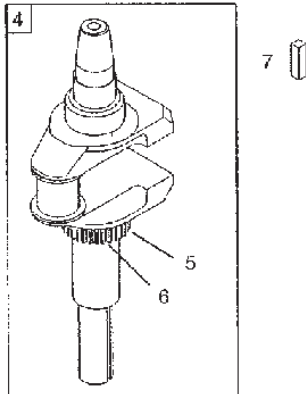
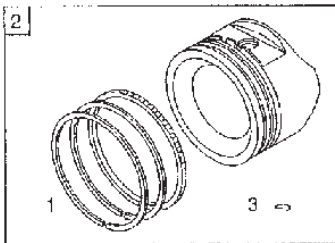


Utgåva Issue 20 - 2015		Cylinder (A) Vevaxel (B)		Cylinder (A) Crankshaft (B)	
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
1	1	697377	Cylinder kpl	Cylinder Assy	21A907-0113
1	1	698375	Ring set	Ring set	Standard
1	1	698377	Ring set	Ring set	.020" oversize
1	1	698375	Ring set	Ring set	Standard _/ 21A907-0113
1	1	698377	Ring set	Ring set	.020" oversize _/ 21A907-0113
2	1	399265	Bussning	Bushing	21A907-0113
2	1	698371	Kolv kpl	Piston Assy	Standard
2	1	698373	Kolv kpl	Piston Assy	.020" oversize
2	1	698371	Kolv kpl	Piston Assy	Standard _/ 21A907-0113
2	1	698373	Kolv kpl	Piston Assy	.020" oversize _/ 21A907-0113
3	1	391086	Tätningarring	Seal	21A907-0113
3	2	698469	Lasring	Lock	21A907-0113
4	2	690959	Tapp	Locating pin	21A907-0113
4	1	697390	Crankshaft	Crankshaft	21A907-0113
5	1	697144	Bussning	Bushing	21A907-0113
5	1	697128	Timing gear	Timing gear	21A907-0113
6	1	692407	Seal	Seal	21A907-0113
6	1	691639	Kil	Key	21A907-0113
7	2	697157	Skruv	Screw	21A907-0113
7	1	222698	Kil	Key	21A907-0113
8	1	697112	Cover	Cover	21A907-0113
8	1	697364	Connecting Rod	Connecting Rod	21A907-0113
9	1	697109	Packning	Gasket	21A907-0113
9	2	692852	Skruv	Screw	21A907-0113
10	1	697104	Skruv	Screw	21A907-0113
10	1	697099	Kolvsprint	Piston Pin	21A907-0113
11	1	697113	Breather Tube	Breather Tube	21A907-0113
11	1	697391	Motvikt	Counterweight	21A907-0113
12	1	697124	Breather reed	Breather reed	21A907-0113
12	1	697392	Stift	Pin	21A907-0113
13	1	692012	Governor crank	Governor crank	21A907-0113
13	1	697607	Länk	Link	21A907-0113
14	2	691691	Bricka	Washer	21A907-0113
14	2	697156	Plugg	Plug	21A907-0113
15	1	691620	Lasnal	Cotter pin	21A907-0113
15	1	697611	Oil dipstick assy	Oil dipstick assy	21A907-0113
16	1	697086	Oil dipstick	Oil dipstick	21A907-0113
17	1	691909	Spark plug boot	Spark plug boot	21A907-0113
17	1	691031	O-ring	O-ring	21A907-0113
18	1	9400-0244-00	Tändstift	Spark Plug	21A907-0113
18	1	697184	Oljerör	Dipstick tube	21A907-0113
19	1	89838	Hylsnyckel	Spark plug wrench	21A907-0113
19	1	691032	Tube seal	Tube seal	21A907-0113
20	1	697359	Cylinder shield	Cylinder shield	21A907-0113
21	1	691003	Skruv	Screw	21A907-0113
22	1	699016	Kamaxel	Camshaft	21A907-0113


A

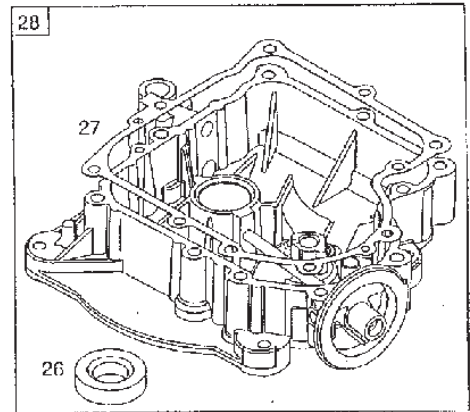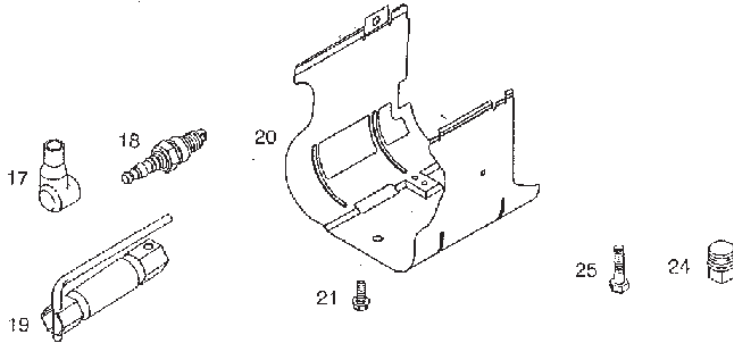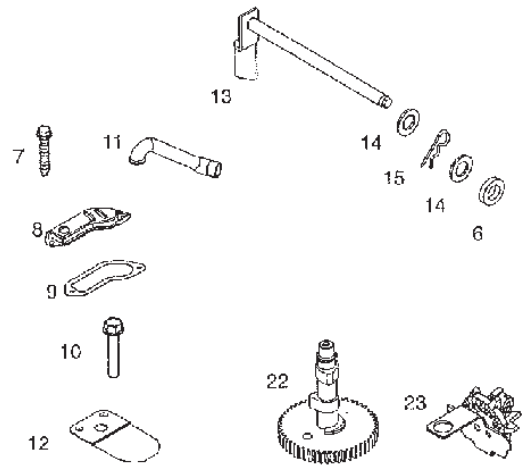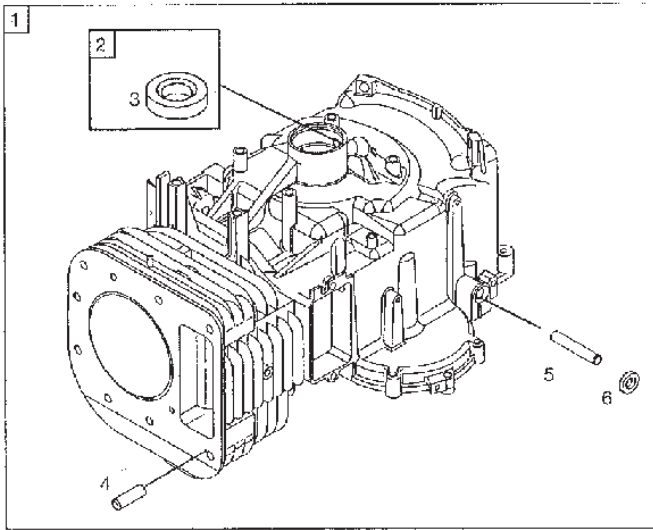


B

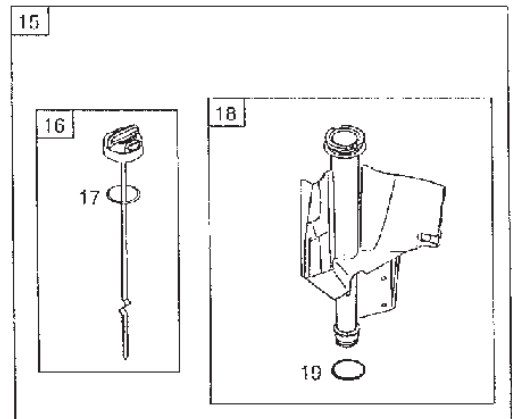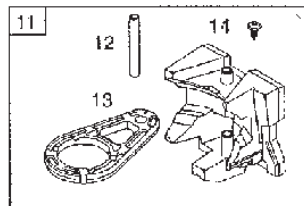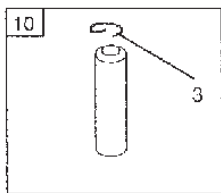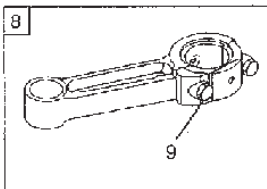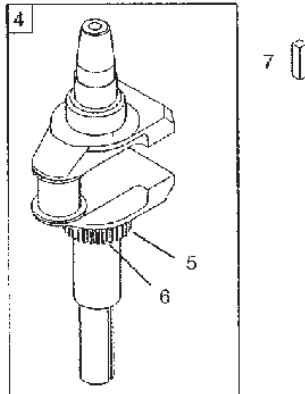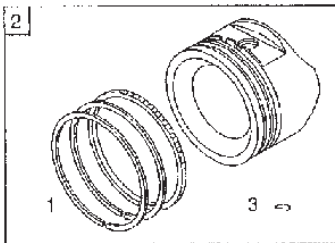


Utgåva Issue 20 - 2015		Cylinder (A) Vevaxel (B) Cylinder (A) Crankshaft (B)			
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
23	1	691968	Oil slinger	Oil slinger	21A907-0113
24	1	690946	Oil drain plug	Oil drain plug	21A907-0113
25	10	692125	Skruv	Screw	21A907-0113
26	1	690947	Oil seal	Oil seal	21A907-0113
27	1	697110	Packning	Gasket	21A907-0113
28	1	697106	Oljesump	Engine sump	21A907-0113

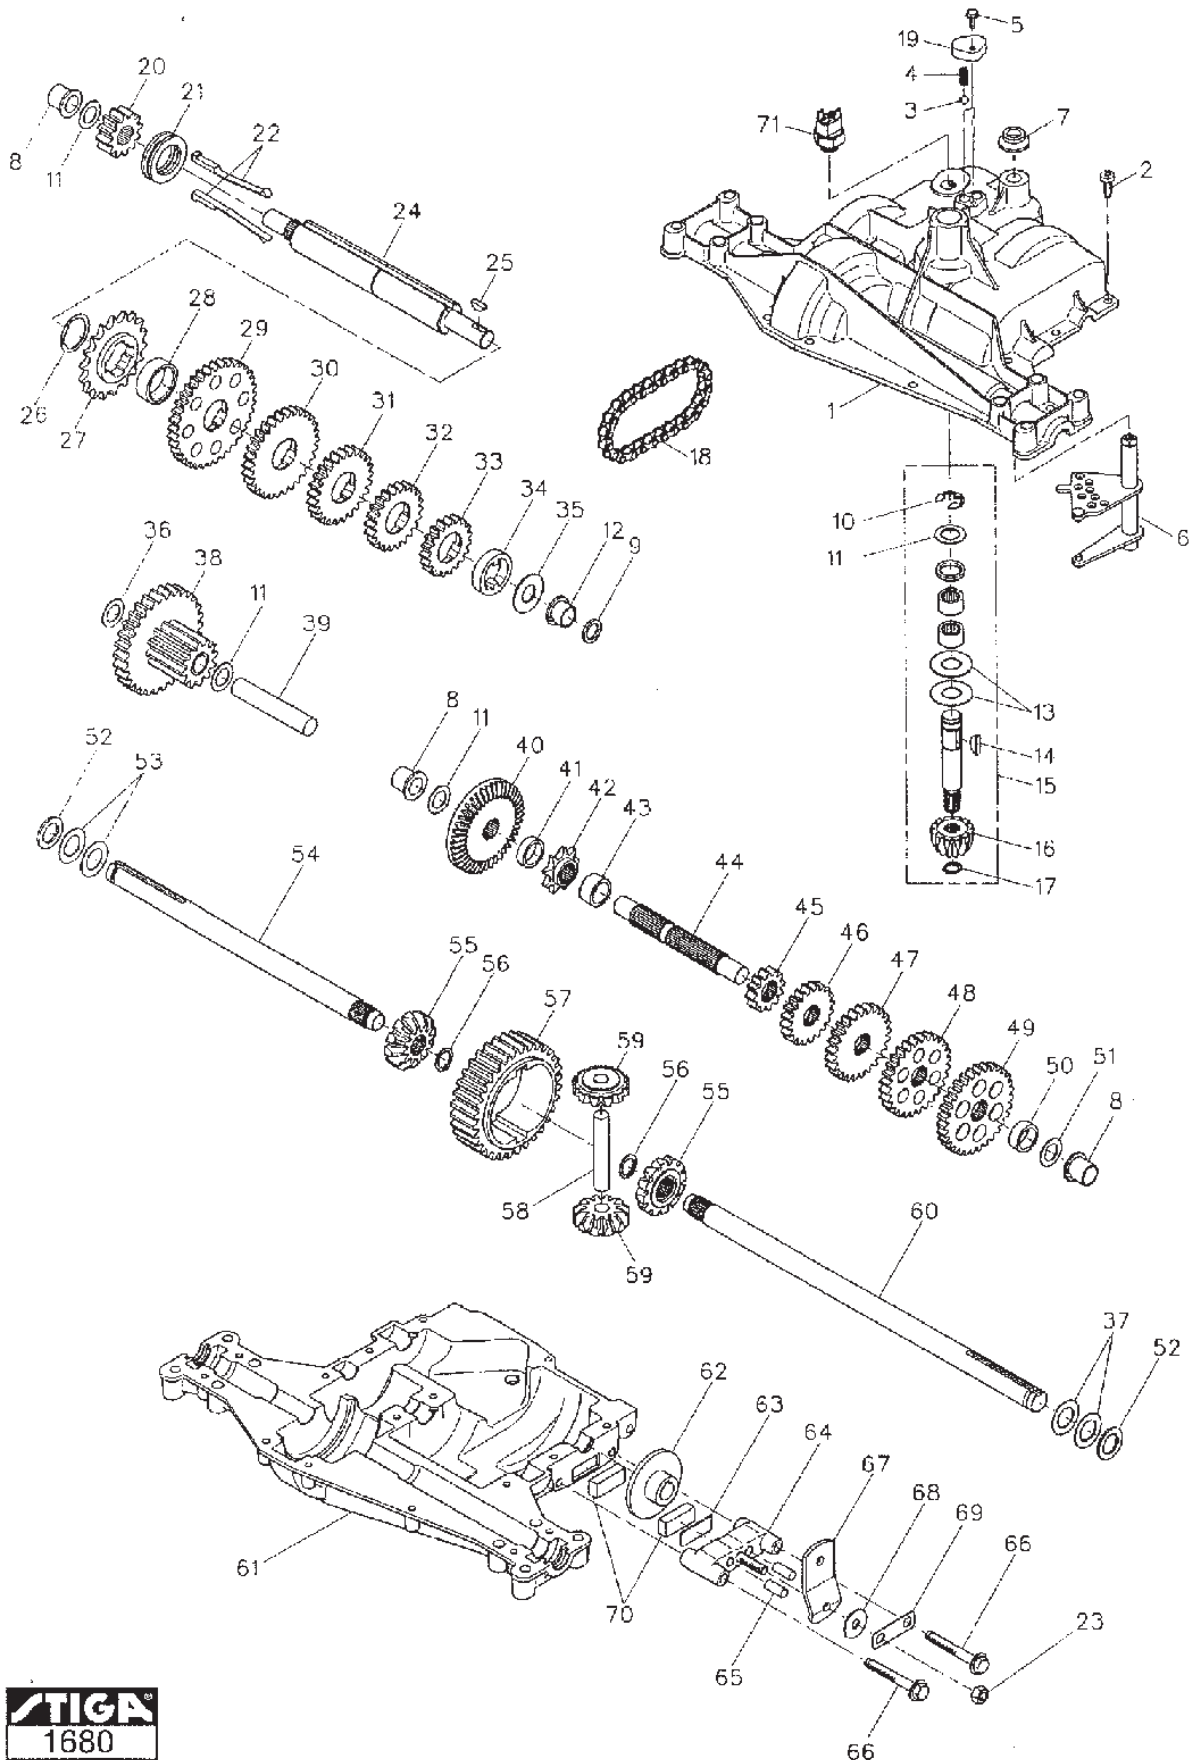


Utgåva Issue 20 - 2015		Transaxel		Transmission	
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
0	1	1134-5282-01	Transaxel (Dana 4360-198)	Transaxle Assy (Dana 4360-198)	/4360-198/
1	1	F000-5962-R0	Hus-Övre	Housing-Upper	/4360-198/
2	16	F000-1919-00	Skruv	Screw	
3	2	F000-5947-00	Kula	Detent Ball	
4	2	F000-5948-00	Fjäder	Spring, Detent	
5	1	F084-0052-00	Skruv	Screw	/4360-198/
6	1	F000-6517-00	Växelförare	Assy, Kit, Shifter	/4360-198/
7	1	F000-7010-00	Hylsa	V-Ring	/4360-198/
8	3	F000-5510-00	Flänslager	Bearing, Flange	
9	1	F000-5508-00	Tätningring	Seal, Oil	/4360-198/
10	1	F000-1106-00	Lasring	Ring, Retaining	/4360-198/
11	4	F000-4689-00	Sats-Shims	Assy, Kit, Shim, .625 Shaft	
12	1	F000-5511-00	Flänslager	Bearing, Flange	/4360-198/
13	2	F000-3876-00	Bricka	Washer	
14	1	F000-1746-00	Woodruffkil	Woodruff Key	/4360-198/
15	1	F000-6205-00	Ingaende Axel Kpl	Input Shaft Assy	/4360-198/
16	1	F000-5620-00	Drev	Pinion, Bevel, 12T	12T/4360-198/
17	1	F000-3624-00	Lasring	Ring, Retaining	/4360-198/
18	1	F000-3625-00	Kedja	Chain, 24 Pitches	24 link/4360-198/
19	1	F000-5950-00	Lock	Cover, Detent	/4360-198/
20	1	F000-5627-00	Drev 12T	Gear, Spur, 12T	12T/4360-198/
21	1	F000-5303-00	Hylsa	Collar, Clutch	/4360-198/
22	1	F000-4758-00	Sats-Kilar	Assy, Kit, Clutch Keys	/4360-198/
23	1	F000-3847-00	Mutter	Nut	/4360-198/
24	1	F000-5737-00	Mellanaxel	Shaft, Intermediate	/4360-198/
25	1	F000-1375-00	Woodruffkil	Woodruff Key	/4360-198/
26	1	F000-3627-00	Lasring	Ring, Retaining	/4360-198/
27	1	F000-3830-00	Kedjehjul 18T	Sprocket, 18T	/4360-198/
28	1	F000-3841-00	Distans	Spacer	/4360-198/
29	1	F000-5365-00	Drev 37T	Gear, Spur, 37T	37T/4360-198/
30	1	F000-3867-00	Drev 30T	Gear, Spur 30T	30T/4360-198/
31	1	F000-3783-00	Drev 25T	Gear, Spur 25T	25T/4360-198/
32	1	F000-3869-00	Drev 22T	Gear, Spur 22T	22T/4360-198/
33	1	F000-5202-00	Drev 19T	Gear, Spur, 19T	19T/4360-198/
34	1	F000-5027-00	Distans	Spacer	/4360-198/
35	1	F000-3628-00	Bricka	Washer	/4360-198/
36	1	F000-1425-00	Bricka	Washer	/4360-198/
37	1	F000-4691-00	Sats-Shims	Assy, Kit, Shim, .750 Shaft	/4360-198/
38	1	F000-6358-00	Drev 12T+30T	Assy, Gear, Comb., 12T & 30T	12T+30T/4360-198/
39	1	F000-3967-00	Axel	Shaft, Idler	/4360-198/
40	1	F000-7003-00	Drev 36T	Gear, Bevel, 36T	36T/4360-198/
41	1	F000-3630-00	Distans	Spacer	/4360-198/
42	1	F000-3645-00	Kedjehjul 9T	Sprocket, 9T	9T/4360-198/
43	1	F000-5016-00	Distans	Spacer	/4360-198/
44	1	F000-5015-00	Drivaxel	Drive Shaft	/4360-198/
45	1	F000-5364-00	Drev 12T	Gear, Spur, 12T	12T/4360-198/
46	1	F000-3866-00	Drev 20T	Gear, Spur 20T	20T/4360-198/
47	1	F000-3719-00	Drev 25T	Gear, Spur, 25T	25T/4360-198/
48	1	F000-3868-00	Drev 28T	Gear, Spur 28T	28T/4360-198/

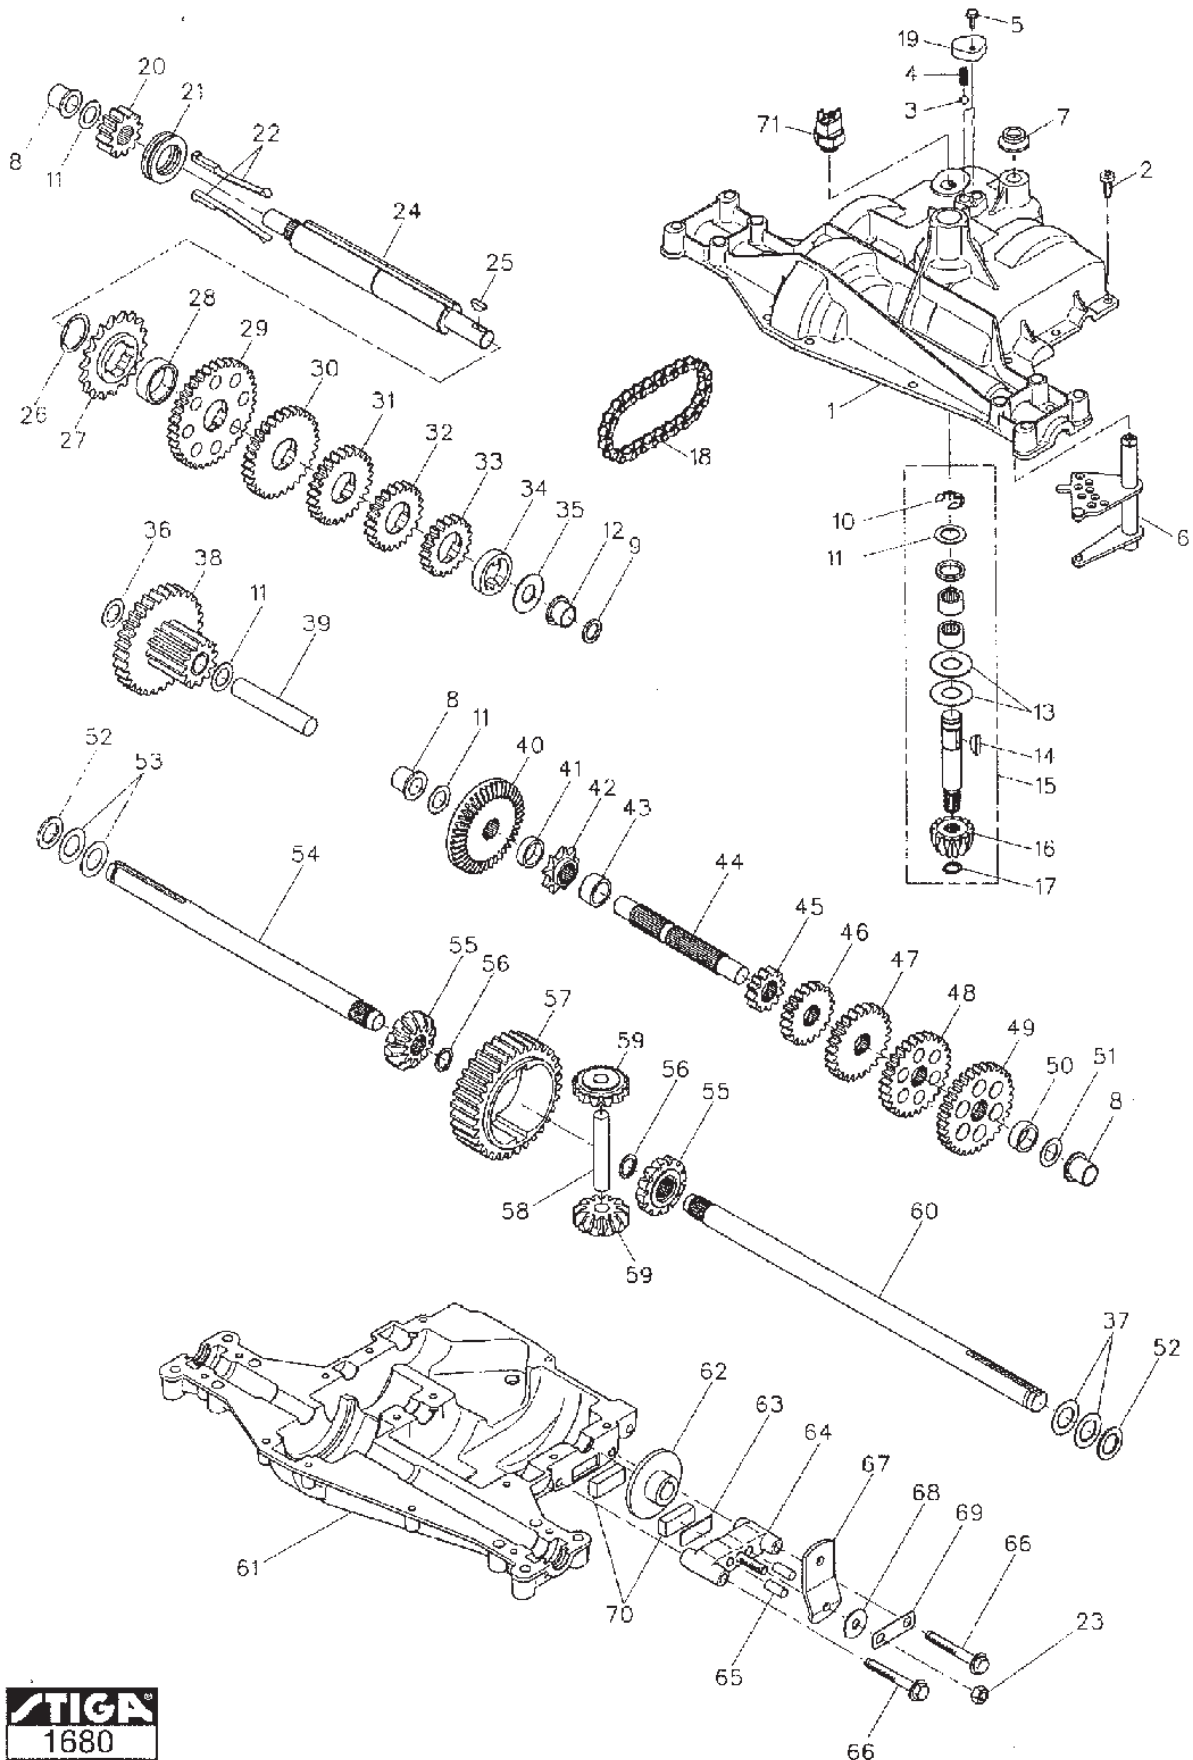


Utgåva Issue 20 - 2015		Transaxel		Transmission	
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
49	1	F000-3683-00	Drev 31T	Gear, Spur, 31T	31T/4360-198/
50	1	F000-3714-00	Distans	Spacer	/4360-198/
51	1	F000-1145-00	Bricka	Washer	/4360-198/
52	2	F000-5130-00	Bricka	Washer	
53	2	F000-3184-00	Bricka	Washer	
54	1	F000-7030-10	Hjulaxel-Vä	Wheel Axle-Lh	/4360-198/
55	2	F000-5622-00	Drev 12T	Gear, Miter, 12T, Splined	12T
56	2	F000-5270-00	Lasring	Ring, Retaining	
57	1	F000-3839-00	Drev 32T	Gear, Spur, 32T	32T/4360-198/
58	1	F000-3919-00	Axel	Shaft, Cross	/4360-198/
59	2	F000-5623-00	Drev 12T	Gear, Miter, 12T, Idler	12T
60	1	F000-7030-20	Hjulaxel-Hö	Wheel Axle-Rh	/4360-198/
61	1	F000-5304-M0	Hus-Undre	Housing-Lower	/4360-198/
62	1	F000-5960-00	Bromsskiva	Disc, Brake	/4360-198/
63	1	F000-3758-00	Distans	Spacer	/4360-198/
64	1	F000-5554-00	Bromshallare	Jaw, Brake	/4360-198/
65	2	F000-3843-00	Sprint	Dowel	
66	2	F000-5562-00	Skruv	Screw	
67	1	F000-7029-00	Bromsarm	Actuating Lever	/4360-198/
68	1	F000-3760-00	Bricka	Washer	/4360-198/
69	1	F000-5555-00	Bricka	Bracket, Anti-Rotation	/4360-198/
70	2	F000-3907-00	Friktionsbelägg	Puck,Friction	
71	1	F000-7034-00	Brytare	Neutral Switch	/4360-198/
98	1	F000-4300-00	Smörjfett	Grease	Ej ill/not ill.

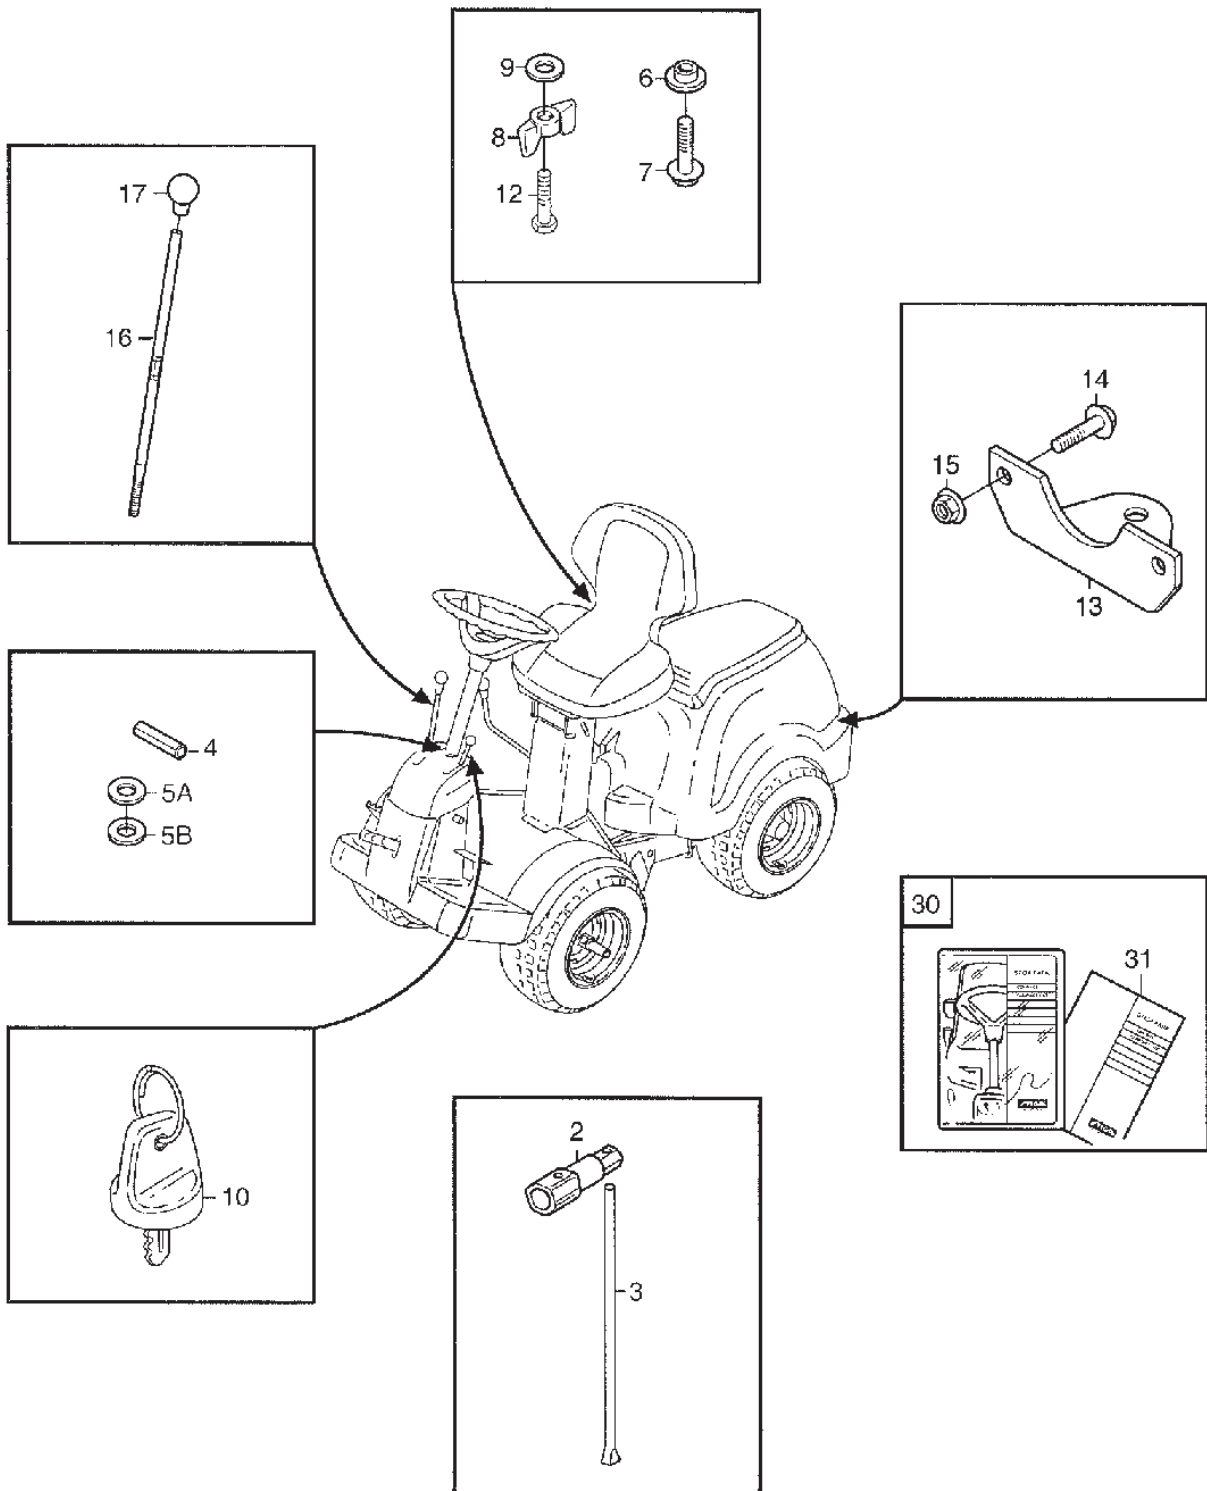





Utgåva Issue 20 - 2015		Tillbehörspasor Accessory Bags			
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
0	1	1134-4249-06	Tillbehörspase	Accessory Bag	Inkl. pos 1 - 17
2	1	1134-4541-01	Nyckel för tändningslas	Spark Plug Wrench	5/8" (16 mm)/21 mm
3	1	1111-2113-01	Stang	Rod	
4	1	9595-0262-00	Spännstift	Locating Pin	
5	1	9699-0103-02	Bricka	Washer	0.5 mm
5	1	9699-0114-02	Bricka	Washer	1.0 mm
6	2	1134-4185-01	Ansatsbricka	Flange Washer	
7	2	9959-0820-16	Skruv	Screw	
8	2	1134-4481-01	Vingmutter	Wing Nut	
9	2	9699-0062-02	Bricka	Washer	
10	2	1134-4734-01	Tändningsnyckel	Ignition Key	
12	2	9997-0820-16	Skruv	Screw	
13	1	1134-5512-01	Dragplat5-01	Towing Plate	
14	2	9959-0820-16	Skruv	Screw	
15	2	9739-0831-22	Mutter	Nut	
16	1	1134-5482-01	Växelspak	Gear Shift Lever	
17	1	1134-2551-01	Knopp	Knob	
30	1	1134-3771-72	Fp.Instr.Bok (Park kplact)	Folder W.Manuals	
31	1	8211-0209-11	Säkerh. Föreskrifter Front Mowers	Safety Regulations Front Mowers	
31	1	8211-0277-04	Servicebok Park	Service Book Park	
31	1	8211-1023-01	Bruksanvisning	Owner's Manual	
31	1	8211-1024-01	Monteringsanvisning	Assy Instruction-Park Compact	
31	1	8211-2002-03	Garantikort Rider	Warranty Card	

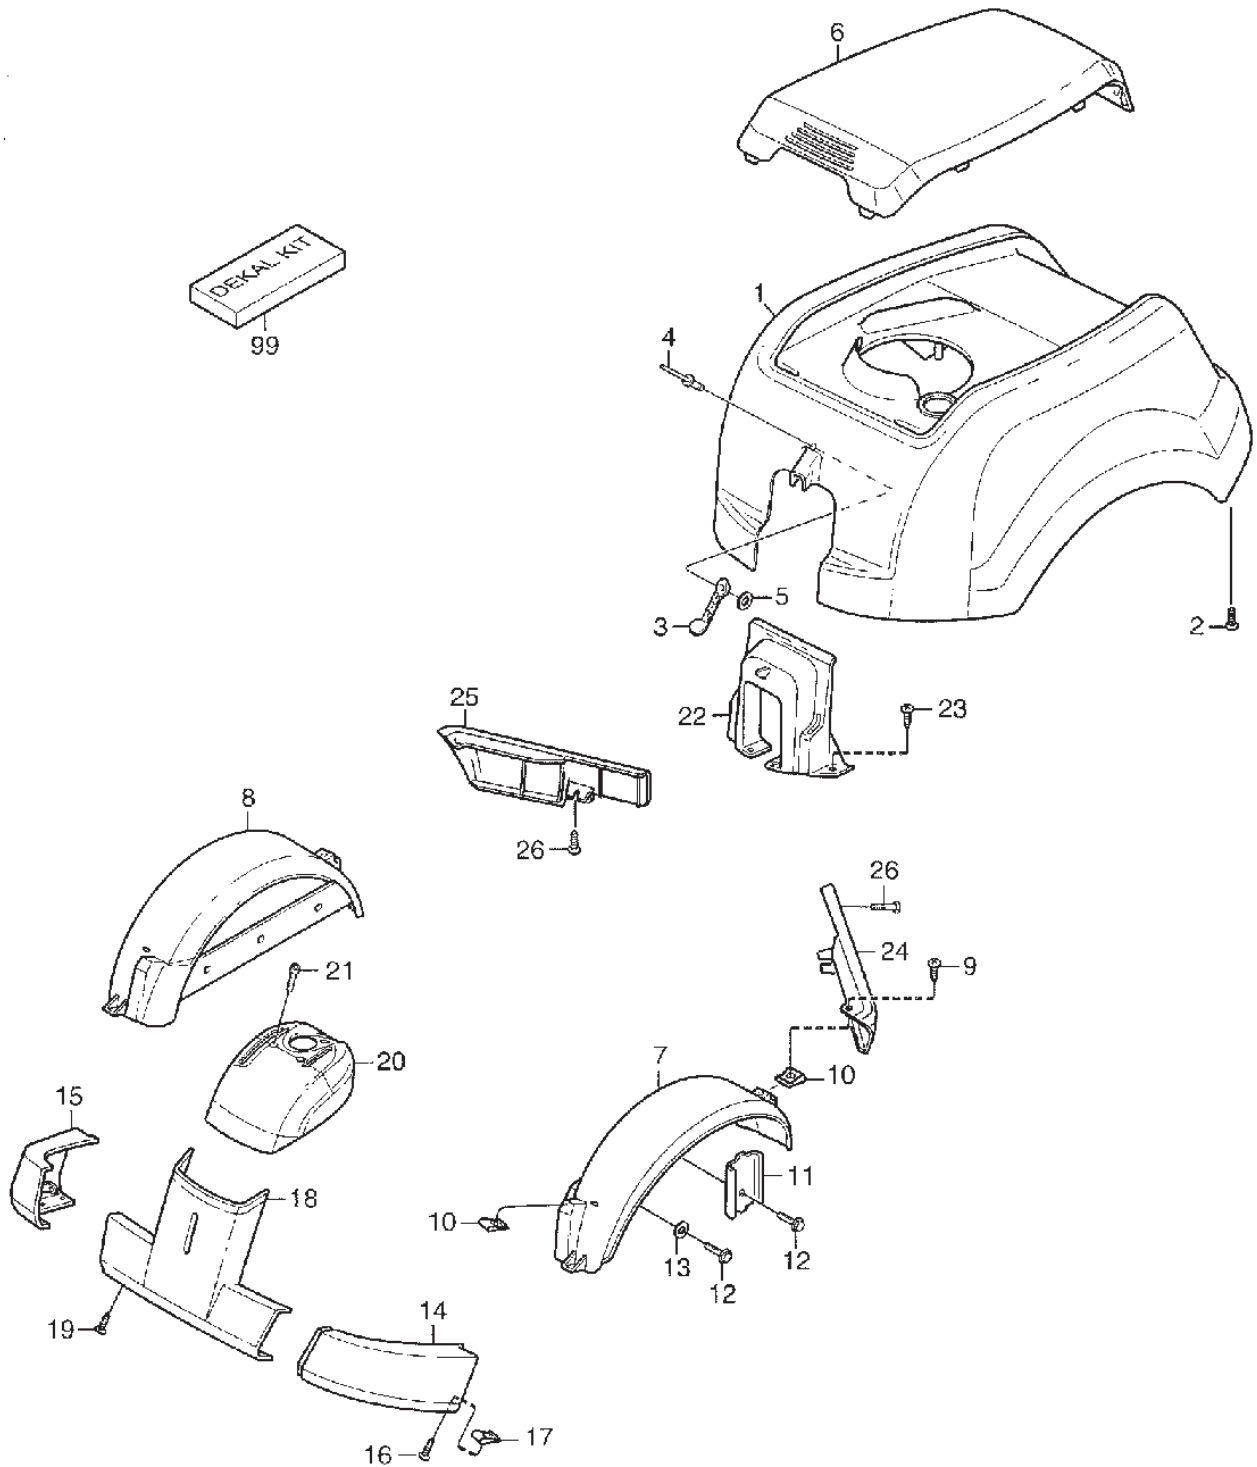


Utgåva Issue 20 - 2015		Kaross		Body Work	
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
1	1	1134-5263-02	Motorhuv Gul	Engine Hood Yellow	
2	7	9838-9530-12	Skruv	Screw	
3	1	1134-9028-01	Gummistropp (3 St)	Rubber Strap (3 Pcs)	Sats 3 st/kit of 3
4	1	9632-0516-00	Popnit Tap/D/Bs 416 Gf9.5	Pop Rivet	
5	1	9699-0120-02	Bricka	Washer	
6	1	1134-5264-01	Motorlucka (Gra) 7-14	Engine Cover (Grey) 7-14	
7	1	1134-5308-01	Skärm-Vä (Gra) 7-14	Mudguard-Lh (Grey) 7-14	
8	1	1134-5308-02	Skärm-Hö (Gra) 7-14	Mudguard-Rh (Grey) 7-14	
9	4	9893-0616-16	Skruv	Screw	
10	4	1134-4176-01	Clips	Clips	
11	2	1134-0225-00	Stödplat	Support Plate	
12	6	9945-0816-16	Skruv	Screw	
13	4	9699-0056-02	Bricka	Washer	
14	1	1134-5306-01	Stötfangare Front-Vä Gra	Bumper Front-Lh (Grey)	
15	1	1134-5306-02	Stötfangare Front-Hö Gra	Bumper Front-Rh (Grey)	
16	4	9893-0616-16	Skruv	Screw	
17	2	1134-4176-01	Clips	Clips	
18	1	1134-5305-01	Front Nedre Gul	Lower Hood Yellow	
19	2	9893-0616-16	Skruv	Screw	
20	1	1134-5320-01	Front-Övre (Gul) 1-00	Front-Upper Part (Yellow) 1-00	
21	2	9946-0525-16	Skruv	Screw	
22	1	1134-5265-01	Huvstöd (Svart) 5-01	Hood Support (Black) 5-01	
23	4	9893-0616-16	Skruv	Screw	
24	1	1134-3970-05	Kantiist-Vä (Gra) 7-14	Moulding-Left (Grey)	
25	1	1134-3970-02	Kantiist-Hö (Gra) 7-14	Moulding Right-Grey	
26	2	9893-0616-16	Skruv	Screw	
99	1	1134-5592-01	Dekal	Label	

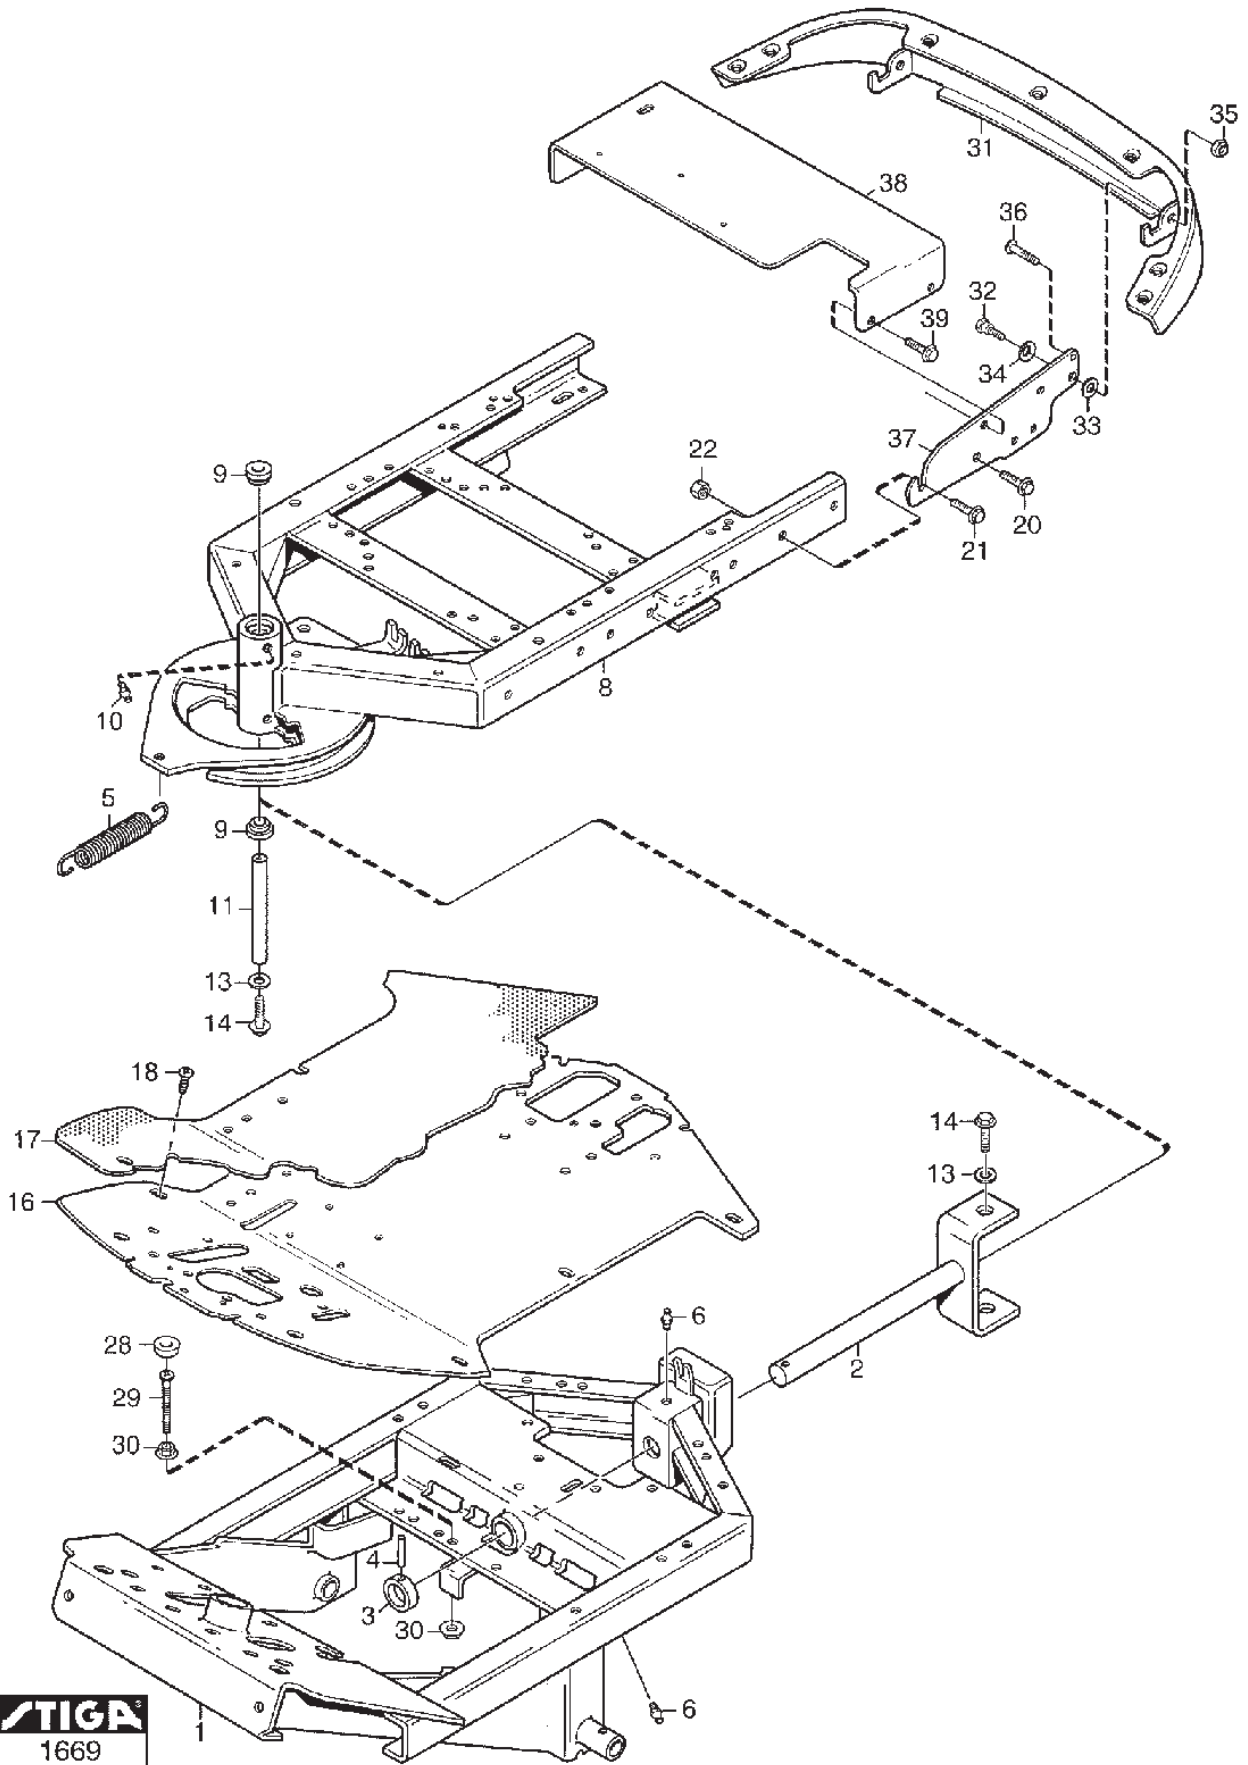


Utgåva Issue 20 - 2015		Ram	Frame		
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
1	1	1134-5315-02	Ram-Främre	Frame-Front	
2	1	1134-3963-02	Midjegaffel Service 5-01 H10	Fork	
3	1	1134-0031-00	Ledaxelstopp	Pivot Shaft Stop	
4	1	9595-0262-00	Spännstift	Locating Pin	
5	1	1134-2171-01	Fjäder	Spring	
6	2	9501-0500-00	Smörjkopp Kort Rak	Grease Dispenser	
8	1	1134-5313-01	Ram-Bakre (5-01)	Frame-Rear (5-01)	
9	2	9547-0001-00	Ledlager Ge17Es	Bearing	
10	2	9501-0500-00	Smörjkopp Kort Rak	Grease Dispenser	
11	1	1134-3968-02	Centrumaxel	Centre Shaft	
13	2	9699-0035-02	Bricka	Washer	
14	2	9959-1020-16	Skruv	Screw	
16	1	1134-5294-01	Durk (5-01)	Floor Plate (5-01)	
17	1	1134-5513-01	Durkmatta Stiga	Floor Mat	
18	2	9893-0616-16	Skruv	Screw	
20	2	9945-0816-16	Skruv	Screw	
21	2	9959-0820-16	Skruv	Screw	
22	2	9739-0831-22	Mutter	Nut	
28	1	1134-4975-01	Gummibuffert	Rubber Buffer	
29	1	9950-0570-12	Skruv	Screw	
30	2	9739-0531-22	Mutter	Nut	
31	1	1134-5337-01	Stötfangare-bakre, svart	Bumper Assy-Rear Black	
32	2	1134-0240-00	Skruv	Screw	
33	2	1134-4242-01	Distansbricka	Washer	
34	2	9665-0002-00	Bricka	Washer	
35	2	9747-0831-02	Mutter	Nut	
36	2	9943-0516-16	Skruv	Screw	
37	2	1134-5345-01	Batterihallare	Battery Holder	
38	1	1134-5344-01	Batterihylla	Battery Shelf	
39	4	9945-0816-16	Skruv	Screw	

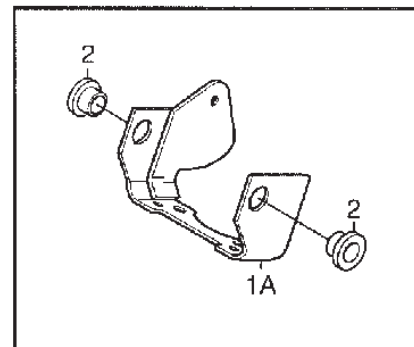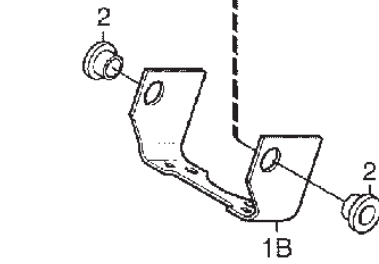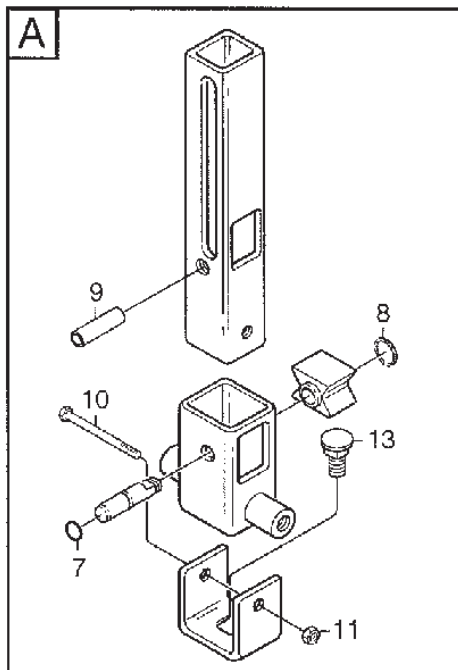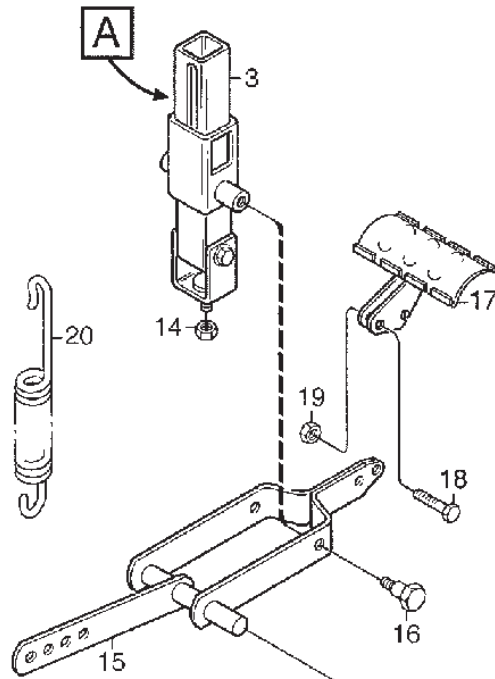


Utgåva Issue 20 - 2015		Pedallyft Pedal Lift			
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
1	1	1134-5462-01	Fäste	Bracket	
2	2	1134-2684-01	Lager	Bearing	
3	1	1134-4945-01	Lyftspärr kpl	Lift Catch Assy	
7	1	9404-0027-01	O-ring	O-ring	
8	1	9650-0039-04	Sparring Sga 8	Lock Ring	
9	1	9595-0276-01	Spiralspännstift 8*24	Locating Pin	
10	1	9997-0640-12	Skruv	Screw	
11	1	9747-0631-02	Mutter	Nut	
13	1	9897-0820-16	Skruv	Screw	
14	1	9747-0831-02	Mutter	Nut	
15	1	1134-4860-01	Lyftgaffel	Lift Fork	
16	2	1134-0240-00	Skruv	Screw	
17	1	1134-4938-01	Lyftpedal	Lift Pedal	
18	2	9997-0625-16	Skruv	Screw	
19	2	9739-0631-22	Mutter	Nut	
20	1	4231-0013-00	Fjäder	Spring	

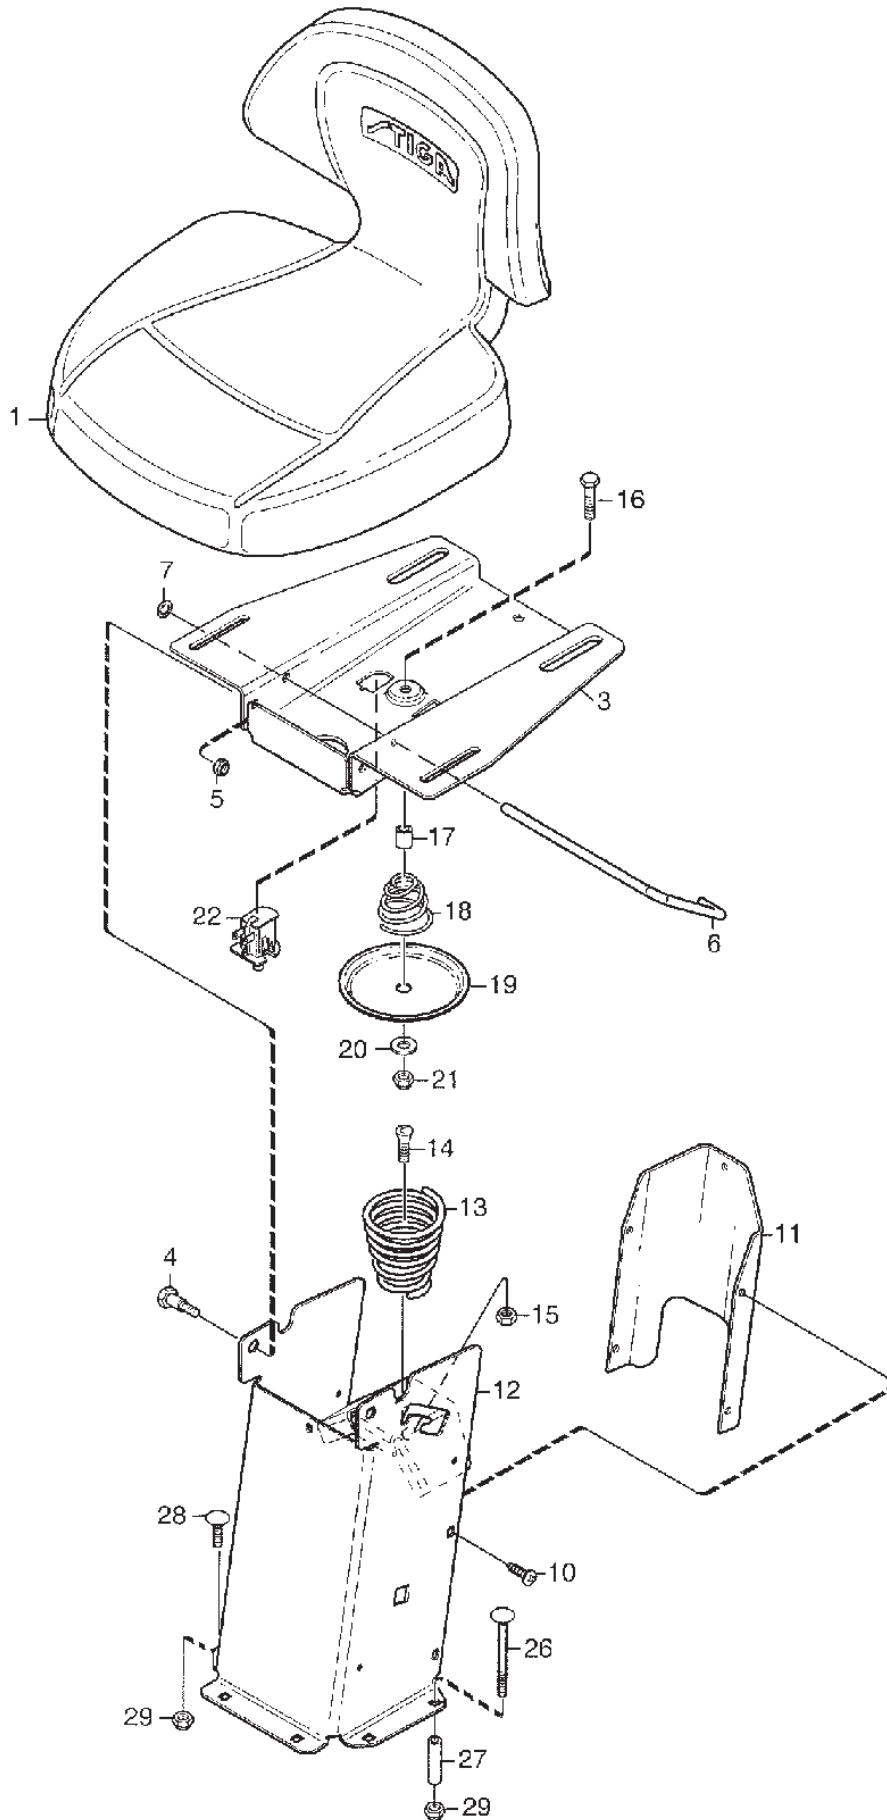

Utgåva Issue 20 - 2015		Sits	Seat		
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
1	1	1134-5506-01	Sits "Stiga"	Seat Stiga	
3	1	1134-5301-01	Sitsplatta	Upper Seat Bracket	
4	2	1134-0240-00	Skruv	Screw	
5	2	9747-0831-02	Mutter	Nut	
6	1	1134-5454-01	Spärr	Catch	
7	1	9675-0012-02	Starlock	Locking washer	
10	4	9893-0616-16	Skruv	Screw	
11	1	1134-5300-01	Bakstycke Gul	Rear Plate, Yellow	
12	1	1134-5296-01	Sitskonsol Kpl (Gul) 1-00	Seat Bracket (Gelb)	
12	1	1134-5296-04	Sitskonsol Kpl (Gul) 1-00	Seat Bracket (Yellow)	
12	1	1134-5296-01	Sitskonsol Kpl (Gul) 1-00	Seat Bracket (Gelb)	
12	1	1134-5296-04	Sitskonsol Kpl (Gul) 1-00	Seat Bracket (Yellow)	
13	1	1134-4256-01	Fjäder	Spring	
14	1	9924-1230-19	Skruv	Screw	
14	1	9924-1235-19	Skruv	Screw	
14	1	9924-1230-19	Skruv	Screw	
14	1	9924-1235-19	Skruv	Screw	
15	1	9747-1231-02	Mutter	Nut	
16	1	9997-0840-16	Skruv	Screw	
17	1	1134-1565-06	Distans	Spacer	
18	1	1134-5302-01	Fjäder	Spring	
19	1	1134-5299-01	Tryckplatta	Push Plate	
20	1	9699-0090-02	Bricka Bricka	Washer Washer	
21	1	9747-0831-02	Mutter	Nut	
22	1	1134-3156-02	Brytare (gra)	Switch	
26	2	9897-0880-12	Skruv	Screw	L = 80 mm
27	2	1134-1565-08	Distans	Spacer	
28	4	9897-0820-16	Skruv	Screw	L = 20 mm
29	6	9747-0831-02	Mutter	Nut	

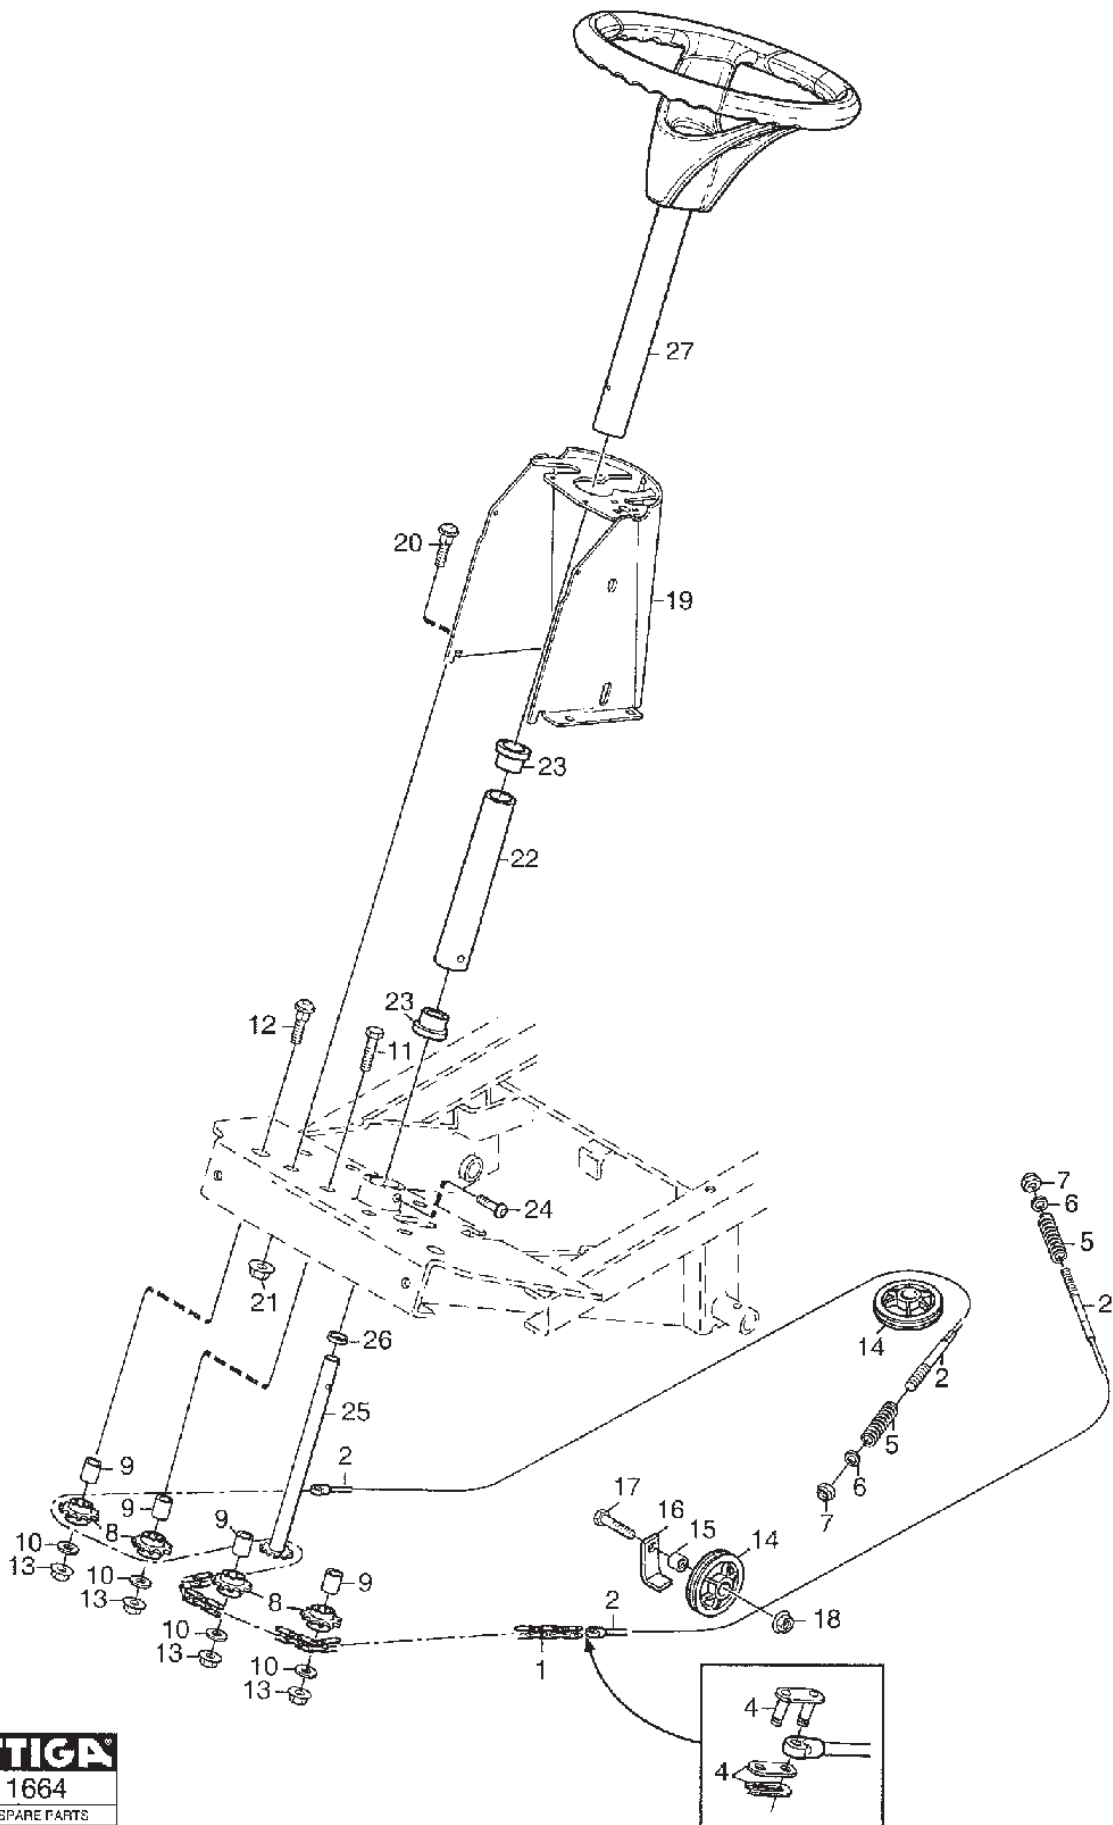


Utgåva Issue 20 - 2015		Styrning Steering			
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
1	1	1134-2820-06	Kedja	Chain	83 länk
1	1	1134-6374-06	Kedja	Chain	83 länk
1	1	1134-2820-06	Kedja	Chain	83 länk
1	1	1134-6374-06	Kedja	Chain	83 länk
2	1	1134-9084-01	Styrwire	Steering Wire	Sats vä+hö/kit l+r
4	2	1134-2824-01	Kedjelas	Chain Lock	
4	2	1134-2824-02	Kedjelas Fz	Chain Lock	
4	2	1134-2824-01	Kedjelas	Chain Lock	
4	2	1134-2824-02	Kedjelas Fz	Chain Lock	
5	2	1134-3817-01	Fjäder	Spring	
6	2	9699-0090-02	Bricka Bricka	Washer Washer	
7	2	9747-0831-02	Mutter	Nut	
8	4	1134-2816-01	Kedjehjul	Sprocket	
9	4	1134-0041-02	Bussning	Bushing	
10	4	9699-0035-02	Bricka	Washer	
11	2	9997-1050-16	Skruv	Screw	
12	2	9897-1040-12	Skruv	Screw	
13	4	9739-1031-22	Mutter	Nut	
14	2	1134-9025-01	Linhjul	Steering Pulley	Sats 2 st/kit of 2
15	2	1134-0041-01	Bussning	Bushing	
16	2	1134-0046-00	Wireklämma	Wire Clamp	
16	2	1134-3022-01	Fäste	Bracket	
16	2	1134-0046-00	Wireklämma	Wire Clamp	
16	2	1134-3022-01	Fäste	Bracket	
17	2	9997-1030-16	Skruv	Screw	
18	2	9739-1031-22	Mutter	Nut	
19	1	1134-5349-01	Styrkonsol Kpl (Gul) 1-00	Steering Console (Yellow) 1-00	
20	4	9897-0820-16	Skruv	Screw	
21	4	9739-0831-22	Mutter	Nut	
22	1	1134-1305-05	Rattrör Nedre	Steering Column, Lower	
23	2	1134-1901-01	Lager	Bearing	
24	2	9893-0616-16	Skruv	Screw	
25	1	1134-2821-03	Rattstang	Steering Rod	
26	1	1134-2837-01	Distans	Spacer	
27	1	1134-5496-01	Ratt	Steering Wheel	

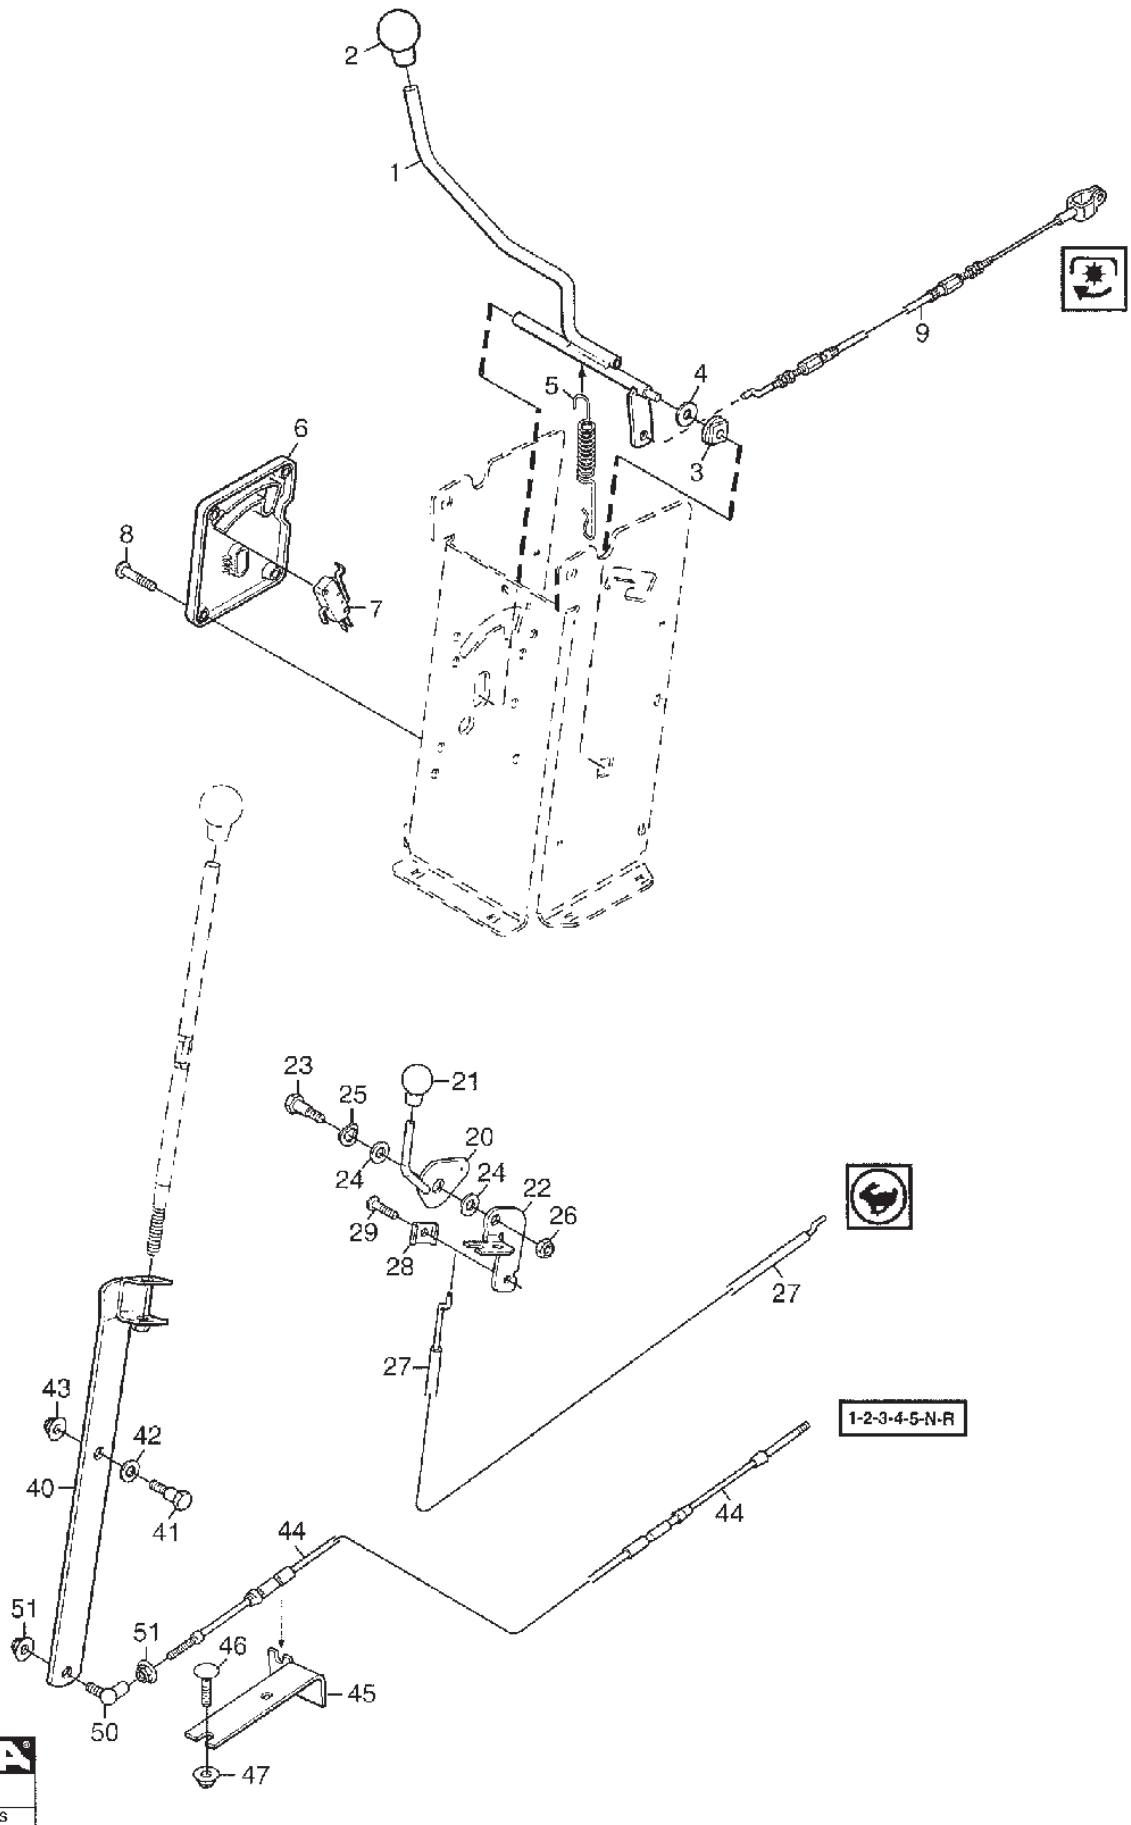


STIGA
1670
SPARE PARTS


Utgåva Issue 20 - 2015		Handreglage Hand Controls			
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
1	1	1134-5363-01	Aggregatsspak	Engagement Lever	
2	1	1134-2551-01	Knopp	Knob	
3	1	1134-3790-02	Lager	Bearing	
4	1	9699-0090-02	Bricka Bricka	Washer Washer	
4	1	9699-0090-02	Bricka Bricka	Washer Washer	8.4 x 18 x 1.5
5	1	4231-0013-00	Fjäder	Spring	
6	1	1134-5368-01	Panel	Dashboard	
7	1	9400-0312-01	Mikrobrytare	Microswitch	
8	4	9946-0525-16	Skruv	Screw	
9	1	1134-3573-05	Reglagewire	Control Cable	
20	1	1134-5465-01	Gasreglage	Throttle Control Lever	
21	1	1134-4078-01	Knopp	Knob	
22	1	1134-5464-01	Fäste	Bracket	
23	1	1134-0240-00	Skruv	Screw	
24	2	1134-4242-01	Distansbricka	Washer	
25	1	9694-0001-00	Bricka	Washer	
26	1	9747-0831-02	Mutter	Nut	
27	1	1134-4197-02	Gasreglage	Throttle Cable	
28	1	9500-9991-00	Kabelklämma	Wire Clamp	
29	1	9943-0516-16	Skruv	Screw	
40	1	1134-5459-01	Växelarm Kpl	Gear Shifter Arm	
41	1	1134-0240-00	Skruv	Screw	
42	1	9696-0013-01	Bricka	Washer	
43	1	9739-0831-22	Mutter	Nut	
44	1	1134-2766-07	Reglagewire	Control Cable	
45	1	1134-5518-01	Vinkelarm	Angle Plate	
46	2	9897-0616-16	Skruv	Screw	
47	2	9739-0631-22	Mutter	Nut	
50	1	9570-0001-00	Vinkellänk As8 Din 71802M5	Elbow Link	
51	2	9739-0531-22	Mutter	Nut	

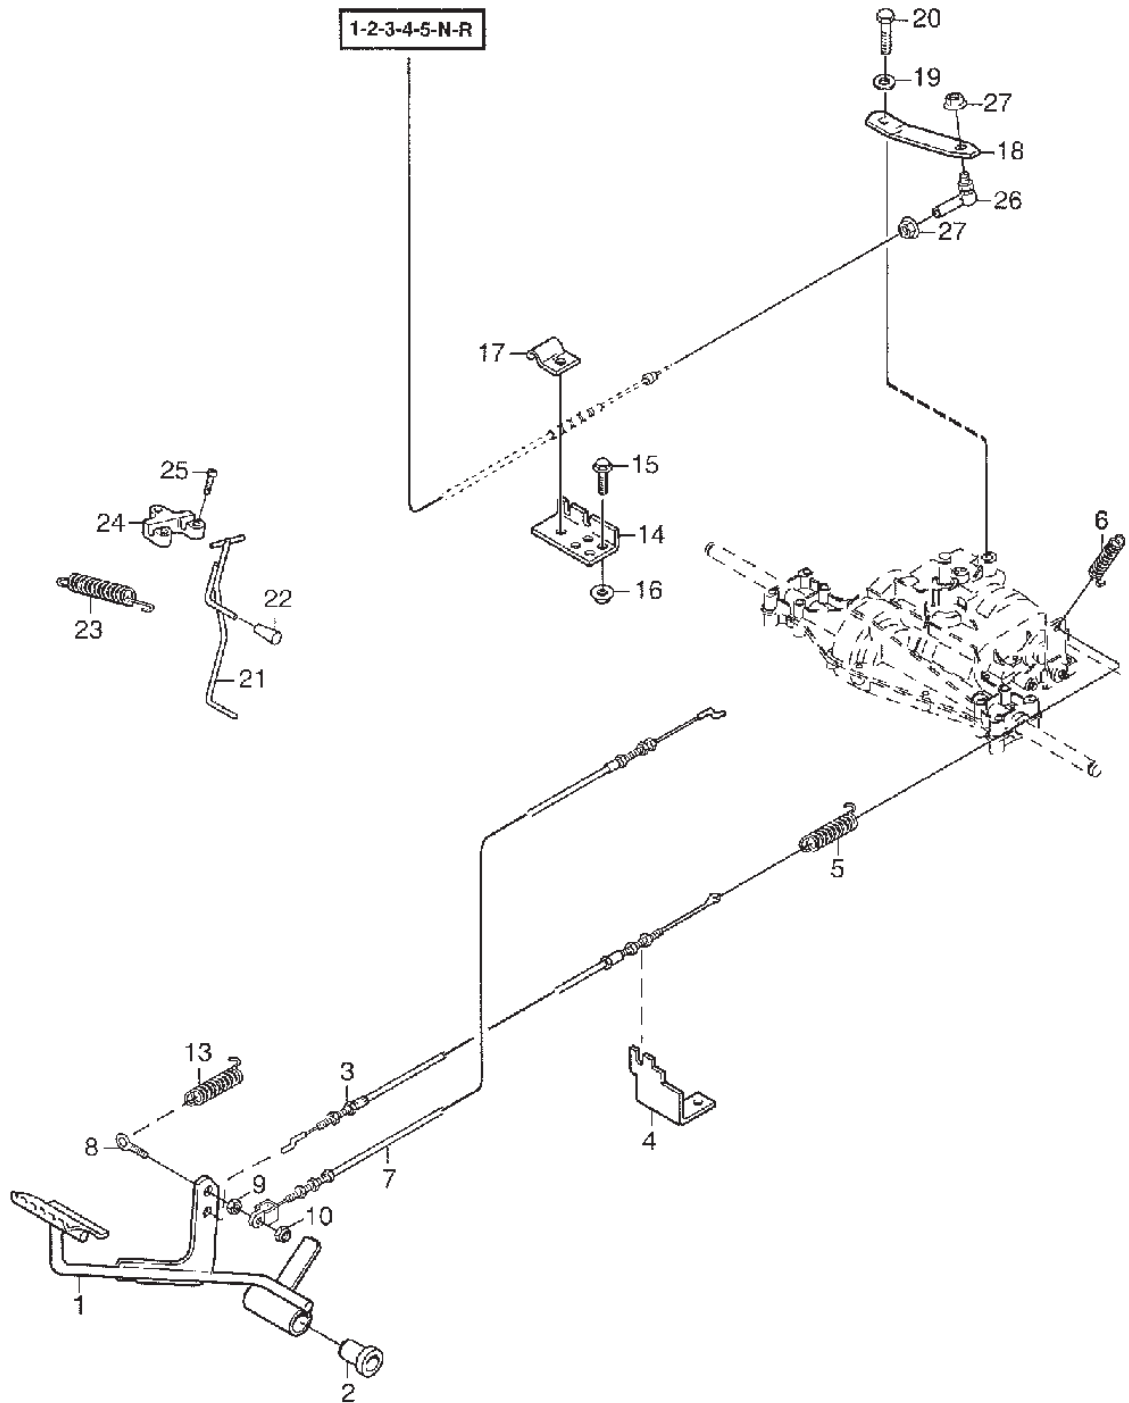


Utgåva Issue 20 - 2015		Fotreglage Foot controls			
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
1	1	1134-4247-01	Kopplingspedal Kpl	Clutch Pedal	Pos 2 incl.
2	1	1134-9024-01	Lager (4 St)	Bearing	Sats 4 st/kit of 4
3	1	1134-3410-02	Motorbromswire	Cable, Thread Engine Brake	
4	1	1134-3403-01	Kabelhallare	Wire Holder	
5	1	1134-3280-01	Fjäder	Spring	
6	1	1134-3974-01	Fjäder	Spring	
6	1	1134-3974-02	Fjäder	Spring	
6	1	1134-3974-01	Fjäder	Spring	
6	1	1134-3974-02	Fjäder	Spring	
7	1	1134-4058-01	Vajer	Cable	
8	1	1134-2991-01	Skruvögla	Eye Bolt	
9	1	9739-0531-22	Mutter	Nut	
10	1	9747-0531-02	Mutter	Nut	
13	1	1134-3974-01	Fjäder	Spring	
14	1	1134-3400-01	Vinkelarm 5-01 24	Angle Plate	
15	2	9959-0816-16	Skruv	Screw	
15	2	9959-0820-16	Skruv	Screw	
15	2	9959-0816-16	Skruv	Screw	
15	2	9959-0820-16	Skruv	Screw	
16	2	9739-0831-22	Mutter	Nut	
17	1	1134-2021-01	Växelwirefäste	Clamp	
18	1	1134-4048-02	Växelarm	Gear Shifter Arm	
19	1	9699-0060-02	Bricka	Washer	
20	1	9987-5016-16	Skruv	Screw	
21	1	1134-5353-01	Bromsstang	Brake Rod	
22	1	1134-2786-01	Knopp	Knob	
23	1	1131-1497-01	Fjäder	Brake Spring	
24	1	1134-4002-01	Fäste	Brake Rod Attachment	
25	3	9838-9516-12	Skruv	Screw	
26	1	9570-0001-00	Vinkellänk As8 Din 71802M5	Elbow Link	
27	2	9739-0531-22	Mutter	Nut	

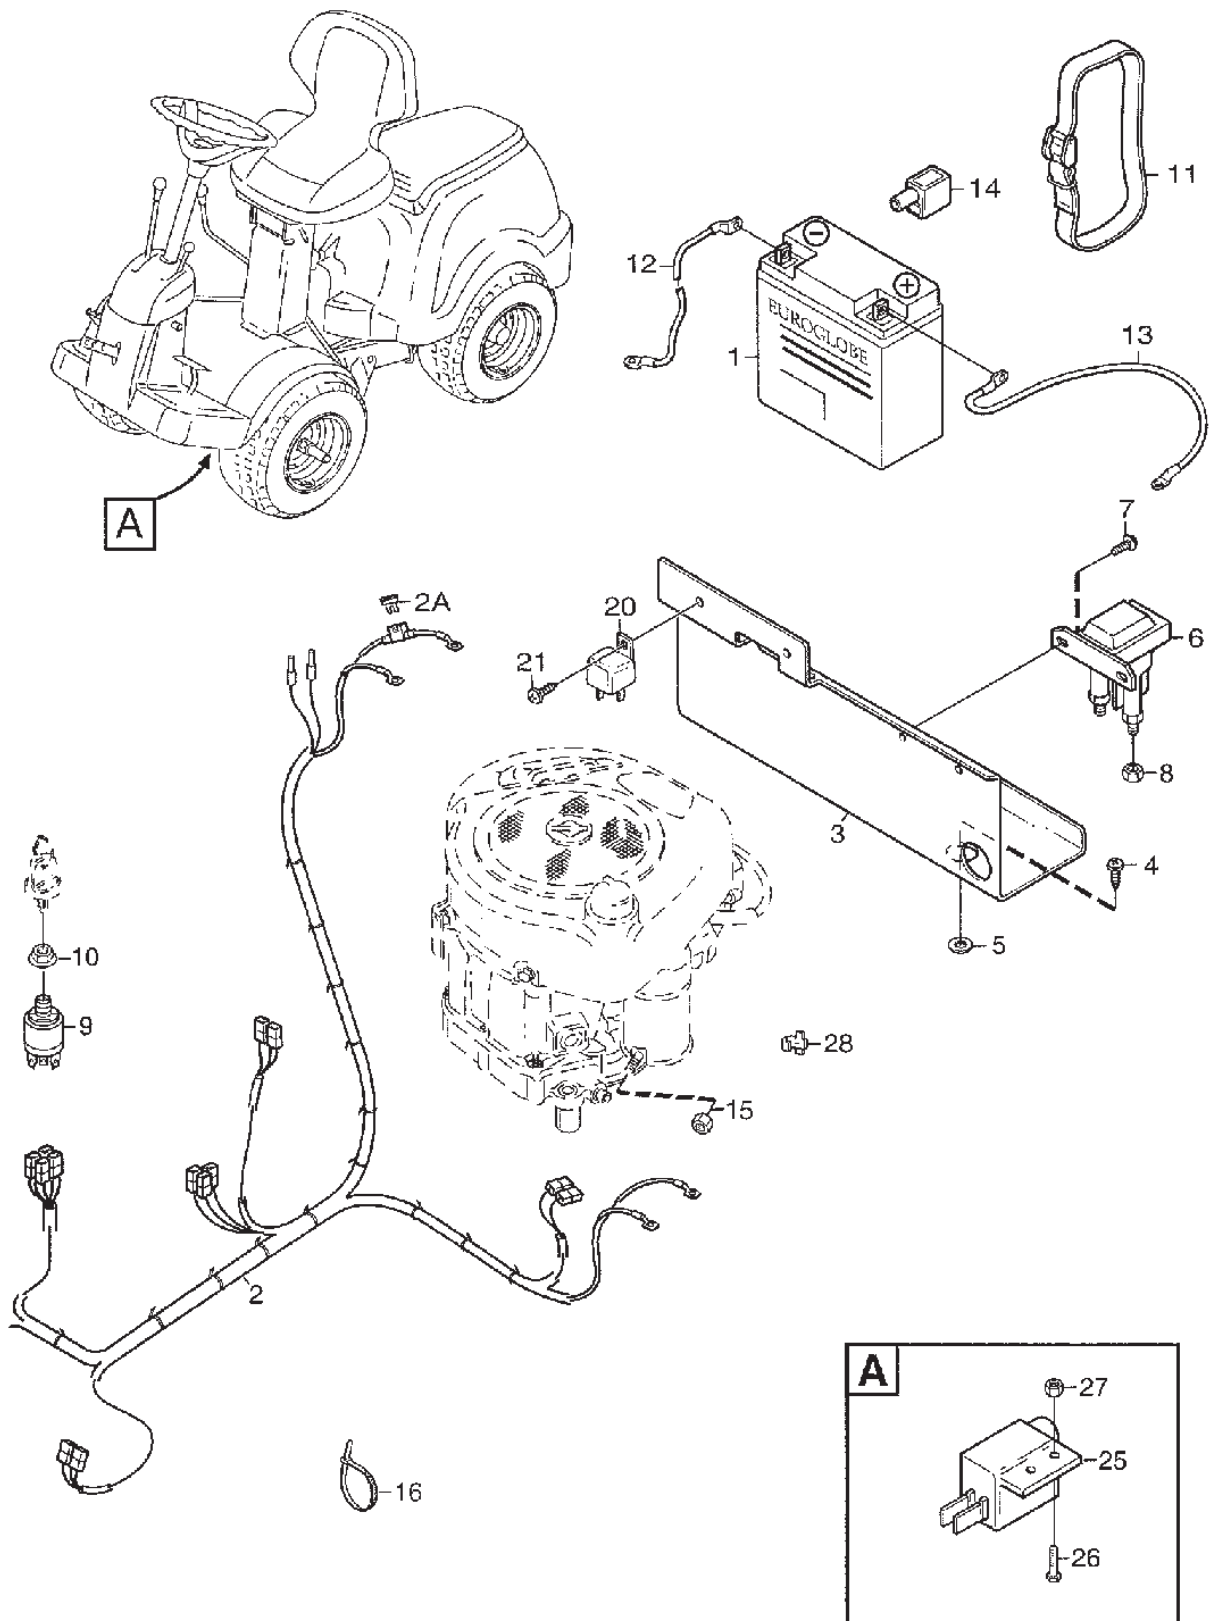

Utgåva Issue 20 - 2015		Elutrustning El. Equipment			
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
1	1	1134-4804-01	Batteri	Battery	
2	1	1134-3496-06	Säkring 20 Amp Gul	Fuse (20A)	20A
2	1	1134-5323-01	Kabelhärva	Wiring harness	
2	1	1134-5768-01	Kablage (Park kplact Man)	Harness (Park Compact Manual)	
2	1	1134-3496-06	Säkring 20 Amp Gul	Fuse (20A)	20A
3	1	1134-5343-01	Batterikonsol	Battery Bracket	
4	3	9852-8013-16	Skruv	Screw	
5	2	9699-0060-02	Bricka	Washer	
6	1	1134-2962-01	Solenoid Kpl Service	Solenoid	
7	2	9852-8013-16	Skruv	Screw	
8	2	9794-5131-02	Mutter	Nut	
9	1	1134-4093-01	Tändningslas	Ignition Switch	
10	1	1134-4749-01	Mutter	Nut	
11	1	1134-5245-01	Batterirem	Battery Strap	
12	1	1134-2167-01	Elkabel	Cable	
13	1	1134-0234-02	Batterikabel (+)	Battery Cable (+)	
14	1	1134-2310-01	Batteriskydd	Guard Cap (+)	
15	1	9795-3531-02	Mutter	Nut	
16	15	9579-0003-00	Buntband	Cable Holder	
20	1	1134-2871-03	Relä	Relay	
21	1	9852-8013-16	Skruv	Screw	

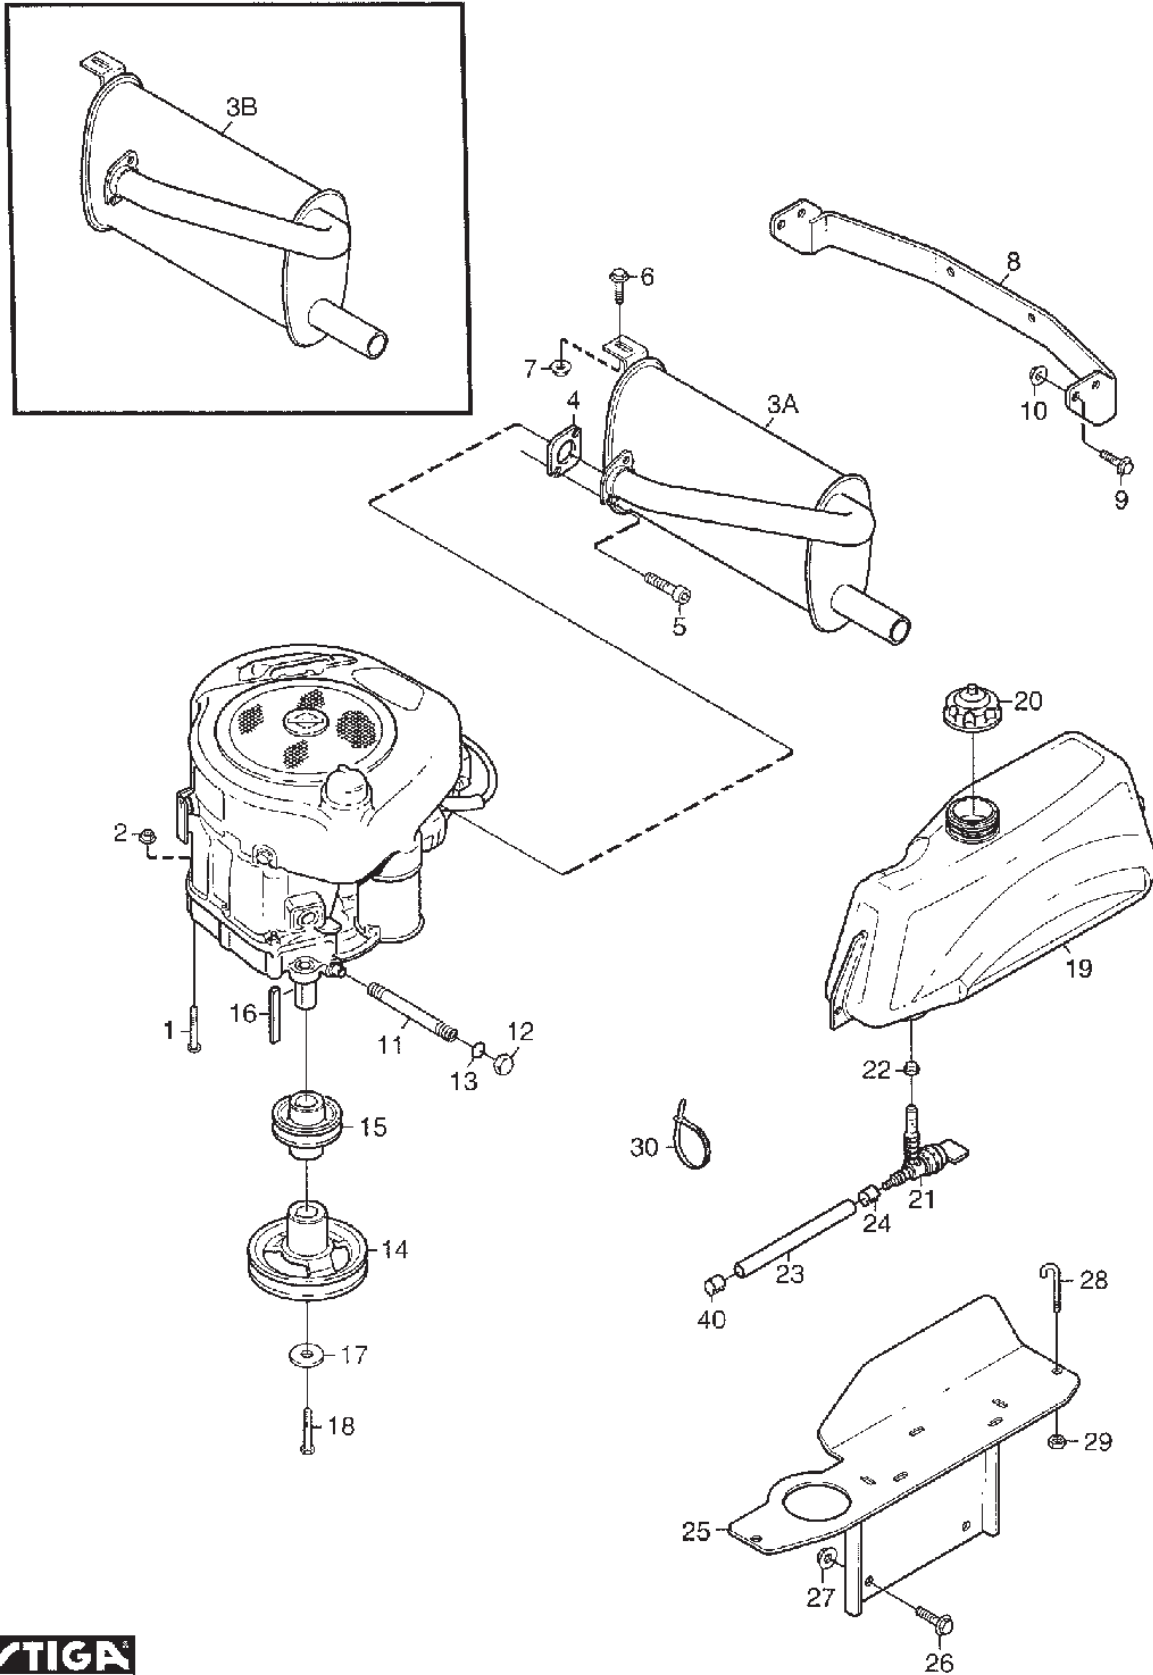


Utgåva Issue 20 - 2015		Motor	Engine		
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
1	2	9997-0840-16	Skruv	Screw	L = 40 mm
1	1	9997-0845-12	Skruv	Screw	L = 45 mm
1	1	9997-0875-12	Skruv	Screw	L = 75 mm
2	4	9739-0831-22	Mutter	Nut	
3	1	1134-5370-01	Ljuddämpare	Muffler	
4	1	1134-0433-00	Packning	Gasket	
5	2	1134-4930-01	Skruv	Screw	
6	1	9959-0820-16	Skruv	Screw	
7	1	9739-0831-22	Mutter	Nut	
8	1	1134-5390-01	Dragkroksbalk	Tow Bar Bracket	
9	4	9959-0820-16	Skruv	Screw	
10	4	9739-0831-22	Mutter	Nut	
11	1	1134-4978-01	Oljeavtappningsrör Kpl. (L140)	Oil Drain Pipe Assy (L=140)	
12	1	1134-4976-01	Plugg	Plug	
13	1	1134-4977-01	Bricka	Washer	
14	1	1134-4999-01	Motorremskiva	Engine Belt Pulley	
15	1	1134-5000-01	Motorremskiva	Engine Belt Pulley	
16	1	9600-0251-01	Kil	Key	L = 2 1/2"
17	1	1134-5017-01	Bricka	Washer	
18	1	9987-5332-16	Skruv	Screw	
19	1	1134-4757-06	Bränsletank Kpl	Fuel Tank Assy	Inkl. pos 20 - 24
20	1	1134-2877-03	Tanklock	Fuel Tank Cap	
21	1	1134-3224-01	Bensinkran	Fuel Shut-Off Valve	
22	1	1134-3225-01	Gummibussning	Grommet	
23	1	1134-2975-01	Bensinslang	Fuel Tube	L = 520 mm
24	1	9578-0023-02	Slangklämma D12*8 (Svart)	Hose Clamp	
25	1	1134-5340-01	Tankfäste	Fuel Tank Bracket	
26	2	9959-0820-16	Skruv	Screw	
27	2	9739-0831-22	Mutter	Nut	
28	2	1134-5346-01	Tankbygel	Fuel Tank Loop	
29	2	9747-0631-02	Mutter	Nut	
30	1	9579-0003-00	Buntband	Cable Holder	
40	1	9578-0023-02	Slangklämma D12*8 (Svart)	Hose Clamp	

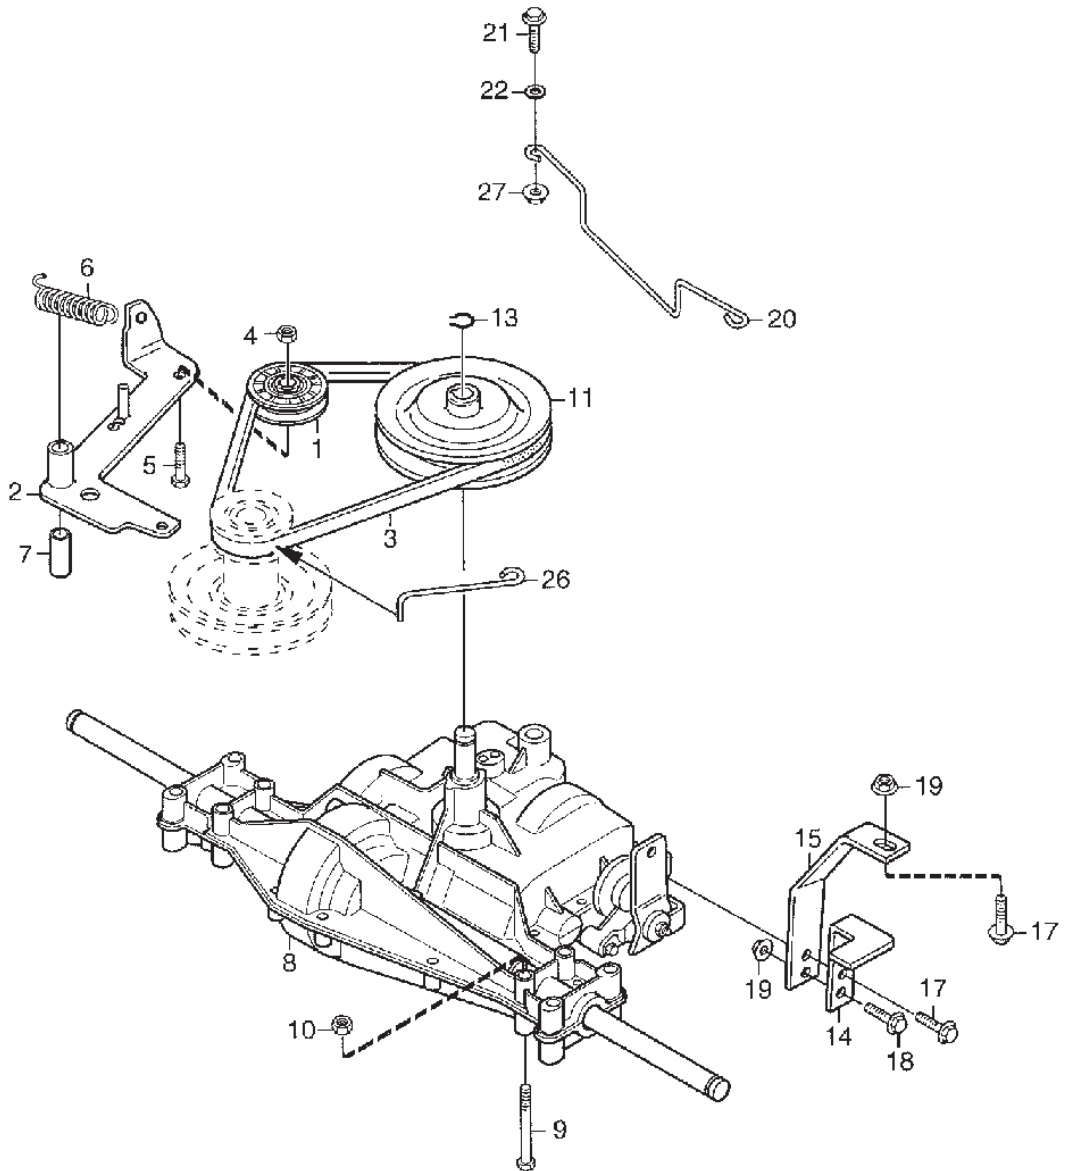


Utgåva Issue 20 - 2015		Transmission		Transmission	
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
1	1	1134-9027-01	Spännrulle (Svart)	Tension Roller (Black)	
2	1	1134-2015-04	Spännarm Kpl 5-01 F24	Tension Arm	
3	1	1134-9013-01	Kilrem	V-Belt	= 9585-0057-00
4	1	9799-1031-02	Mutter	Nut	
5	1	9997-1030-16	Skruv	Screw	
6	1	1134-4337-01	Fjäder	Spring	
7	1	1134-1565-01	Distans	Spacer	
8	1	1134-5282-01	Transaxel (Dana 4360-198)	Transaxle Assy (Dana 4360-198)	Dana 4360-198
9	3	9997-0865-12	Skruv	Screw	L = 65 mm
9	4	9997-0865-12	Skruv	Screw	
9	1	9997-0870-16	Skruv	Screw	L = 70 mm
9	3	9997-0865-12	Skruv	Screw	L = 65 mm
9	4	9997-0865-12	Skruv	Screw	
9	1	9997-0870-16	Skruv	Screw	L = 70 mm
10	4	9747-0831-02	Mutter	Nut	
11	1	1134-3182-01	Remskiva	Belt Pulley	
13	1	9650-0016-04	Sparring Sga 16	Circlip	
14	1	1134-2045-01	Bromsstopp	Brake Stop	
14	1	1134-2045-02	Bromsstopp	Brake Stop	
14	1	1134-2045-01	Bromsstopp	Brake Stop	
14	1	1134-2045-02	Bromsstopp	Brake Stop	
15	1	1134-2986-01	Fäste	Bracket	
17	2	9942-0820-16	Skruv	Screw	
18	1	9959-0816-16	Skruv	Screw	
19	2	9739-0831-22	Mutter	Nut	
20	1	1134-5529-01	Remstyrning	Belt Guide	
21	1	9942-0820-16	Skruv	Screw	
21	2	9959-0820-16	Skruv	Screw	
21	1	9942-0820-16	Skruv	Screw	
21	2	9959-0820-16	Skruv	Screw	
22	1	9699-0056-02	Bricka	Washer	
22	2	9699-0056-02	Bricka	Washer	
22	1	9699-0056-02	Bricka	Washer	
22	2	9699-0056-02	Bricka	Washer	
26	1	1134-3289-02	Remstyrning	Belt Guide	
27	1	9739-0831-22	Mutter	Nut	
27	2	9739-0831-22	Mutter	Nut	
27	1	9739-0831-22	Mutter	Nut	
27	2	9739-0831-22	Mutter	Nut	

Utgåva Issue 20 - 2015		Hjul Wheels			
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
1	2	1134-0075-01	Framaxeltapp	Front Axle	
2	2	9595-0258-00	Spännstift	Locating Pin	
3	2	1134-4844-05	Hjulnav Kpl	Wheel Hub Assy	
3	1	9501-0500-00	Smörjkopp Kort Rak	Grease Dispenser	
4	1	1134-9026-01	Bussning	Bearing	Sats 4 st/kit of 4
5	2	1134-5255-01	Fälg	Rim	
6	2	9545-0126-01	Däck	Tyre	16 x 6.00 - 8
7	2	9545-0500-00	Ventil	Valve Assy.	
8	6	9747-1031-02	Mutter	Nut	
9	6	9699-0035-02	Bricka	Washer	
10	8	1134-0341-01	Bricka	Washer	
11	2	9599-0080-02	SaxSprint Sp 4*28	Cotter Pin	
12	2	1134-4844-02	Hjulnav Kpl	Wheel Hub Assy	
13	2	1134-5255-01	Fälg	Rim	
14	2	9545-0126-01	Däck	Tyre	16 x 6.00 - 8
15	2	9545-0500-00	Ventil	Valve Assy.	
16	6	9747-1031-02	Mutter	Nut	
17	6	9699-0035-02	Bricka	Washer	
18	2	1134-4796-01	Navkapsel	Hub Cap	
19	2	9947-0540-19	Skruv	Screw	
20	2	1134-2471-01	Kil	Key	
21	2	9699-0042-02	Bricka	Washer	
22	2	9653-0001-04	Sparryttare Rs	Lock Ring	
25	2	9598-0003-02	Spring Pin	Spring Pin	
26	2	9699-0042-02	Bricka	Washer	

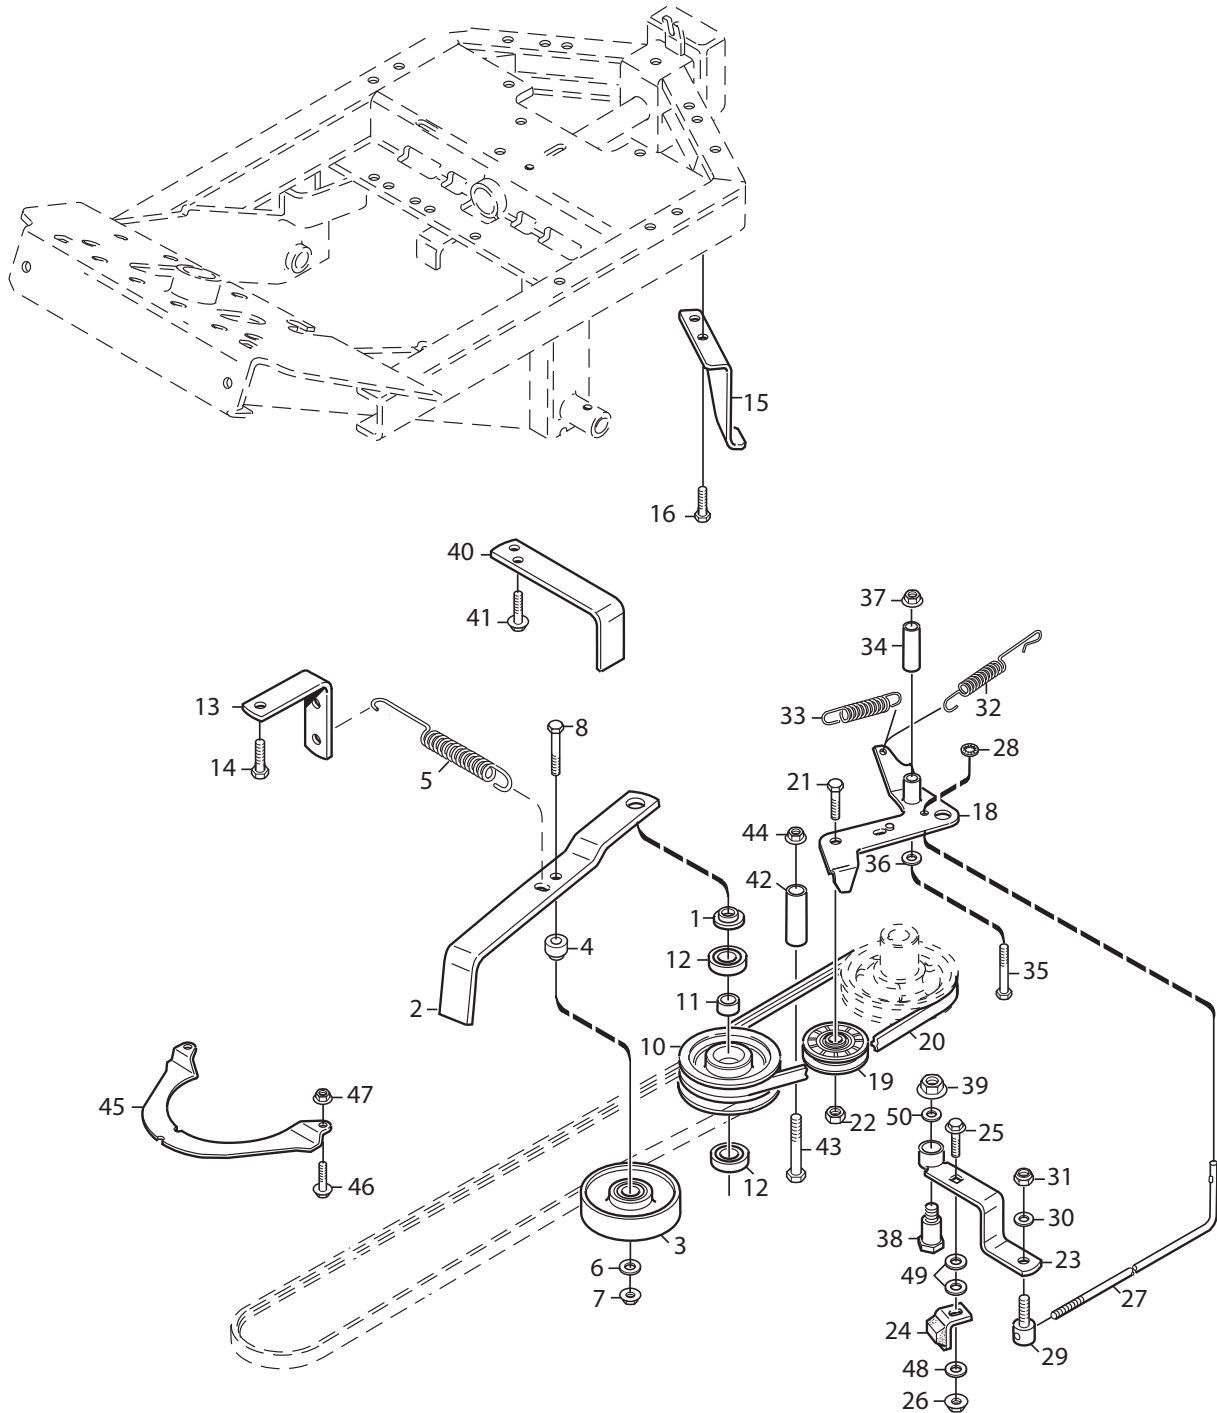

1030E

Utgåva Issue 20 - 2015		PTO			
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
1	1	1134-5548-01	Distans	Spacer	
2	1	1134-5109-01	Spännhjulsarm	Tension Wheel Arm	
3	1	1134-1770-01	Spännhjul Kpl	Tension Roller	
4	1	1134-1888-04	Distans	Spacer	
5	1	1134-5111-01	Fjäder	Spring	
6	1	9699-0056-02	Bricka	Washer	
7	1	9739-0831-22	Mutter	Nut	
8	1	9997-0855-12	Skruv	Screw	
10	1	1134-1769-02	Remskiva	Belt Pulley	
10	1	1134-1769-03	Centrumremskiva Smst	Centre Belt Pulley	
11	1	1134-0051-09	Distans	Spacer	
12	2	9549-0019-00	Kullager	Ball Bearing	
13	1	1134-5112-01	Fjäder	Spring	
14	2	9945-0816-16	Skruv	Screw	
15	1	1134-5110-01	Hake	Hook	
16	2	9893-0616-16	Skruv	Screw	
18	1	1134-2018-02	Spännarm Kpl 5-01 24	Tension Arm	
19	1	1134-9027-01	Spännrulle (Svart)	Tension Roller (Black)	
20	1	1134-9071-01	Drivrem	Belt	= 9585-0129-01
21	1	9997-1030-16	Skruv	Screw	
22	1	9799-1031-02	Mutter	Nut	
23	1	1134-4111-01	Bromsarm Kpl	Brake Arm	
24	1	1134-4164-01	Bromsklots	Brake Pad	
24	1	1134-4164-03	Bromsklots	Brake Pad	
25	1	9897-0825-16	Skruv	Screw	
26	1	9747-0831-02	Mutter	Nut	
27	1	1134-4162-01	Bromsstang	Brake Rod	
28	1	9675-0008-02	Starlockbricka	Starlock	
29	1	1134-4170-01	Nippel	Nippel	
30	1	9699-0025-02	Bricka	Washer	
31	1	9747-0631-02	Mutter	Nut	
32	1	4231-0013-00	Fjäder	Spring	
33	1	1134-4231-01	Fjäder	Brake Spring	
34	1	1134-1565-10	Distans	Spacer	
35	1	9997-0865-12	Skruv	Screw	
36	1	9699-0056-02	Bricka	Washer	
37	1	9739-0831-22	Mutter	Nut	
38	1	1134-4163-01	Ansattsskruv	Shoulder Bolt	
39	1	9747-1031-02	Mutter	Nut	
40	1	1134-3958-01	Remstyrning	Belt Guide	
41	2	9893-0616-16	Skruv	Screw	
42	1	1134-0041-03	Bussning	Bushing	
43	1	9997-1070-12	Skruv	Screw	
44	1	9739-1031-22	Mutter	Nut	
45	1	1134-3654-01	Fingerskydd 5-01 24	Guard	
46	2	9959-0612-16	Skruv	Screw	
47	2	9739-0631-22	Mutter	Nut	
48	1	9699-0090-02	Bricka Bricka	Washer Washer	
49	2	9699-0035-02	Bricka	Washer	

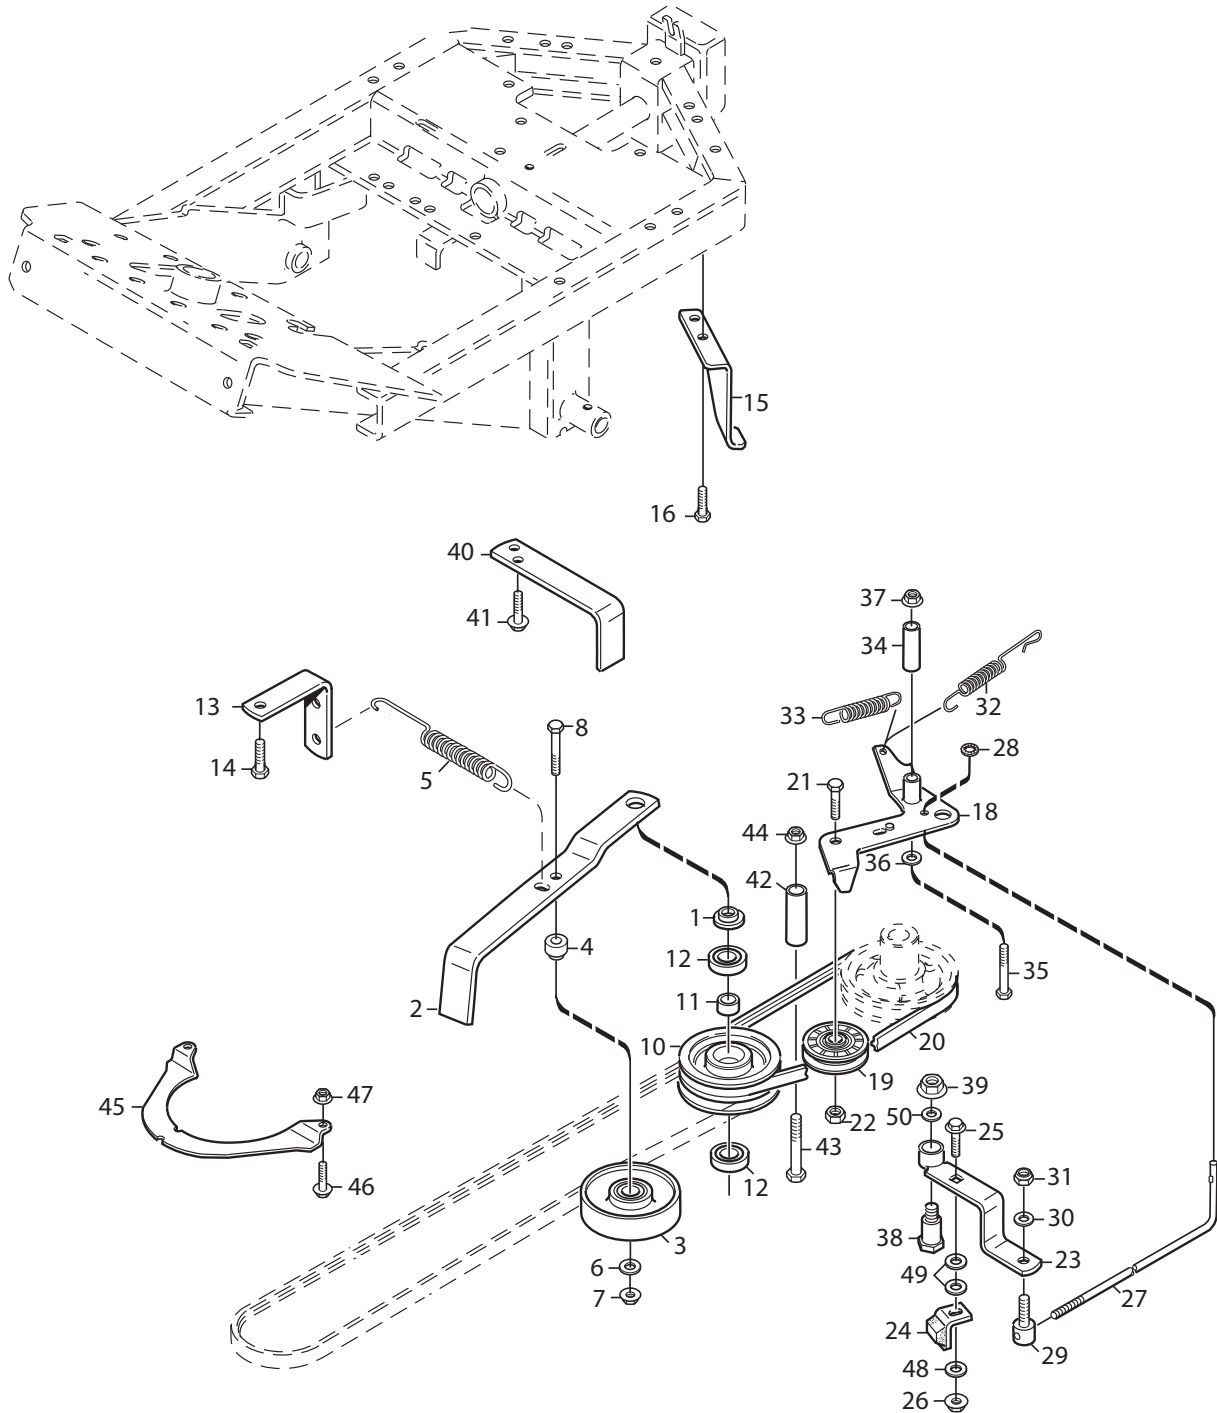

1030E

Utgåva Issue 20 - 2015		PTO			
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
50	1	9699-0035-02	Bricka	Washer	

code	pos.	q.ty	page										
281165	27	1	p. 9	691581	19	1	p. 7	697157	7	2	p. 11		
391086	3	1	p. 11	691620	15	1	p. 11	697184	18	1	p. 11		
391086	25	1	p. 7	691636	9	1	p. 9	697292	44	1	p. 5		
393537	11	1	p. 5	691639	6	1	p. 11	697352	25	1	p. 5		
394358	5	1	p. 9	691657	29	1	p. 9	697359	20	1	p. 11		
399265	2	1	p. 11	691691	14	2	p. 11	697361	20	1	p. 3		
492341	14	1	p. 5	691693	1	2	p. 5	697364	8	1	p. 11		
493880	15	1	p. 5	691751	11	2	p. 3	697377	1	1	p. 11		
494381	25	1	p. 9	691795	5	1	p. 5	697390	4	1	p. 11		
495800	15	1	p. 9	691840	22	1	p. 5	697391	11	1	p. 11		
495856	5	1	p. 3	691841	20	1	p. 5	697392	12	1	p. 11		
495857	8	1	p. 3	691842	21	1	p. 5	697394	22	1	p. 3		
495933	26	1	p. 9	691843	2	1	p. 3	697395	22	1	p. 3		
497608	13	1	p. 7	691909	17	1	p. 11	697396	1	1	p. 3		
498030	17	1	p. 9	691917	29	1	p. 7	697419	41	1	p. 5		
499586	6	2	p. 3	691917	32	1	p. 9	697420	40	1	p. 5		
690227	2	2	p. 9	691917	36	1	p. 5	697607	13	1	p. 11		
690323	14	2	p. 7	691968	23	1	p. 13	697611	15	1	p. 11		
690360	24	8	p. 3	691986	10	2	p. 3	697870	39	1	p. 5		
690372	18	1	p. 7	692012	13	1	p. 11	697897	28	4	p. 5		
690372	31	2	p. 5	692024	5	1	p. 7	698139	27	1	p. 5		
690480	5	1	p. 5	692034	7	1	p. 7	698174	23	1	p. 9		
690525	24	1	p. 9	692125	25	10	p. 13	698282	33	1	p. 5		
690564	23	2	p. 3	692137	16	1	p. 9	698329	26	1	p. 5		
690577	21	1	p. 9	692137	19	1	p. 3	698368	38	1	p. 5		
690602	11	1	p. 9	692137	21	1	p. 7	698371	2	1	p. 11		
690802	13	1	p. 9	692138	16	1	p. 3	698371	2	1	p. 11		
690804	4	1	p. 5	692138	33	1	p. 7	698373	2	1	p. 11		
690822	13	1	p. 3	692255	28	1	p. 9	698373	2	1	p. 11		
690946	24	1	p. 13	692407	6	1	p. 11	698375	1	1	p. 11		
690947	26	1	p. 13	692407	27	1	p. 7	698375	1	1	p. 11		
690947	28	1	p. 7	692492	17	1	p. 3	698377	1	1	p. 11		
690958	1	2	p. 9	692852	9	2	p. 11	698377	1	1	p. 11		
690959	4	2	p. 11	693167	12	1	p. 7	698413	42	1	p. 5		
690964	7	2	p. 3	693551	1	1	p. 7	698469	3	2	p. 11		
690968	9	1	p. 3	693699	2	1	p. 7	698516	12	1	p. 5		
690968	22	1	p. 7	693713	4	1	p. 7	699016	22	1	p. 11		
691003	21	1	p. 11	693757	8	1	p. 7	699027	12	1	p. 9		
691003	24	2	p. 5	694042	2	1	p. 5	699044	32	1	p. 5		
691024	3	1	p. 5	694123	16	1	p. 5	699331	3	1	p. 9		
691029	9	1	p. 7	694524	20	1	p. 9	790019	6	1	p. 9		
691031	17	1	p. 11	696457	9	1	p. 5	790024	8	1	p. 9		
691031	32	1	p. 7	697086	16	1	p. 11	790025	19	1	p. 9		
691032	19	1	p. 11	697088	18	1	p. 5	790028	30	1	p. 9		
691032	31	1	p. 7	697089	17	1	p. 5	790031	31	1	p. 9		
691061	13	2	p. 5	697099	10	1	p. 11	790175	7	1	p. 9		
691095	12	2	p. 3	697102	30	2	p. 5	F000-1106-00	10	1	p. 15		
691108	18	4	p. 3	697103	43	1	p. 5	F000-1145-00	51	1	p. 17		
691119	7	1	p. 5	697104	10	1	p. 11	F000-1375-00	25	1	p. 15		
691148	21	2	p. 3	697106	28	1	p. 13	F000-1425-00	36	1	p. 15		
691183	10	4	p. 5	697109	9	1	p. 11	F000-1746-00	14	1	p. 15		
691188	19	1	p. 5	697109	26	1	p. 7	F000-1919-00	2	16	p. 15		
691224	17	1	p. 7	697110	27	1	p. 13	F000-3184-00	53	2	p. 17		
691227	14	1	p. 9	697110	34	1	p. 7	F000-3624-00	17	1	p. 15		
691251	8	1	p. 5	697112	8	1	p. 11	F000-3625-00	18	1	p. 15		
691261	10	1	p. 7	697113	11	1	p. 11	F000-3627-00	26	1	p. 15		
691265	3	1	p. 7	697122	35	1	p. 5	F000-3628-00	35	1	p. 15		
691279	3	1	p. 3	697123	30	1	p. 7	F000-3630-00	41	1	p. 15		
691279	4	1	p. 3	697123	33	1	p. 9	F000-3645-00	42	1	p. 15		
691283	6	1	p. 7	697123	37	1	p. 5	F000-3683-00	49	1	p. 17		
691286	15	1	p. 7	697124	12	1	p. 11	F000-3714-00	50	1	p. 17		
691293	11	1	p. 7	697128	5	1	p. 11	F000-3719-00	47	1	p. 15		
691326	10	1	p. 9	697133	29	1	p. 5	F000-3758-00	63	1	p. 17		
691333	18	1	p. 9	697144	5	1	p. 11	F000-3760-00	68	1	p. 17		
691374	6	1	p. 5	697151	24	1	p. 7	F000-3783-00	31	1	p. 15		
691532	16	1	p. 7	697155	45	1	p. 5	F000-3830-00	27	1	p. 15		
				697156	14	2	p. 11	F000-3839-00	57	1	p. 17		

code	pos.	q.ty	page
F000-3841-00	28	1	p. 15
F000-3843-00	65	2	p. 17
F000-3847-00	23	1	p. 15
F000-3866-00	46	1	p. 15
F000-3867-00	30	1	p. 15
F000-3868-00	48	1	p. 15
F000-3869-00	32	1	p. 15
F000-3876-00	13	2	p. 15
F000-3907-00	70	2	p. 17
F000-3919-00	58	1	p. 17
F000-3967-00	39	1	p. 15
F000-4300-00	98	1	p. 17
F000-4689-00	11	4	p. 15
F000-4691-00	37	1	p. 15
F000-4758-00	22	1	p. 15
F000-5015-00	44	1	p. 15
F000-5016-00	43	1	p. 15
F000-5027-00	34	1	p. 15
F000-5130-00	52	2	p. 17
F000-5202-00	33	1	p. 15
F000-5270-00	56	2	p. 17
F000-5303-00	21	1	p. 15
F000-5304-M0	61	1	p. 17
F000-5364-00	45	1	p. 15
F000-5365-00	29	1	p. 15
F000-5508-00	9	1	p. 15
F000-5510-00	8	3	p. 15
F000-5511-00	12	1	p. 15
F000-5554-00	64	1	p. 17
F000-5555-00	69	1	p. 17
F000-5562-00	66	2	p. 17
F000-5620-00	16	1	p. 15
F000-5622-00	55	2	p. 17
F000-5623-00	59	2	p. 17
F000-5627-00	20	1	p. 15
F000-5737-00	24	1	p. 15
F000-5947-00	3	2	p. 15
F000-5948-00	4	2	p. 15
F000-5950-00	19	1	p. 15
F000-5960-00	62	1	p. 17
F000-5962-R0	1	1	p. 15
F000-6205-00	15	1	p. 15
F000-6358-00	38	1	p. 15
F000-6517-00	6	1	p. 15
F000-7003-00	40	1	p. 15
F000-7010-00	7	1	p. 15
F000-7029-00	67	1	p. 17
F000-7030-10	54	1	p. 17
F000-7030-20	60	1	p. 17
F000-7034-00	71	1	p. 17
F084-0052-00	5	1	p. 15