









# Genuine Spare Parts

---




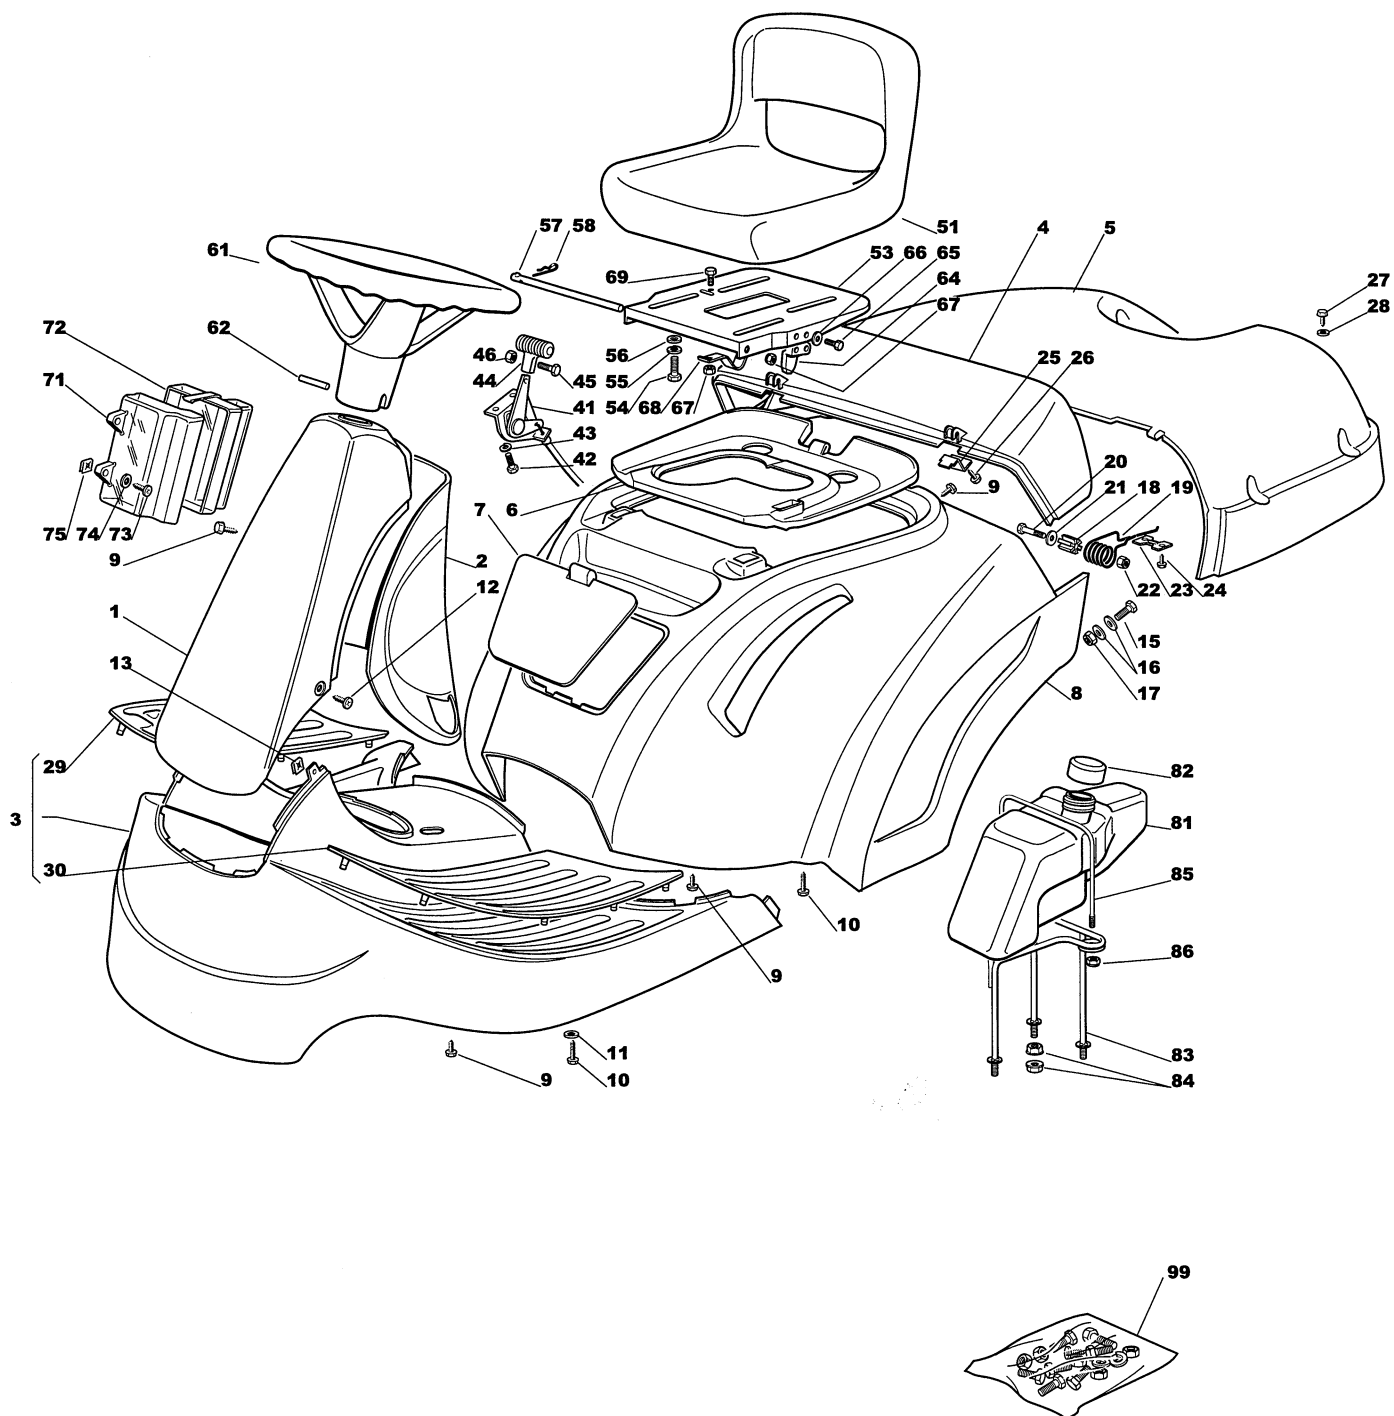


Utgåva Issue		Bildnr Picture No		ESTATE MASTER KAROSS		ESTATE MASTER BODY WORK		Sida Page	
2003- 11		1227A						26	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2511	2512							
1	1	1			1136- 0585- 01	Kåpa- främre.....	Cover- front.....		Inkl. pos 29, 30
2	1	1			1136- 0415- 01	Kåpa- bakre.....	Cover- rear .....		
3	1	1			1136- 0571- 01	Fotstegskåpa .....	Footboard cover .....		
4	1	1			1136- 0382- 01	Uppsammlarlock- fast.....	Grass bag cover- fixed .....		
5	1	1			1136- 0383- 01	Uppsammlarlock- rörligt.....	Grass bag cover- mobil .....		
6	1	1			1136- 0381- 01	Motorlucka .....	Engine cover .....		
7	1	1			1136- 0378- 01	Frontlucka.....	Front cover .....		
8	1				1136- 0572- 01	Hjulkåpa.....	Wheel cover .....		
8		1			1136- 1069- 01	Hjulkåpa.....	Wheel cover .....		
9	10	10			9836- 9618- 12	Skruv .....	Screw .....		
10	8	8			9836- 9635- 12	Skruv .....	Screw .....		
11	2	2			9699- 0060- 02	Planbricka.....	Flat washer .....		
12	2	2			9941- 0512- 16	Skruv .....	Screw .....		
13	2	2			1136- 0011- 01	Låsplatta .....	Lock plate .....		
15	2	2			9997- 0616- 16	Skruv .....	Screw .....		
16	4	4			9699- 0060- 02	Planbricka.....	Flat washer .....		
17	2	2			9747- 0631- 02	Låsmutter .....	Lock nut .....		
18	2	2			1136- 0375- 01	Bussning .....	Bushing .....		
19	2	2			1136- 0393- 01	Fjäder.....	Spring .....		
20	2	2			9997- 0845- 12	Skruv .....	Screw .....		
21	2	2			1136- 0014- 01	Bricka .....	Washer .....		
22	2	2			9747- 0831- 02	Mutter.....	Lock nut .....		
23	2	2			1136- 0404- 01	Platta .....	Plate .....		
24	4	4			9836- 9618- 12	Skruv .....	Screw .....		
25	2	2			1136- 0405- 01	Plåt .....	Plate .....		
26	2	2			9836- 9618- 12	Skruv .....	Screw .....		
27	4	4			9847- 8116- 16	Skruv .....	Screw .....		
28	4	4			9699- 0035- 02	Planbricka.....	Flat washer .....		
29	1	1			1136- 0379- 01	• Fotstegsskydd- hö.....	• Footboard cover- RH .....		
30	1	1			1136- 0380- 01	• Fotstegsskydd- vä.....	• Footboard cover- LH.....		
41	1	1			1136- 0556- 01	Gasreglage.....	Throttle control .....		
42	2	2			9997- 0412- 16	Skruv .....	Screw .....		
43	2	2			9683- 0010- 02	Bricka .....	Washer.....		
44	1	1			1136- 0192- 01	Knopp .....	Handle.....		
45	1	1			9865- 0412- 16	Skruv .....	Screw .....		
46	1	1			9799- 0431- 02	Mutter.....	Nut .....		
51	1	1			1136- 0315- 01	Sits .....	Seat.....		
53	1	1			1136- 0252- 01	Sitsplatta .....	Seat plate .....		
54	4	4			9997- 0820- 16	• Skruv .....	• Screw .....		
55	4	4			9683- 0030- 02	• Låsbricka .....	• Lock washer .....		
56	4	4			9699- 0056- 02	• Planbricka.....	• Flat washer .....		
57	1	1			1136- 1017- 01	Axel .....	Pin .....		
58	1	1			1136- 0095- 01	Låsnål.....	Hair pin .....		
61	1	1			1136- 0360- 01	Ratt.....	Steering wheel .....		
62	1	1			9595- 0272- 00	• Stift .....	• Pin .....		
64	1	1			1136- 0942- 01	Kam .....	Cam .....		
65	2	2			1136- 0820- 01	Skruv .....	Screw .....		
66	2	2			9699- 0018- 02	Bricka .....	Washer.....		
67	3	3			9747- 0531- 02	Mutter.....	Nut .....		
68	1	1			1136- 0891- 01	Fjäder.....	Spring .....		
69	1	1			9997- 0512- 16	Skruv .....	Screw .....		
71	1	1			1136- 0275- 01	Skydd- övre .....	Guard- upper .....		
72	1	1			1136- 0276- 01	Skydd- nedre .....	Guard- lower .....		
73	2	2			9847- 8038- 16	Skruv .....	Screw .....		
74	2	2			9699- 0024- 02	Planbricka.....	Flat washer .....		
75	2	2			1136- 0010- 01	Låsplatta .....	Lock plate .....		
81	1	1			1136- 0419- 01	Bränsletank.....	Fuel tank .....		
82	1	1			1136- 0344- 01	Tanklock .....	Tank cap .....		
83	1	1			1136- 0591- 01	Tankstöd.....	Tank support .....		
84	6	6			9739- 0831- 22	Mutter.....	Nut .....		
85	1	1			1136- 0368- 01	Tankbygel .....	Tank clamp .....		
86	2	2			9747- 0631- 02	Låsmutter .....	Lock nut .....		
99	1	1			1136- 1238- 01	Tillbehörspåse .....	Key outfit.....		
								Inkl. pos 54 - 56, 62	

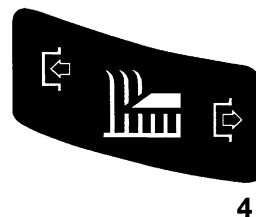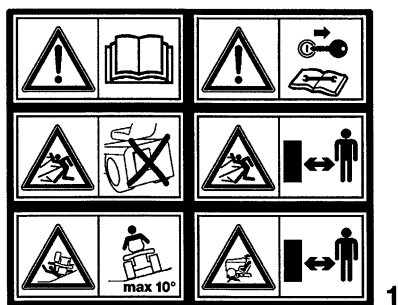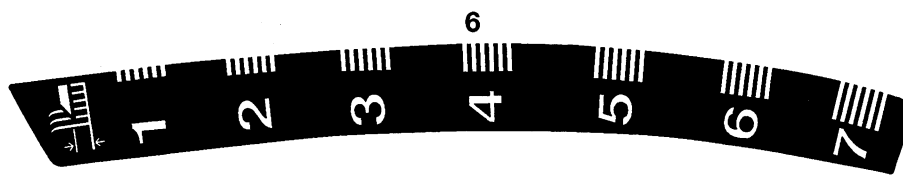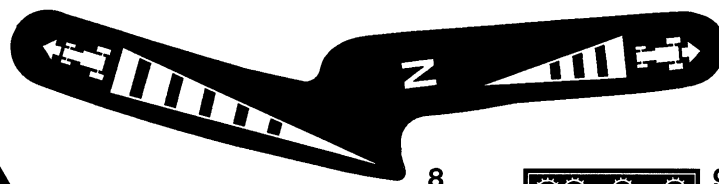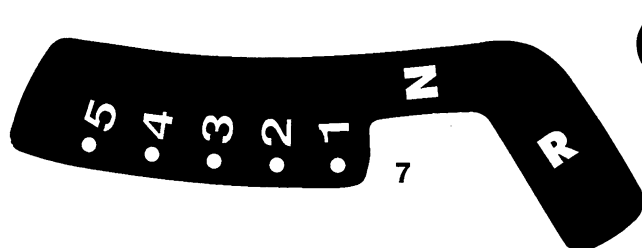

Utgåva Issue  2003- 11		Bildnr Picture No  1209A		ESTATE MASTER DEKALER		ESTATE MASTER LABELS		Sida Page  28	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2511	2512							
1	1	1			1136- 0035- 01	Dekal .....	Label .....		
2	1	1			1136- 0037- 01	Dekal .....	Label .....		
3	1	1			1136- 0032- 01	Dekal .....	Label .....		
4	1	1			1136- 0036- 01	Dekal .....	Label .....		
5	1	1			1136- 0038- 01	Dekal .....	Label .....		
6	1	1			1136- 0034- 01	Dekal .....	Label .....		
7	1				1136- 0033- 01	Dekal .....	Label .....		
8		1			1136- 0826- 01	Dekal .....	Label .....		
9		1			1136- 0030- 01	Dekal .....	Label .....		
10	2	2			1136- 0021- 01	Dekal .....	Label .....		

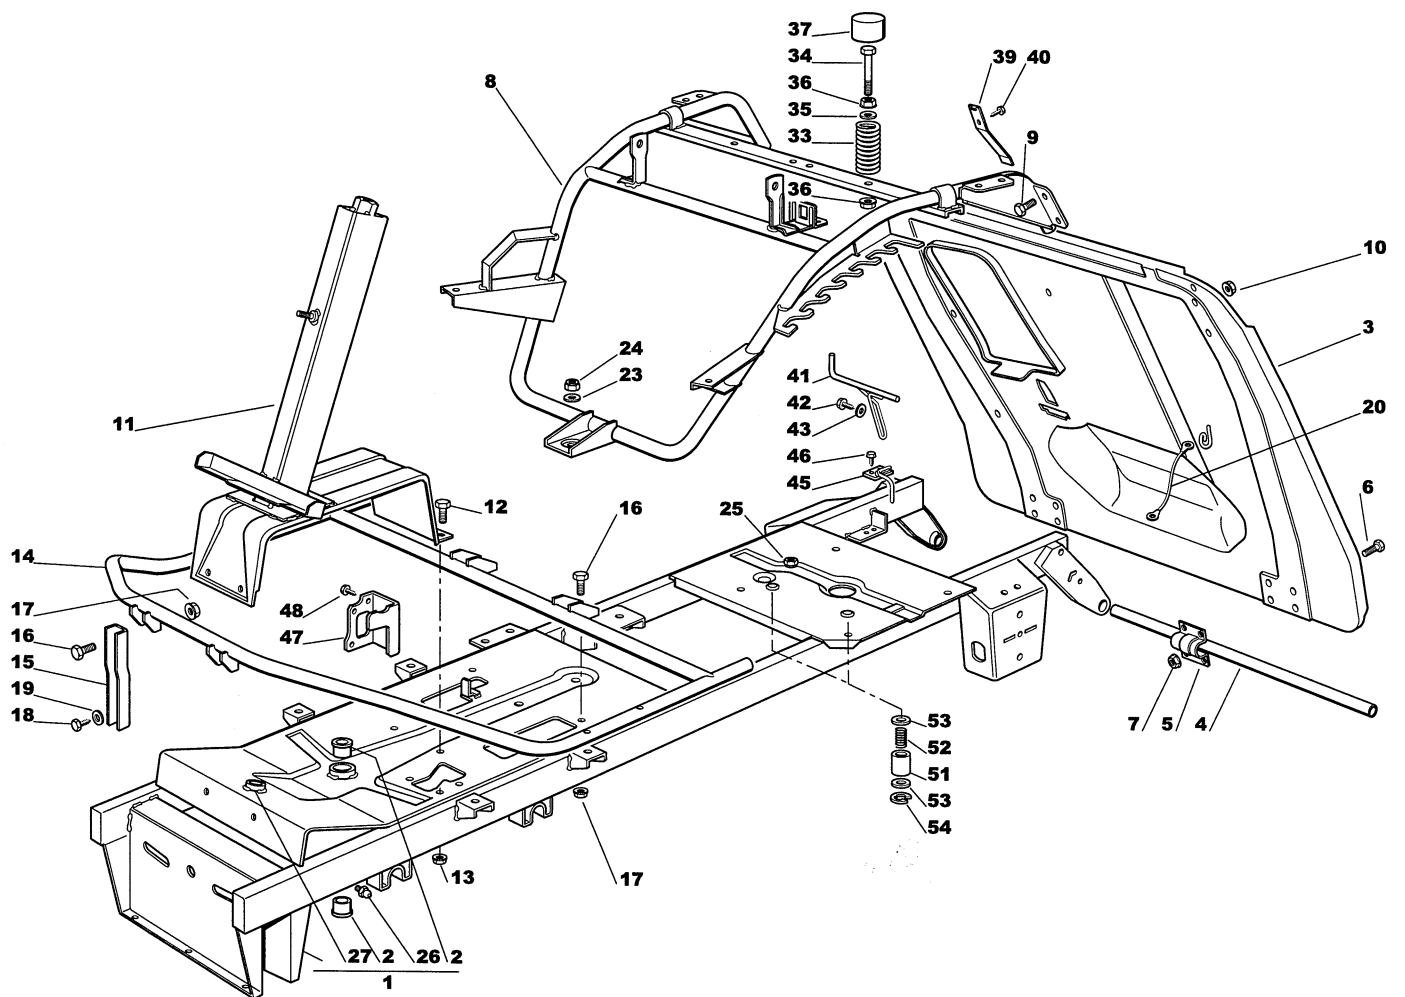


Utgåva Issue 2003- 11		Bildnr Picture No 1226B		ESTATE MASTER CHASSI		ESTATE MASTER CHASSIS		Sida Page 30	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2511	2512							
1	1	1			1136- 1299- 01	Ram.....	Frame.....		Inkl. pos 2, 26, 27
2	2	2			1136- 0121- 01	• Bussning.....	• Bushing.....		
3	1	1			1136- 0582- 01	Plåt- bak.....	Plate- rear.....		
4	1	1			1136- 0371- 01	Pivotstång .....	Pivot.....		
5	2	2			1136- 0251- 01	Bygel .....	Clamp.....		
6	8	8			9997- 0616- 16	Skruv .....	Screw .....		
7	8	8			9739- 0631- 22	Mutter.....	Nut.....		
8	1	1			1136- 1288- 01	Ram- övre.....	Frame- top.....		
9	4	4			9997- 0816- 16	Skruv .....	Screw .....		
10	4	4			9739- 0831- 22	Mutter.....	Nut.....		
11	1	1			1136- 0592- 01	Stöd.....	Support.....		
12	4	4			9997- 0816- 16	Skruv .....	Screw .....		
13	4	4			9739- 0831- 22	Mutter.....	Nut.....		
14	1	1			1136- 0595- 01	Fotstegshållare .....	Footboard holder.....		
15	2	2			1136- 0423- 01	Stöd.....	Support.....		
16	4	4			9997- 0816- 16	Skruv .....	Screw .....		
17	4	4			9739- 0831- 22	Mutter.....	Nut.....		
18	2	2			9847- 8216- 16	Skruv .....	Screw .....		
19	2	2			9699- 0035- 02	Planbricka.....	Flat washer.....		
20	1	1			1136- 0566- 01	Lina .....	Cord .....		
23	1	1			9699- 0056- 02	Planbricka.....	Flat washer.....		
24	1	1			9747- 0831- 02	Mutter.....	Lock nut.....		
25	1	1			1136- 0013- 01	Mutter.....	Nut.....		
26	1	1			9501- 0500- 00	• Smörjnippel .....	• Grease joint.....		
27	1	1			1136- 1226- 01	• Bussning.....	• Bushing.....		
33	2	2			1136- 1240- 01	Fjäder.....	Spring .....		
34	2	2			1136- 1250- 01	Skruv .....	Screw .....		
35	2	2			9699- 0090- 02	Planbricka.....	Flat washer.....		
36	4	4			9739- 0831- 22	Mutter.....	Nut.....		
37	2	2			1136- 0156- 01	Lock.....	Cap.....		
39	1	1			1136- 0395- 01	Fjäder.....	Spring .....		
40	1	1			9848- 8013- 16	Skruv .....	Screw .....		
41	1	1			1136- 0387- 01	Styrning.....	Guide .....		
42	1	1			9847- 8216- 16	Skruv .....	Screw .....		
43	1	1			9699- 0060- 02	Planbricka.....	Flat washer.....		
45	1				1136- 0388- 01	Remstyrning.....	Belt guide.....		
46	2				9848- 8013- 16	Skruv .....	Screw .....		
47	1	1			1136- 0421- 01	Fäste.....	Clamp.....		
48	2	2			9847- 7809- 16	Skruv .....	Screw .....		
51	2	2			1136- 1254- 01	Bussning .....	Bushing.....		
52	2	2			1136- 1266- 01	Fjäder.....	Spring .....		
53	4	4			1136- 0308- 01	Bricka .....	Washer.....		
54	2	2			1136- 1211- 01	Låsring .....	Snap ring .....		

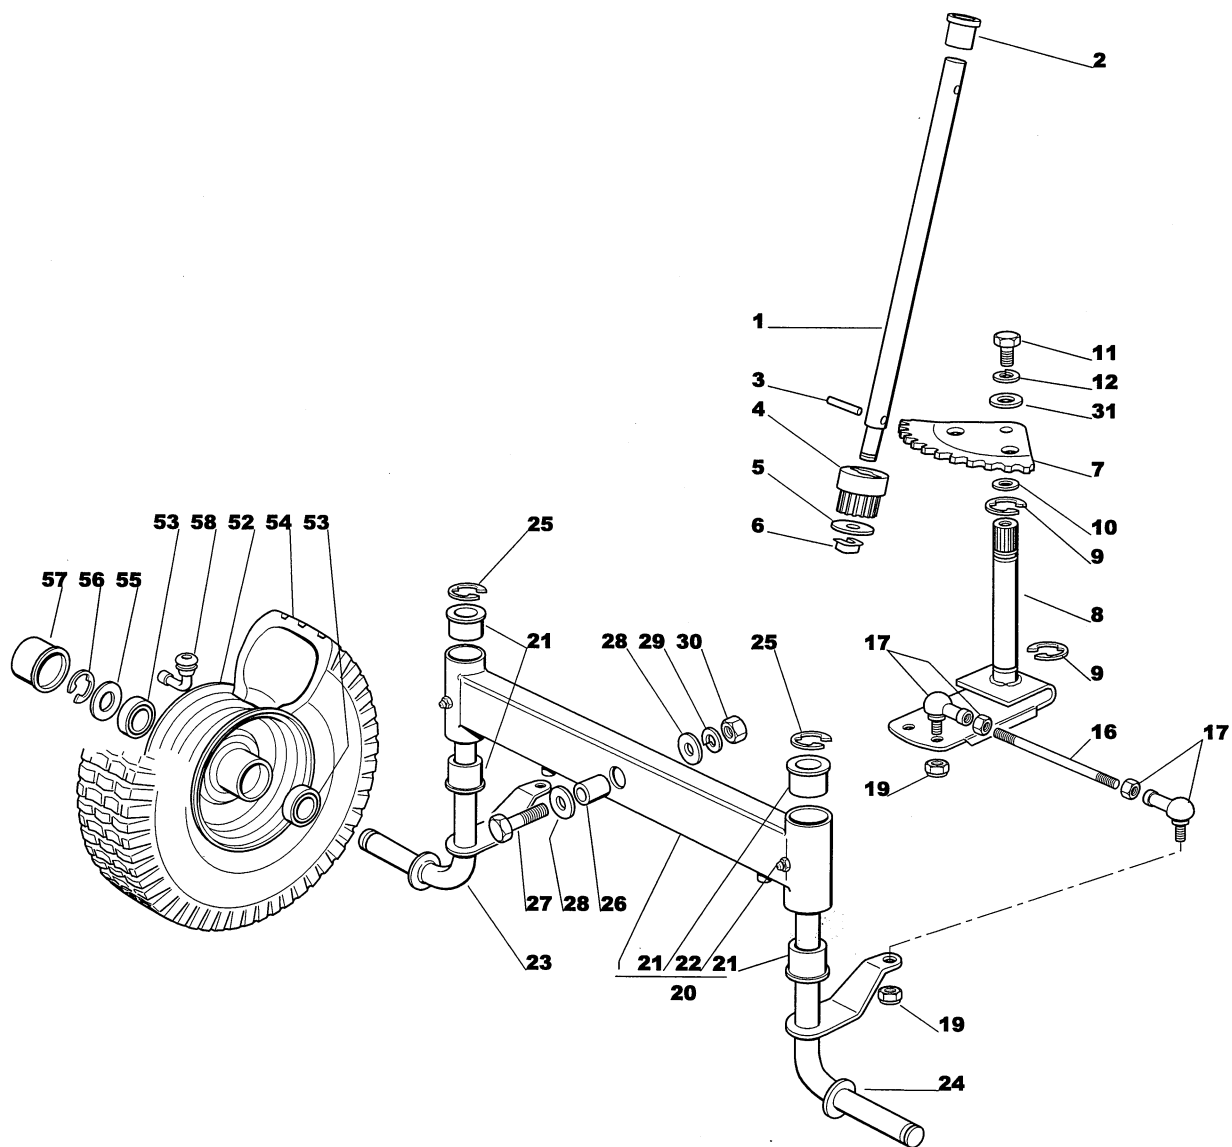





Utgåva Issue  2003- 11		Bildnr Picture No  1228		ESTATE MASTER STYRNING		ESTATE MASTER STEERING		Sida Page  32	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2511	2512							
1	1				1136- 0403- 01	Rattstång .....	Steering column.....		Inkl. pos 21, 22
2	1				1136- 0124- 01	Bussning .....	Bushing .....		
3	1				9595- 0262- 00	Spännstift .....	Locating pin .....		
4	1				1136- 0408- 01	Styrdrev .....	Steering pinion.....		
5	1				9699- 0037- 02	Bricka .....	Washer .....		
6	1				1136- 0008- 01	Låsplatta .....	Lock plate .....		
7	1				1136- 0588- 01	Styrsektor .....	Steering sector.....		
8	1				1136- 0557- 01	Styraxel .....	Steering shaft.....		
9	2				9652- 0015- 04	Låsring .....	Retaining ring .....		
10	0- 2				9695- 0014- 00	Bricka .....	Washer .....		
11	1				9997- 0820- 16	Skruv .....	Screw .....		
12	1				9683- 0030- 02	Låsbricka .....	Lock washer .....		
16	2				1136- 0424- 01	Styrstag .....	Tie rod.....		
17	4				1136- 0092- 01	Kulled .....	Ball joint.....		
19	4				9747- 1031- 02	Låsmutter .....	Lock nut.....		
20	1				1136- 0564- 01	Framaxel kpl .....	Front wheel axle assy .....		
21	4				1136- 0121- 01	• Bussning .....	• Bushing .....		
22	2				9501- 0500- 00	• Smörjnippel .....	• Grease joint.....		
23	1				1136- 0575- 01	Hjulspindel- hö.....	Stub axle- RH .....		
24	1				1136- 0576- 01	Hjulspindel- vä .....	Stub axle- LH.....		
25	2				9652- 0015- 04	Låsring .....	Retaining ring .....		
26	1				1136- 0165- 01	Distans .....	Spacer.....		
27	1				9997- 1260- 02	Skruv .....	Screw .....		
28	2				1136- 0016- 01	Bricka .....	Washer .....		
29	1				9683- 0055- 02	Låsbricka .....	Lock washer .....		
30	1				9799- 1231- 02	Mutter.....	Nut .....		
31	1				9699- 0090- 02	Planbricka.....	Flat washer .....		
52	2				1136- 0567- 01	Fälg.....	Rim .....		
53	4				1136- 0157- 01	Lager .....	Bearing.....		
54	2				1136- 0409- 01	Däck (Turf Saver).....	Tire (Turf Saver) .....		
54	2				1136- 0411- 01	Däck (Deli).....	Tire (Deli) .....		
55	2				1136- 0305- 01	Bricka .....	Washer .....		
56	2				9652- 0015- 04	Låsring .....	Retaining ring .....		
57	2				1136- 0081- 01	Navkapsel .....	Hub cap.....		
58	2				1136- 0359- 01	Ventil .....	Valve .....		

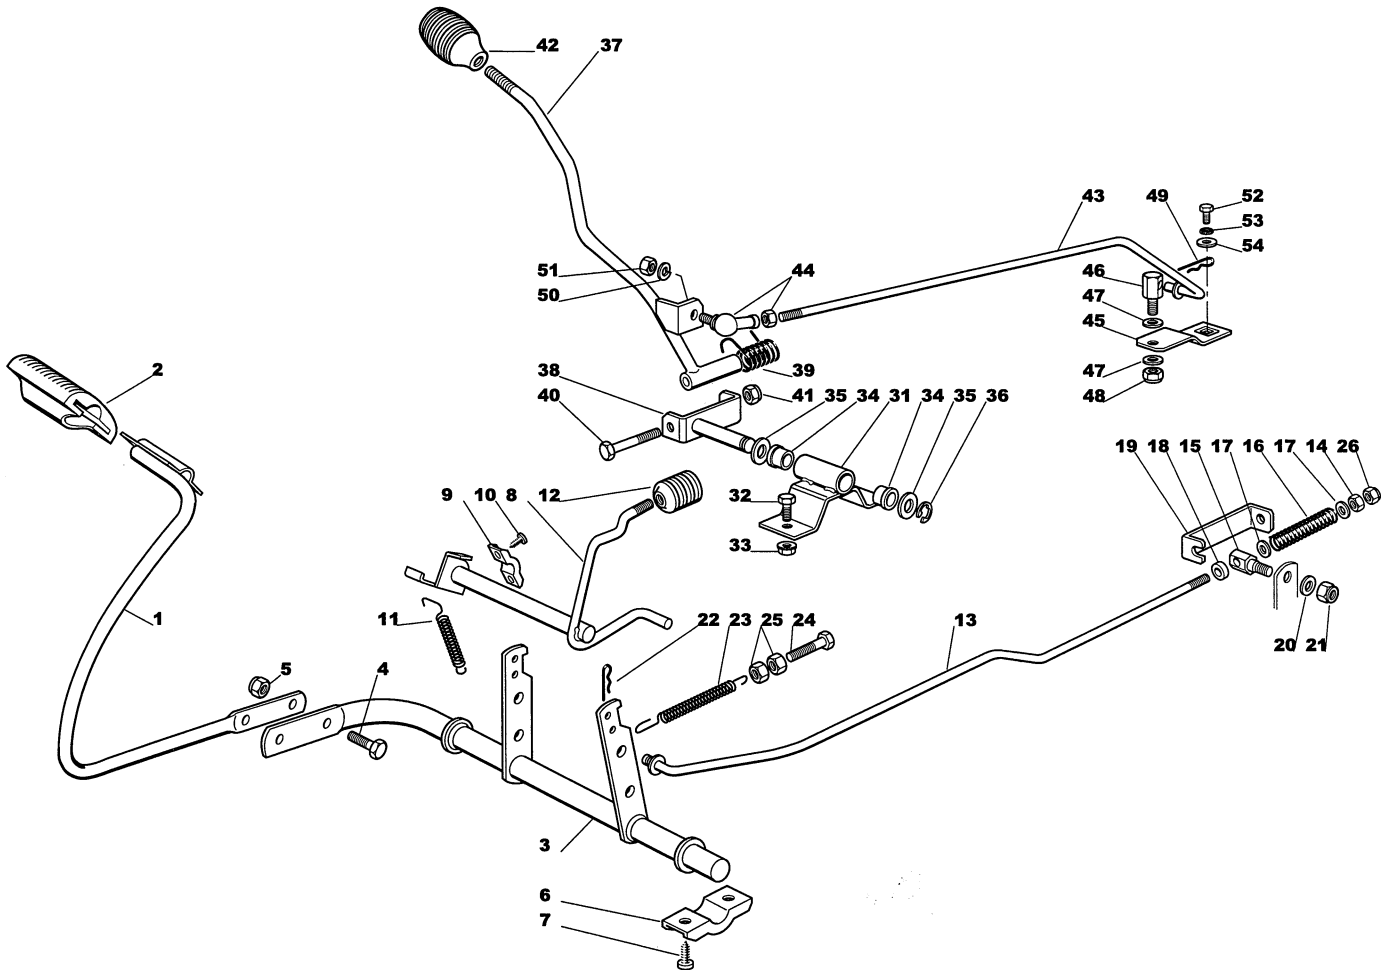

Utgåva Issue 2003- 11		Bildnr Picture No 1229A		ESTATE MASTER BROMSREGLAGE VÄXELREGLAGE		ESTATE MASTER BRAKE CONTROL GEAR SHIFTER CONTROL		Sida Page 34	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2511								
1	1				1136- 0581- 01	Bromspedal .....	Brake pedal .....		
2	1				1136- 0152- 01	Pedalskydd .....	Pedal cover .....		
3	1				1136- 0562- 01	Pedalaxel .....	Pedal shaft .....		
4	2				9997- 0825- 16	Skruv .....	Screw .....		
5	2				9747- 0831- 02	Mutter .....	Lock nut .....		
6	2				1136- 0406- 01	Bygel .....	Clamp .....		
7	4				9847- 8119- 16	Skruv .....	Screw .....		
8	1				1136- 0561- 01	P- bromsaxel .....	Parking brake shaft .....		
9	2				1136- 0256- 01	Bygel .....	Plate .....		
10	4				9847- 8016- 16	Skruv .....	Screw .....		
11	1				1136- 0394- 01	Fjäder .....	Spring .....		
12	1				1136- 0392- 01	Knopp .....	Knob .....		
13	1				1136- 0369- 01	Bromsstång .....	Brake rod .....		
14	1				9799- 0831- 02	Mutter .....	Nut .....		
15	1				1136- 0402- 01	Ledbult .....	Pivot bolt .....		
16	1				1136- 0218- 01	Fjäder .....	Spring .....		
17	2				9699- 0090- 02	Planbricka .....	Flat washer .....		
18	1				1136- 0084- 01	Distans .....	Spacer .....		
19	1				1136- 0329- 01	Bygel .....	Clamp .....		
20	1				9699- 0085- 02	Planbricka .....	Flat washer .....		
21	1				9747- 0631- 02	Låsmutter .....	Lock nut .....		
22	1				1136- 0095- 01	Låsnål .....	Hair pin .....		
23	1				1136- 0209- 01	Fjäder .....	Spring .....		
24	1				1136- 0094- 01	Skruv .....	Screw .....		
25	2				9799- 0831- 02	Mutter .....	Nut .....		
26	1				9747- 0831- 02	Mutter .....	Lock nut .....		
31	1				1136- 0589- 01	Fäste .....	Support .....		
32	1				9997- 0820- 16	Skruv .....	Screw .....		
33	1				9739- 0831- 22	Mutter .....	Nut .....		
34	2				1136- 0374- 01	Bussning .....	Bushing .....		
35	2				9699- 0037- 02	Bricka .....	Washer .....		
36	1				9650- 0012- 04	Seegersäkring .....	Circlip .....		
37	1				1136- 0577- 01	Växelspak .....	Gearshift lever .....		
38	1				1136- 0590- 01	Bygel .....	Clamp .....		
39	1				1136- 0212- 01	Fjäder .....	Spring .....		
40	1				9997- 0880- 16	Skruv .....	Screw .....		
41	1				9747- 0831- 02	Mutter .....	Lock nut .....		
42	1				1136- 0503- 01	Knopp .....	Knob .....		
43	1				1136- 0366- 01	Växelsång .....	Shifter rod .....		
44	1				1136- 0093- 01	Kulled .....	Ball joint .....		
45	1				1136- 0390- 01	Växelarm .....	Gearshift arm .....		
46	1				1136- 0235- 01	Ledbult .....	Pivot bolt .....		
47	2				1136- 0309- 01	Bricka .....	Washer .....		
48	1				9747- 0831- 02	Mutter .....	Lock nut .....		
49	1				1136- 0095- 01	Låsnål .....	Hair pin .....		
50	1				9683- 0030- 02	Låsbricka .....	Lock washer .....		
51	1				9799- 0831- 02	Mutter .....	Nut .....		
52	1				9987- 5016- 16	Skruv .....	Screw .....		
53	1				9678- 0008- 02	Låsbricka .....	Lock washer .....		
54	1				1136- 0091- 01	Bricka .....	Washer .....		

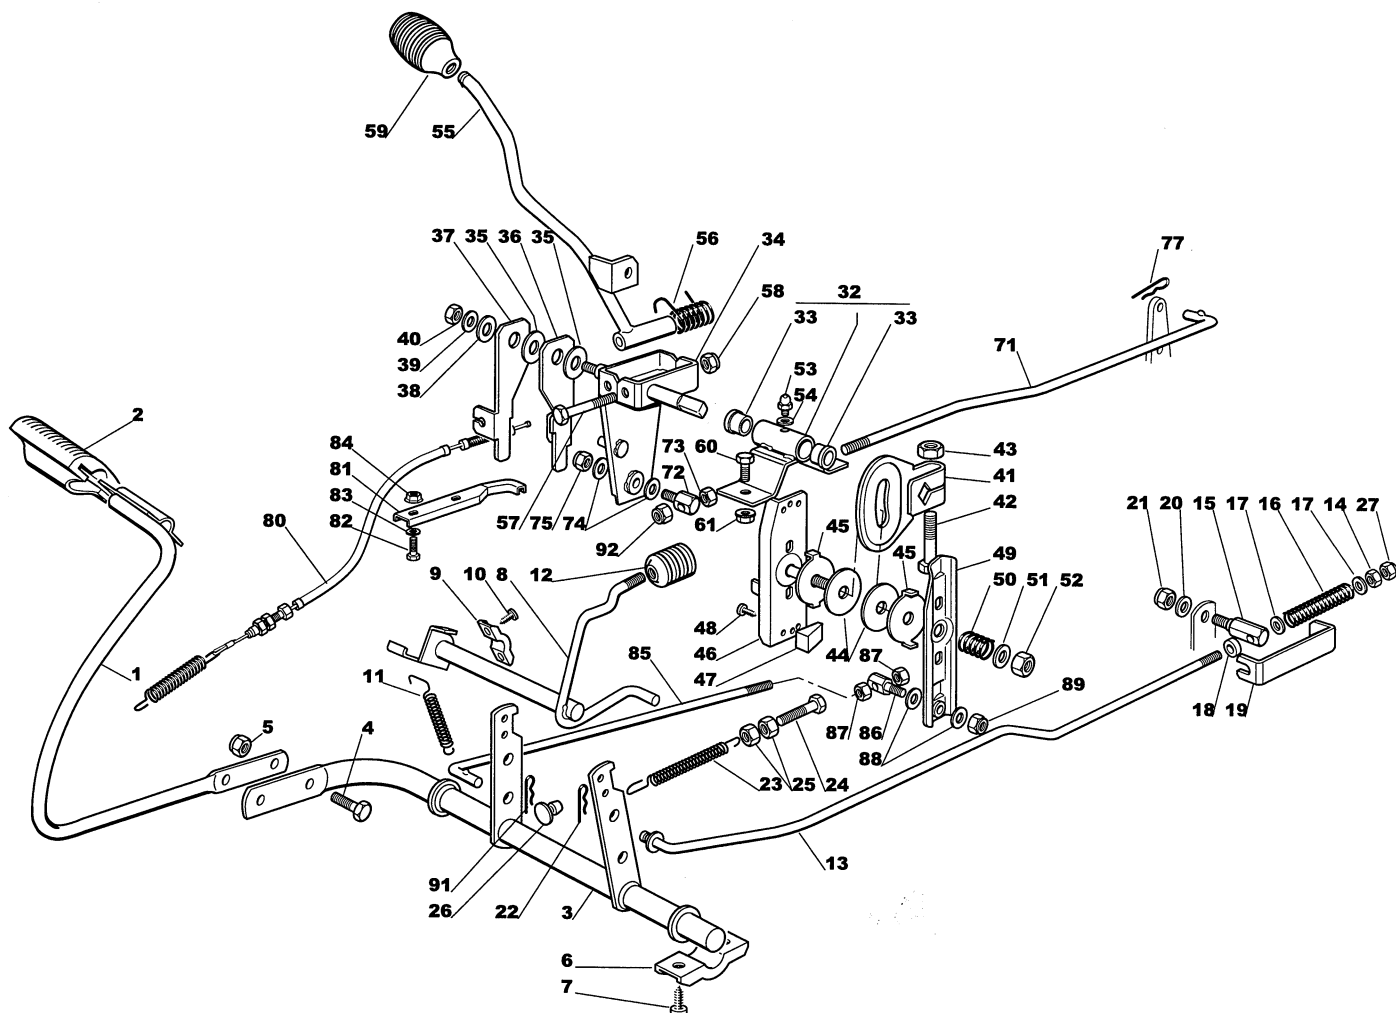

Utgåva Issue 2003- 11		Bildnr Picture No 1445A		ESTATE MASTER HST BROMSREGLAGE DRIVREGLAGE		ESTATE MASTER HST BRAKE CONTROL DRIVE CONTROL		Sida Page 36	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2512								
1	1				1136-0581-01	Bromspedal .....	Brake pedal .....		Inkl. pos 33
2	1				1136-0151-01	Pedalskydd .....	Pedal cover .....		
3	1				1136-0562-01	Pedalaxel .....	Pedal shaft .....		
4	2				9997-0825-16	Skruv .....	Screw .....		
5	2				9747-0831-02	Mutter .....	Lock nut .....		
6	2				1136-0406-01	Bygel .....	Clamp .....		
7	4				9847-8119-16	Skruv .....	Screw .....		
8	1				1136-0561-01	P- bromsaxel .....	Parking brake shaft .....		
9	2				1136-0256-01	Bygel .....	Plate .....		
10	4				9847-8016-16	Skruv .....	Screw .....		
11	1				1136-0394-01	Fjäder .....	Spring .....		
12	1				1136-0392-01	Knopp .....	Knob .....		
13	1				1136-0930-01	Stång .....	Rod .....		
14	1				9799-0831-02	Mutter .....	Nut .....		
15	1				1136-0402-01	Ledbult .....	Pivot bolt .....		
16	1				1136-0218-01	Fjäder .....	Spring .....		
17	2				9699-0090-02	Planbricka .....	Flat washer .....		
18	1				1136-0084-01	Distans .....	Spacer .....		
19	1				1136-0329-01	Bygel .....	Clamp .....		
20	1				9699-0085-02	Planbricka .....	Flat washer .....		
21	1				9747-0631-02	Låsmutter .....	Lock nut .....		
22	1				1136-0095-01	Låsnål .....	Hair pin .....		
23	1				1136-0204-01	Fjäder .....	Spring .....		
24	1				1136-0094-01	Skruv .....	Screw .....		
25	2				9799-0831-02	Mutter .....	Nut .....		
26	1				1136-0386-01	Gummiplugg .....	Grommet .....		
27	1				9747-0831-02	Mutter .....	Lock nut .....		
32	1				1136-1099-01	Fäste m.lager .....	Bracket w.bush .....		
33	2				1136-0937-01	• Bussning .....	• Bush .....		
34	1				1136-1096-01	Arm .....	Lever .....		
35	2				1136-0088-01	Bricka .....	Washer .....		
36	1				1136-1000-01	Bygel .....	Clamp .....		
37	1				1136-1001-01	Bygel .....	Clamp .....		
38	1				1136-0089-01	Bricka .....	Washer .....		
39	1				9699-0056-02	Planbricka .....	Flat washer .....		
40	1				9712-0831-02	Låsmutter .....	Lock nut .....		
41	1				1136-0996-01	Sektor .....	Sector .....		
42	1				1136-0824-01	Skruv .....	Screw .....		
43	1				1136-0806-01	Mutter .....	Nut .....		
44	2				1136-0950-01	Platta .....	Plate .....		
45	2				1136-0992-01	Bricka .....	Washer .....		
46	1				1136-1098-01	Bygel .....	Clamp .....		
47	2				1136-0941-01	Kam .....	Cam .....		
48	2				9848-8013-16	Skruv .....	Screw .....		
49	1				1136-1097-01	Arm .....	Lever .....		
50	1				1136-0958-01	Fjäder .....	Spring .....		
51	1				1136-0308-01	Bricka .....	Washer .....		
52	1				1136-0806-01	Mutter .....	Nut .....		
53	1				9501-0500-00	Smörjnippel .....	Grease joint .....		
54	1				9699-0035-02	Planbricka .....	Flat washer .....		
55	1				1136-0577-01	Växelspak .....	Gearshift lever .....		
56	1				1136-0212-01	Fjäder .....	Spring .....		
57	1				9997-0880-16	Skruv .....	Screw .....		
58	1				9747-0831-02	Mutter .....	Lock nut .....		
59	1				1136-0503-01	Knopp .....	Knob .....		
60	1				9997-0825-16	Skruv .....	Screw .....		
61	1				9739-0831-22	Mutter .....	Nut .....		
71	1				1136-0931-01	Stång .....	Rod .....		
72	1				1136-0235-01	Ledbult .....	Pivot bolt .....		
73	1				9799-0831-02	Mutter .....	Nut .....		
74	2				1136-0309-01	Bricka .....	Washer .....		
75	1				9712-0831-02	Låsmutter .....	Lock nut .....		
77	1				1136-0095-01	Låsnål .....	Hair pin .....		

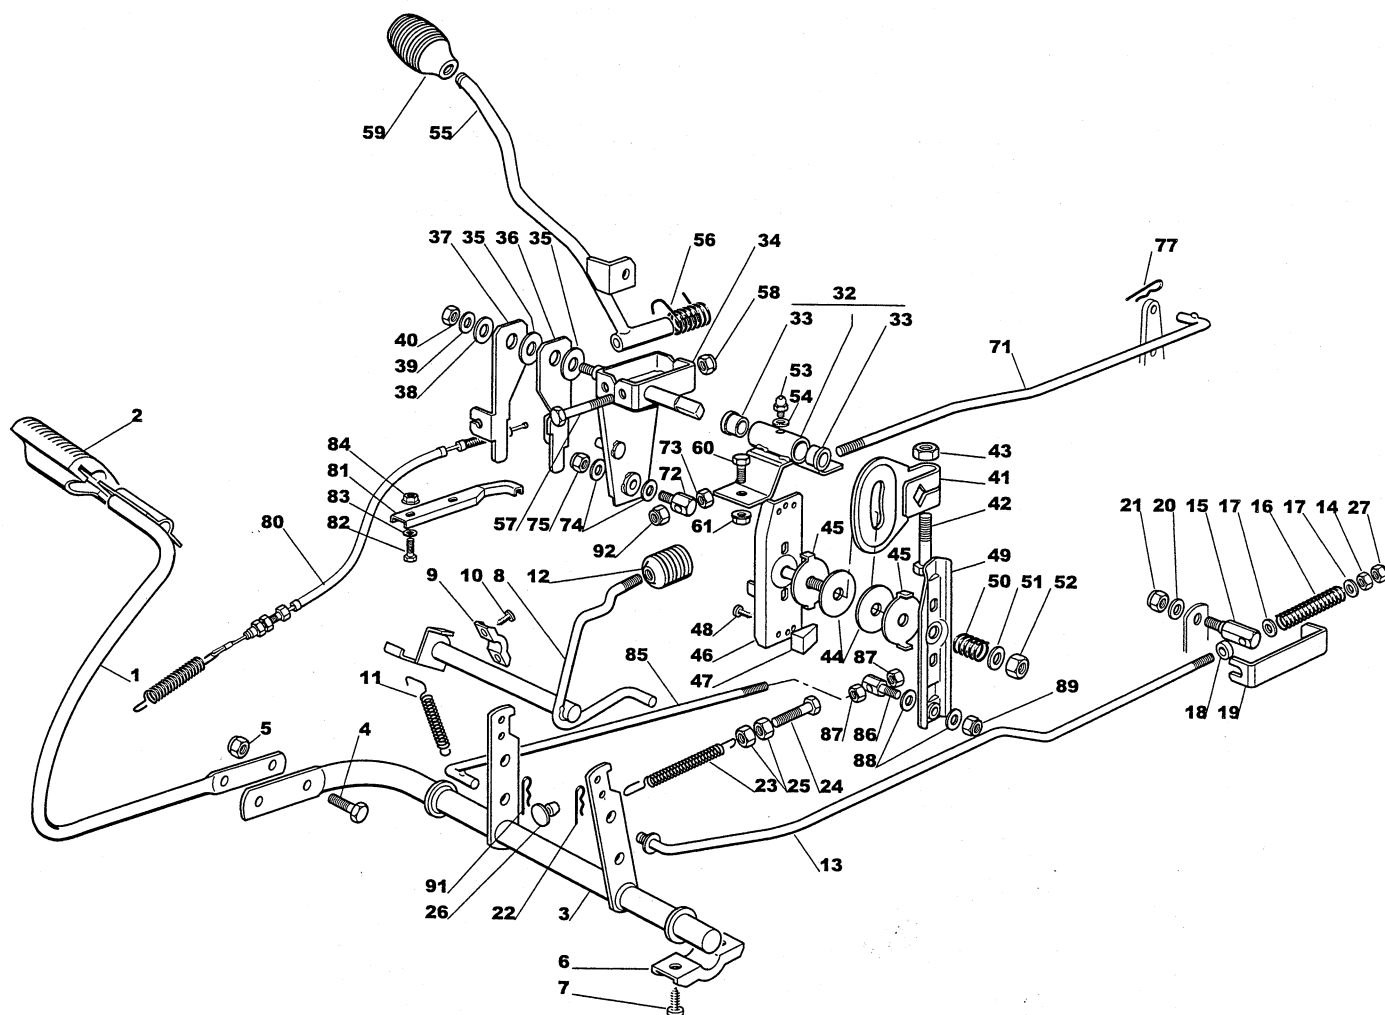


Utgåva Issue 2003- 11		Bildnr Picture No 1445A		ESTATE MASTER HST BROMSREGLAGE DRIVREGLAGE		ESTATE MASTER HST BRAKE CONTROL DRIVE CONTROL		Sida Page 38	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2512								
80	1				1136- 1072- 01	Wire.....	Wire .....		
81	1				1136- 1002- 01	Bygel .....	Clamp.....		
82	2				9997- 0620- 16	Skruv .....	Screw .....		
83	2				9699- 0035- 02	Planbricka.....	Flat washer .....		
84	2				9739- 0631- 22	Mutter.....	Nut .....		
85	1				1136- 0929- 01	Stång .....	Rod .....		
86	1				1136- 0235- 01	Ledbult .....	Pivot bolt.....		
87	2				9799- 0831- 02	Mutter.....	Nut .....		
88	2				1136- 0309- 01	Bricka .....	Washer.....		
89	1				9712- 0831- 02	Låsmutter .....	Lock nut .....		
91	1				1136- 0095- 01	Låsnål .....	Hair pin .....		
92	1				9747- 0831- 02	Mutter.....	Lock nut .....		







Utgåva Issue  2003- 11		Bildnr Picture No  1236A		ESTATE MASTER ELUTRUSTNING		ESTATE MASTER EL. EQUIPMENT		Sida Page  40	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2511	2512							
1	1				1136- 1293- 01	Kabelhärva.....	Harness.....		Inkl. pos 5
2	1				1136- 0314- 01	Elektronikkort .....	Electronic card .....		
3	2				9847- 7813- 16	Skruv .....	Screw .....		
4	1				1136- 0428- 01	• Säkring .....	• Fuse .....		6.3 A
5	1				1136- 0056- 01	• Tändningslås .....	• Ignition switch .....		Inkl. pos 6 - 8
6	1				1136- 0049- 01	•• Mutter .....	•• Nut .....		
7	1				1134- 4097- 01	•• Täckkåpa.....	•• Cap .....		
8	1				1134- 2848- 01	•• Tändningsnyckel .....	•• Ignition key .....		
9	1				1136- 0064- 01	Startrelä.....	Solenoid.....		
10	2				9848- 8013- 16	Skruv .....	Screw .....		
11	2				9794- 5131- 02	Mutter.....	Nut .....		
12	1				786201	Brytare.....	Neutral start switch .....		Växellåda/gearbox
13	4				1136- 0073- 01	Mikrobrytare.....	Micro switch .....		
14	1				1136- 0072- 01	Mikrobrytare.....	Micro switch .....		Full upps./grass bag
17	1				1136- 0135- 01	Kabel .....	Cable .....		
18	1				1136- 0376- 01	Kabel .....	Cable .....		
19	1				1134- 4804- 01	Batteri.....	Battery .....		
20	1				1136- 0422- 01	Batterihållare .....	Battery holder .....		
21	1				9747- 0831- 02	Mutter.....	Lock nut.....		
22	1				1136- 0059- 01	Polskydd.....	Protection .....		
23	1				9795- 3531- 02	Mutter.....	Nut .....		
24	3				1136- 0427- 01	Kabelhållare .....	Cable holder .....		
25	1				1136- 0426- 01	Kabelhållare .....	Cable holder .....		
99	1				1136- 1238- 01	Tillbehörspåse .....	Key outfit.....		Inkl. pos 4, 8

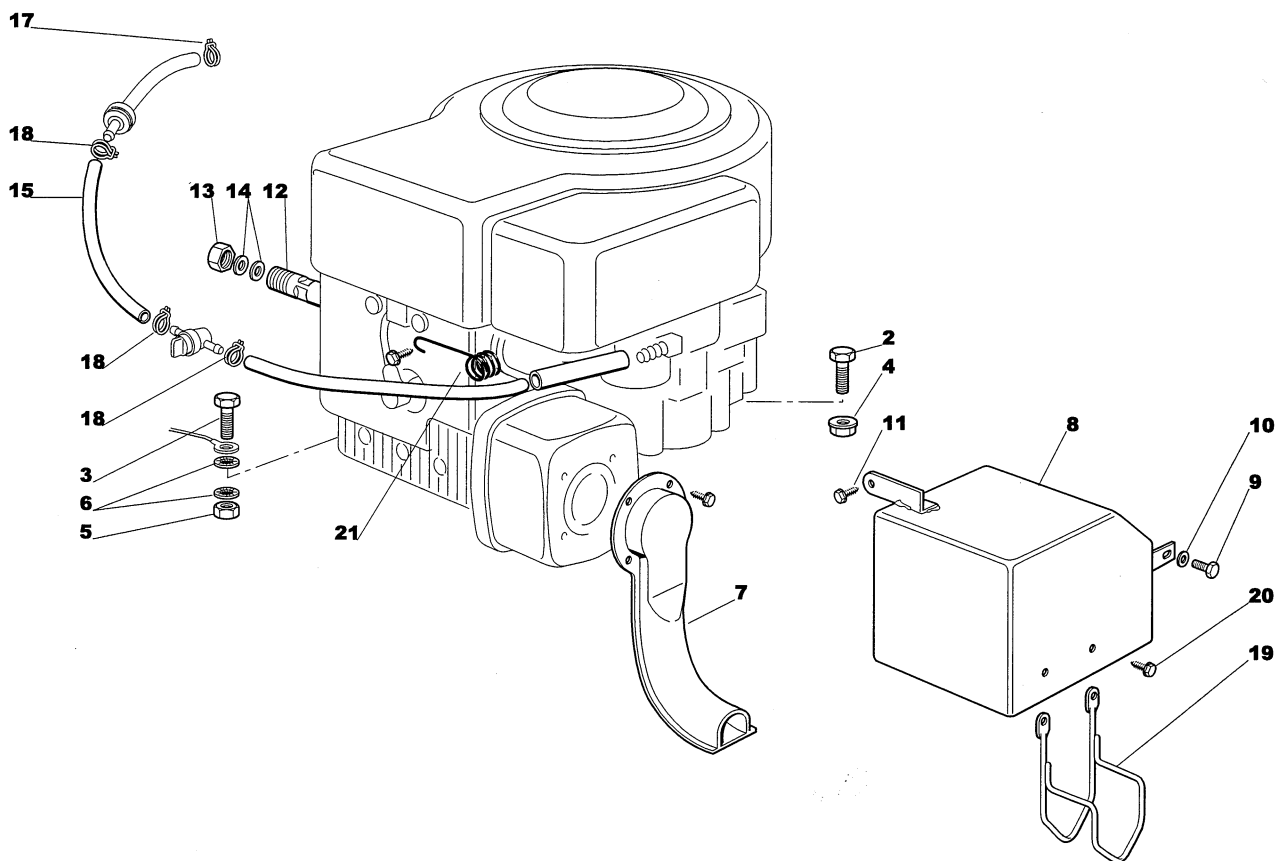


Utgåva Issue  2003- 11		Bildnr Picture No  1230		ESTATE MASTER MOTOR		ESTATE MASTER ENGINE		Sida Page  42	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2511 2512								
2	3				9997- 0830- 16	Skruv.....	Screw.....		
3	1				9997- 0835- 12	Skruv.....	Screw.....		
4	3				9739- 0831- 22	Mutter.....	Nut.....		
5	1				9799- 0831- 02	Mutter.....	Nut.....		
6	2				9677- 0009- 02	Låsbricka.....	Lock washer.....		
7	1				1136- 0586- 01	Avgasrör.....	Exhaust tube.....		
8	1				1136- 0518- 01	Ljuddämparskydd.....	Muffler protection.....		
9	1				9988- 3513- 16	Skruv.....	Screw.....		
10	1				9677- 0009- 02	Låsbricka.....	Lock washer.....		
11	1				9847- 8113- 16	Skruv.....	Screw.....		
12	1				1136- 0413- 01	Oljeavtappningsrör.....	Oil drain pipe.....		
13	1				1136- 0066- 01	Oljeavtappningsplugg.....	Oil drain plug.....		
14	2				1136- 0054- 01	Tätningring.....	Oil seal.....		
15	1				1136- 0352- 01	Bränsleslang.....	Fuel hose.....		
17	1				1136- 0046- 01	Slangklämma.....	Hose clamp.....		
18	3				1136- 0045- 01	Slangklämma.....	Hose clamp.....		
19	1				1136- 0414- 01	Utblåsskydd.....	Exhaust protection.....		
20	2				9848- 8013- 16	Skruv.....	Screw.....		
21	1				1136- 0397- 01	Fjäder.....	Spring.....		

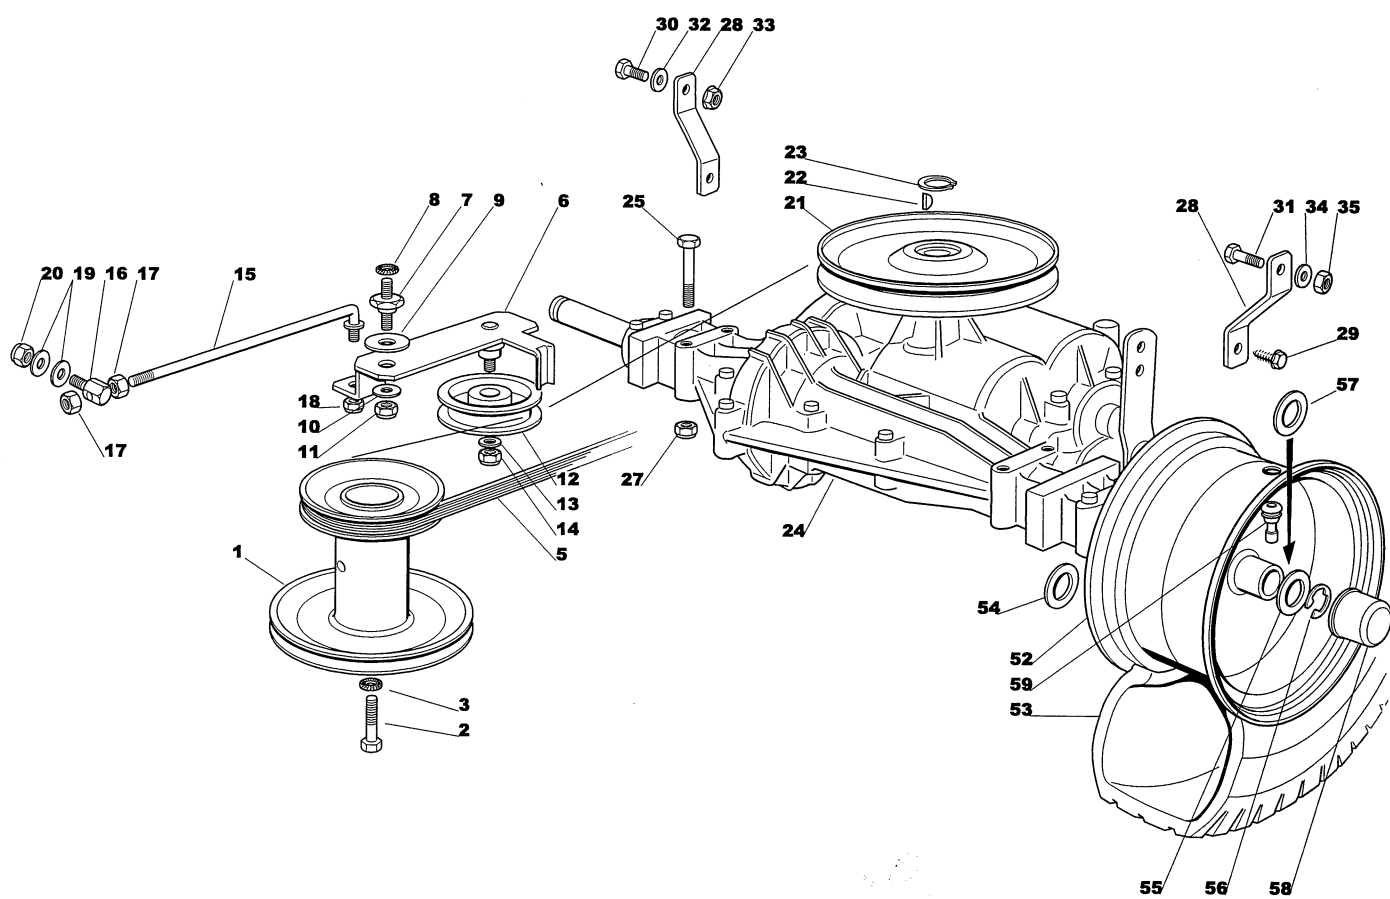

Utgåva Issue  2003- 11		Bildnr Picture No  1231		ESTATE MASTER TRANSMISSION		ESTATE MASTER TRANSMISSION		Sida Page  44	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2511								
1	1				1136- 0418- 01	Motorremskiva .....	Engine belt pulley .....		Peerless MST 205- 541
2	1				9987- 5351- 12	Skruv .....	Screw .....		
3	1				9683- 0045- 02	Bricka .....	Washer .....		
5	1				1136- 0430- 01	Kilrem .....	V- belt .....		
6	1				1136- 0578- 01	Spännarm .....	Tension arm .....		
7	1				1136- 0400- 01	Pinnbult .....	Stud bolt .....		
8	1				9677- 0009- 02	Låsbricka .....	Lock washer .....		
9	1				1136- 0088- 01	Bricka .....	Washer .....		
10	1				1136- 0309- 01	Bricka .....	Washer .....		
11	1				9712- 0831- 02	Låsmutter .....	Lock nut .....		
12	1				1136- 0289- 01	Spännrulle .....	Idler pulley .....		
13	1				9699- 0056- 02	Planbricka .....	Flat washer .....		
14	1				9747- 0831- 02	Mutter .....	Lock nut .....		
15	1				1136- 0367- 01	Spännstång .....	Tie rod .....		
16	1				1136- 0235- 01	Ledbult .....	Pivot bolt .....		
17	2				9799- 0831- 02	Mutter .....	Nut .....		
18	1				9747- 0831- 02	Mutter .....	Lock nut .....		
19	2				1136- 0309- 01	Bricka .....	Washer .....		
20	1				9747- 0831- 02	Mutter .....	Lock nut .....		
21	1				1136- 0520- 01	Remskiva .....	Belt pulley .....		
22	1				9600- 0050- 00	Woodruffkil .....	Key .....		
23	1				9650- 0016- 04	Spårring .....	Lock ring .....		
24	1				1136- 0051- 01	Transaxel .....	Transaxle .....		
25	4				9997- 0860- 16	Skruv .....	Screw .....		
27	4				9739- 0831- 22	Mutter .....	Nut .....		
28	2				1136- 0420- 01	Momentstag .....	Stay .....		
29	2				1136- 0017- 01	Skruv .....	Screw .....		
30	1				9997- 0820- 16	Skruv .....	Screw .....		
31	1				9997- 0825- 16	Skruv .....	Screw .....		
32	1				9699- 0056- 02	Planbricka .....	Flat washer .....		
33	1				9739- 0831- 22	Mutter .....	Nut .....		
34	1				9699- 0090- 02	Planbricka .....	Flat washer .....		
35	1				9747- 0831- 02	Mutter .....	Lock nut .....		
52	2				1136- 0568- 01	Fälg .....	Rim .....		
53	2				1136- 0410- 01	Däck (Turf Saver) .....	Tire (Turf Saver) .....		
53	2				1136- 0412- 01	Däck (Deli) .....	Tire (Deli) .....		
54	2				9699- 0119- 02	Bricka .....	Washer .....		
55	2				1136- 0305- 01	Bricka .....	Washer .....		
56	2				9652- 0015- 04	Låsring .....	Retaining ring .....		
57	2- 4				9695- 0015- 00	Bricka .....	Washer .....		
58	2				1136- 0081- 01	Navkapsel .....	Hub cap .....		
59	2				9545- 0500- 00	Ventil .....	Valve .....		

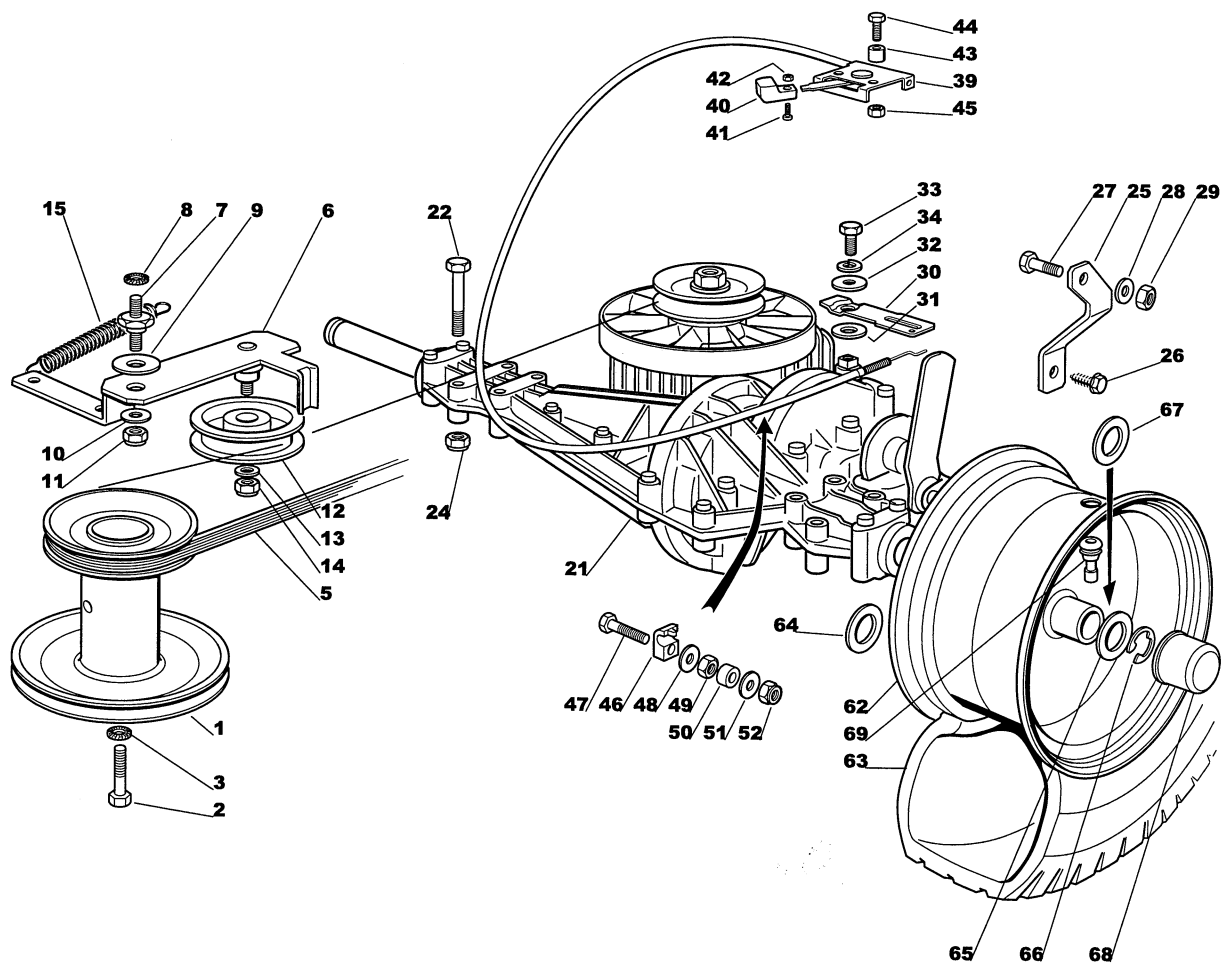


Utgåva Issue 2003- 11		Bildnr Picture No 1446A		ESTATE MASTER HST TRANSMISSION		ESTATE MASTER HST TRANSMISSION		Sida Page 46	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2512								
1	1				1136- 0418- 01	Motorremskiva .....	Engine belt pulley .....		Peerless LTH 2000
2	1				9987- 5351- 12	Skruv .....	Screw .....		
3	1				9683- 0045- 02	Bricka .....	Washer .....		
5	1				1136- 1020- 01	Drivrem .....	Drive belt.....		
6	1				1136- 1079- 01	Spännarm .....	Tension lever .....		
7	1				1136- 0400- 01	Pinnbult .....	Stud bolt .....		
8	1				9677- 0009- 02	Låsbricka .....	Lock washer .....		
9	1				1136- 0088- 01	Bricka .....	Washer .....		
10	1				1136- 0309- 01	Bricka .....	Washer .....		
11	1				9712- 0831- 02	Låsmutter .....	Lock nut.....		
12	1				1136- 0289- 01	Spännrulle .....	Idler pulley .....		
13	1				9699- 0056- 02	Planbricka .....	Flat washer .....		
14	1				9747- 0831- 02	Mutter .....	Lock nut.....		
15	1				1136- 0860- 01	Fjäder.....	Spring .....		
21	1				1136- 1222- 01	Transmission .....	Transmission.....		
22	4				9997- 0860- 16	Skruv .....	Screw .....		
24	4				9739- 0831- 22	Mutter.....	Nut .....		
25	1				1136- 1003- 01	Bygel .....	Clamp.....		
26	1				1136- 0017- 01	Skruv .....	Screw .....		
27	1				9997- 0825- 16	Skruv .....	Screw .....		
28	1				9699- 0090- 02	Planbricka .....	Flat washer .....		
29	1				9747- 0831- 02	Mutter.....	Lock nut.....		
30	1				1136- 1260- 01	Arm .....	Lever .....		
31	1				9699- 0037- 02	Bricka .....	Washer .....		
32	1				9699- 0085- 02	Planbricka .....	Flat washer .....		
33	1				9987- 5016- 16	Skruv .....	Screw .....		
34	1				9683- 0025- 02	Låsbricka .....	Lock washer .....		
39	1				1136- 1294- 01	Urkopplingsreglage .....	Disengage control .....		
40	1				1136- 0858- 01	Handtag .....	Handle.....		
41	1				9865- 0412- 16	Skruv .....	Screw .....		
42	1				9799- 0431- 02	Mutter.....	Nut .....		
43	2				1136- 0876- 01	Distans .....	Spacer .....		
44	2				1136- 0812- 01	Skruv .....	Screw .....		
45	2				9747- 0631- 02	Låsmutter .....	Lock nut.....		
46	1				1136- 1270- 01	Wireklämma .....	Wire clamp.....		
47	1				1136- 0820- 01	Skruv .....	Screw .....		
48	1				9699- 0018- 02	Bricka .....	Washer .....		
49	1				1136- 0604- 01	Mutter.....	Nut .....		
50	1				1136- 1223- 01	Distans .....	Spacer .....		
51	1				9699- 0018- 02	Bricka .....	Washer .....		
52	1				9747- 0531- 02	Mutter.....	Nut .....		
62	2				1136- 0568- 01	Fälg.....	Rim .....		
63	2				1136- 0410- 01	Däck (Turf Saver).....	Tire (Turf Saver) .....		
63	2				1136- 0412- 01	Däck (Deli).....	Tire (Deli) .....		
64	2				9699- 0119- 02	Bricka .....	Washer .....		
65	2				1136- 0305- 01	Bricka .....	Washer .....		
66	2				9652- 0015- 04	Låsring .....	Retaining ring .....		
67	0- 4				9695- 0015- 00	Bricka .....	Washer .....		
68	2				1136- 0081- 01	Navkapsel .....	Hub cap.....		
69	2				9545- 0500- 00	Ventil .....	Valve .....		

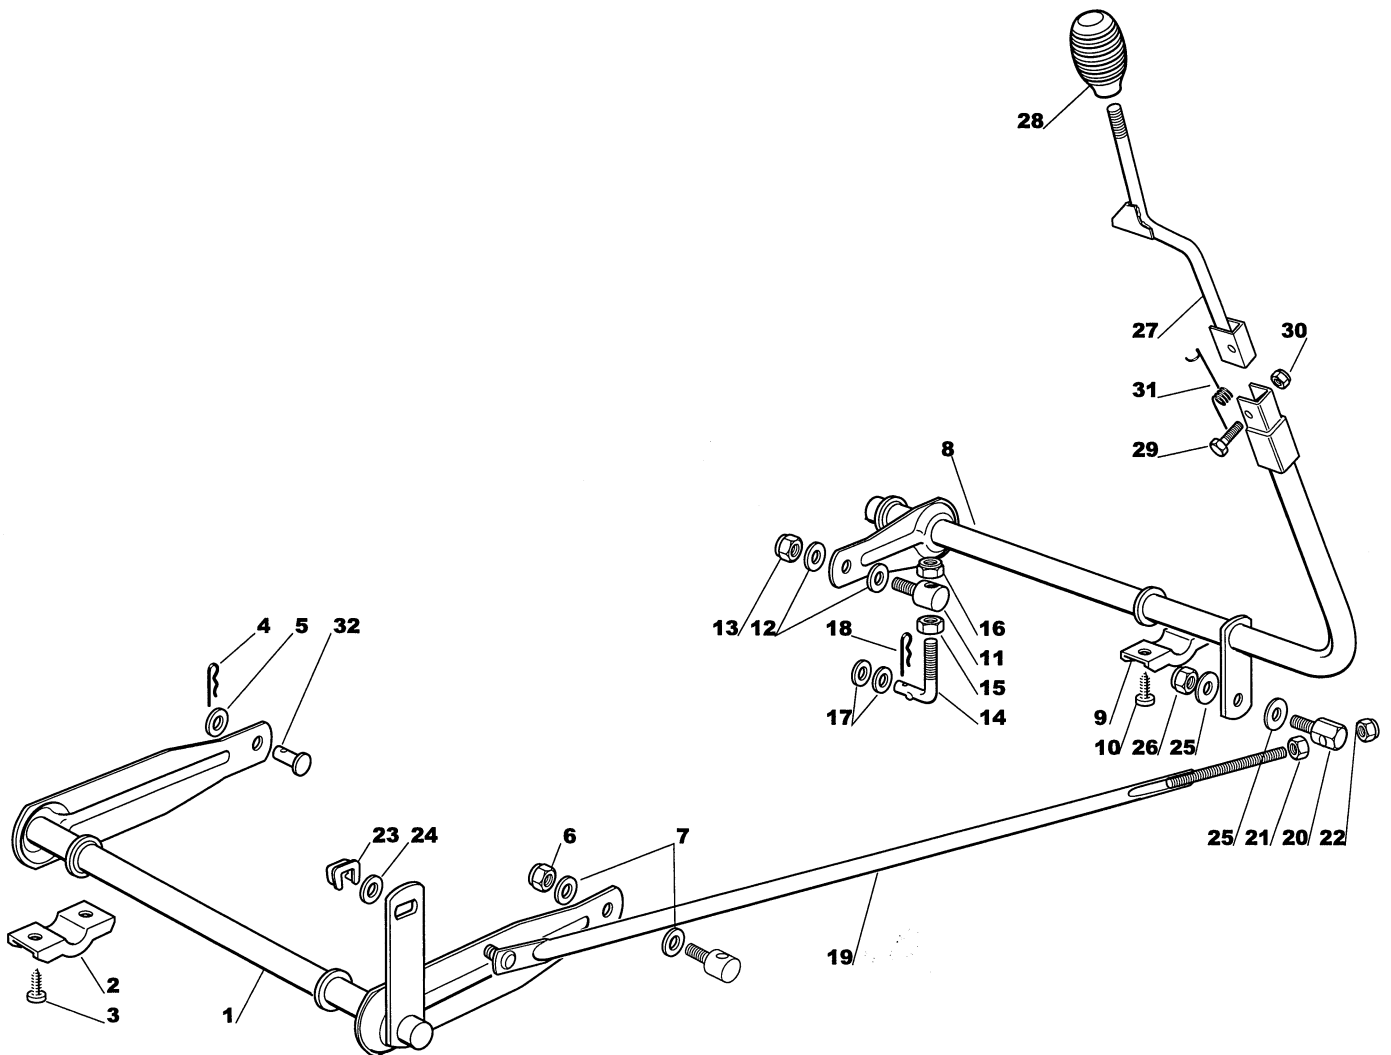





Utgåva Issue  2003- 11		Bildnr Picture No  1232A		ESTATE MASTER AGGREGATSLYFT		ESTATE MASTER MOWER DECK LIFT		Sida Page  48	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2511 2512								
1	1				1136- 1291- 01	Lyftaxel .....	Lift axle .....		
2	2				1136- 0406- 01	Bygel .....	Clamp .....		
3	4				9847- 8119- 16	Skruv .....	Screw .....		
4	1				1136- 0095- 01	Låsnål .....	Hair pin .....		
5	1				1136- 0308- 01	Bricka .....	Washer .....		
6	1				9747- 1031- 02	Låsmutter .....	Lock nut .....		
7	2				1136- 0308- 01	Bricka .....	Washer .....		
8	1				1136- 0559- 01	Lyftaxel .....	Lift axle .....		
9	2				1136- 0406- 01	Bygel .....	Clamp .....		
10	4				9847- 8119- 16	Skruv .....	Screw .....		
11	1				1136- 0226- 01	Ledbult .....	Pivot bolt .....		
12	2				1136- 0308- 01	Bricka .....	Washer .....		
13	1				9747- 1031- 02	Låsmutter .....	Lock nut .....		
14	1				1136- 0347- 01	Lyftlänk .....	Lift tie rod .....		
15	1				9799- 1031- 02	Mutter .....	Nut .....		
16	1				9747- 1031- 02	Låsmutter .....	Lock nut .....		
17	2				1136- 0308- 01	Bricka .....	Washer .....		
18	1				1136- 0095- 01	Låsnål .....	Hair pin .....		
19	1				1136- 0563- 01	Lyftstång .....	Lift rod .....		
20	1				1136- 0235- 01	Ledbult .....	Pivot bolt .....		
21	1				9799- 0831- 02	Mutter .....	Nut .....		
22	1				9747- 0831- 02	Mutter .....	Lock nut .....		
23	1				1136- 0009- 01	Låsplatta .....	Lock plate .....		
24	1				1136- 0309- 01	Bricka .....	Washer .....		
25	2				1136- 0309- 01	Bricka .....	Washer .....		
26	1				9747- 0831- 02	Mutter .....	Lock nut .....		
27	1				1136- 0579- 01	Lyftspak .....	Lift lever .....		
28	1				1136- 0197- 01	Handtag .....	Knob .....		
29	1				9997- 0635- 12	Skruv .....	Screw .....		
30	1				9747- 0631- 02	Låsmutter .....	Lock nut .....		
31	1				1136- 0396- 01	Fjäder .....	Spring .....		
32	1				1136- 1268- 01	Sprint .....	Pin .....		

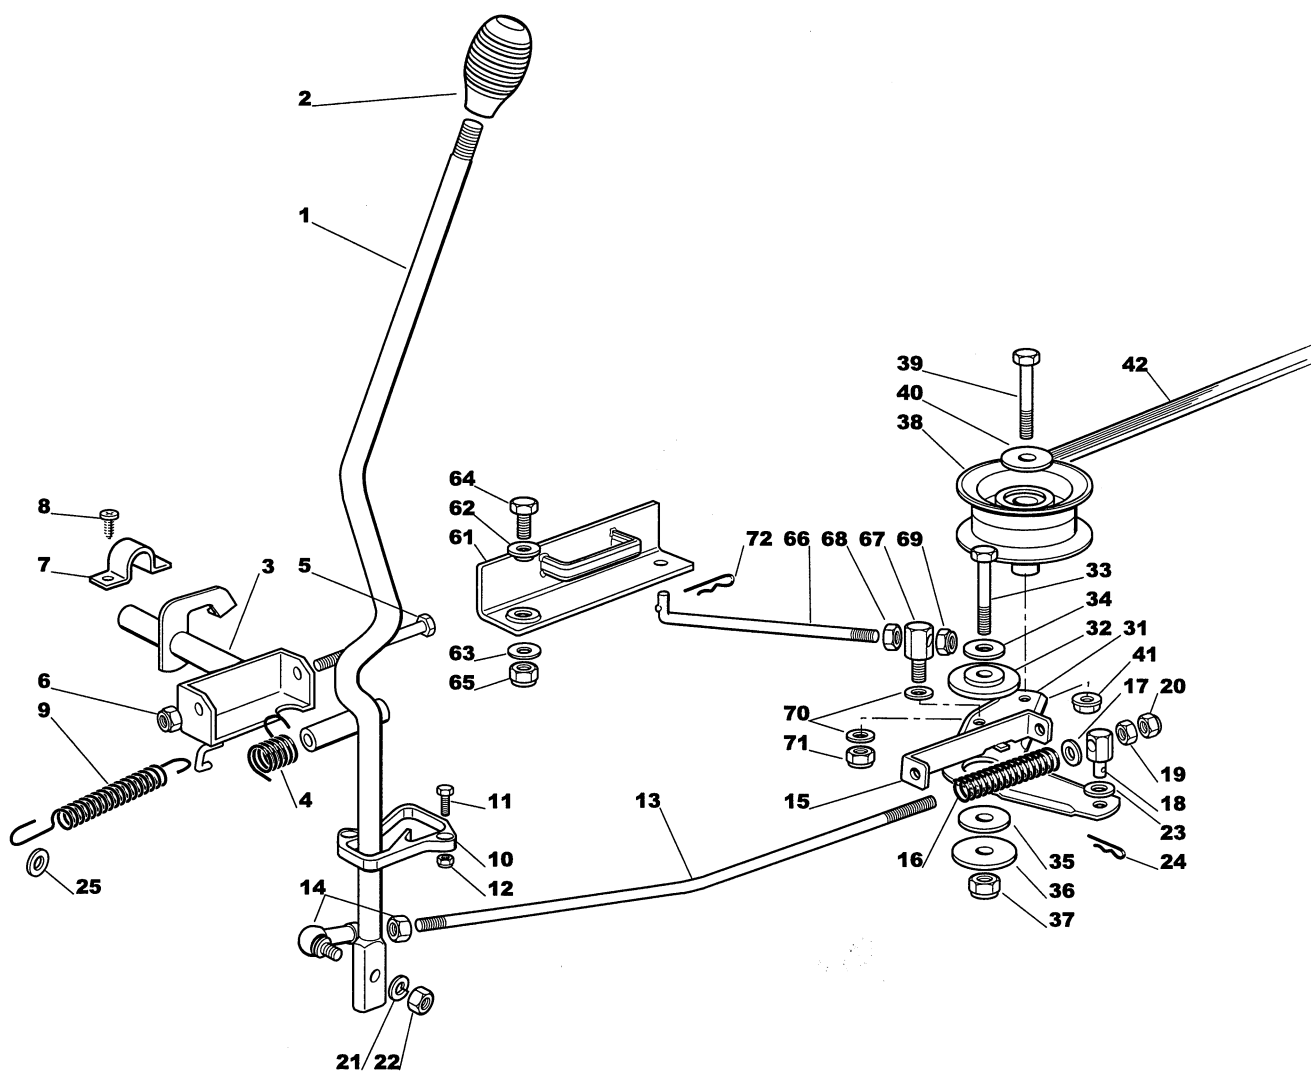

Utgåva Issue  2003- 11		Bildnr Picture No  1233B		ESTATE MASTER AGGREGATSINKOPPLING		ESTATE MASTER MOWER DECK ENGAGEMENT		Sida Page  50	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2511 2512								
1	1				1136-0580-01	Inkopplingsspak .....	PTO lever .....		
2	1				1136-0197-01	Handtag .....	Knob .....		
3	1				1136-0560-01	Axel .....	Axle .....		
4	1				1136-0212-01	Fjäder.....	Spring .....		
5	1				9997-0880-16	Skruv .....	Screw .....		
6	1				9747-0831-02	Mutter.....	Lock nut.....		
7	2				1136-0256-01	Bygel .....	Plate .....		
8	4				9847-8016-16	Skruv .....	Screw .....		
9	1				1136-0964-01	Fjäder.....	Spring .....		
10	1				1136-0398-01	Glidblock .....	Shoe.....		
11	2				9997-0616-16	Skruv .....	Screw .....		
12	2				9747-0631-02	Låsmutter .....	Lock nut.....		
13	1				1136-1252-01	Stång .....	Rod .....		
14	1				1136-0093-01	Kulled .....	Ball joint.....		
15	1				1136-1275-01	Bygel .....	Clamp.....		
16	1				1136-1265-01	Fjäder.....	Spring .....		
17	1				9699-0090-02	Planbricka.....	Flat washer.....		
18	1				1136-1267-01	Ledbult .....	Pivot pin.....		
19	1				9799-0831-02	Mutter.....	Nut .....		
20	1				9747-0831-02	Mutter.....	Lock nut.....		
21	1				9683-0030-02	Låsbricka .....	Lock washer.....		
22	1				9799-0831-02	Mutter.....	Nut .....		
23	1				1136-0308-01	Bricka .....	Washer.....		
24	1				1136-0095-01	Låsnål.....	Hair pin .....		
25	1				1136-0306-01	Bricka .....	Washer.....		
31	1				1136-1253-01	Arm .....	Lever .....		
32	1				1136-0373-01	Bussning .....	Bushing.....		
33	1				9997-0845-12	Skruv .....	Screw .....		
34	1				9699-0056-02	Planbricka.....	Flat washer.....		
35	1				1136-0089-01	Bricka .....	Washer.....		
36	1				1136-0014-01	Bricka .....	Washer.....		
37	1				9747-0831-02	Mutter.....	Lock nut.....		
38	1				1136-1271-01	Spännrulle .....	Idler pulley .....		
39	1				1136-1213-01	Skruv .....	Screw .....		
40	1				9699-0056-02	Planbricka.....	Flat washer.....		
41	1				9739-0831-22	Mutter.....	Nut .....		
42	1				1136-0431-01	Kilrem .....	V- belt.....		
61	1				1136-0574-01	Knivbroms .....	Blade brake .....		
62	1				1136-0079-01	Bussning .....	Bushing.....		
63	1				1136-0089-01	Bricka .....	Washer.....		
64	1				9997-0820-16	Skruv .....	Screw .....		
65	1				9712-0831-02	Låsmutter .....	Lock nut.....		
66	1				1136-1251-01	Stång .....	Rod .....		
67	1				1136-0235-01	Ledbult .....	Pivot bolt.....		
68	1				9799-0831-02	Mutter.....	Nut .....		
69	1				9747-0831-02	Mutter.....	Lock nut.....		
70	2				1136-0309-01	Bricka .....	Washer.....		
71	1				9747-0831-02	Mutter.....	Lock nut.....		
72	1				1136-0095-01	Låsnål.....	Hair pin .....		

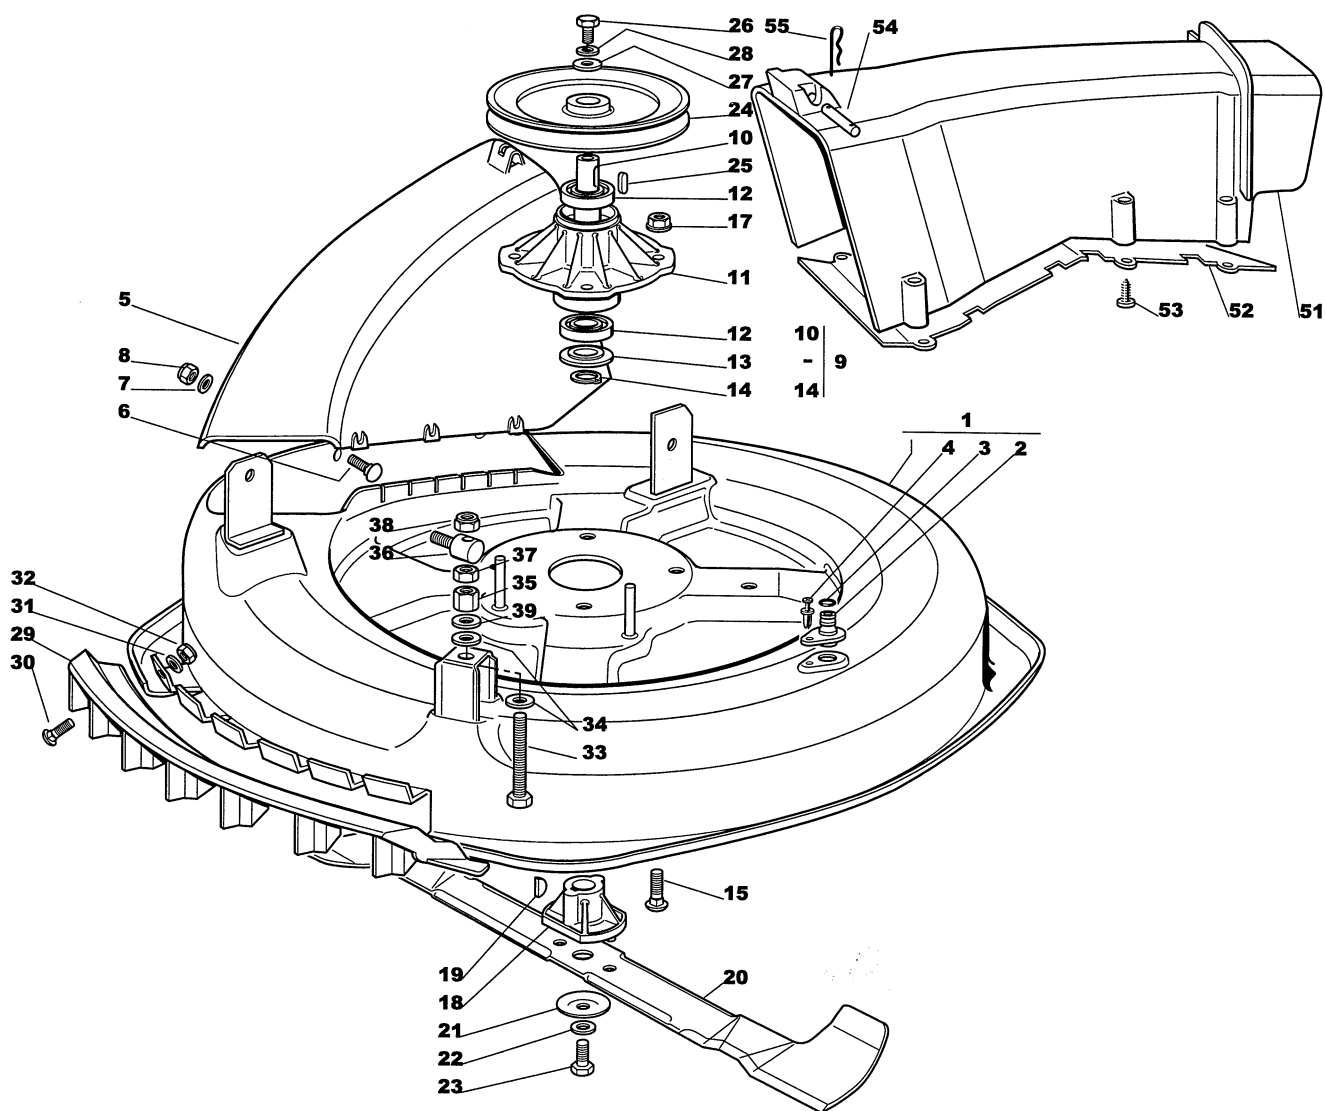


Utgåva Issue  2003- 11		Bildnr Picture No  1234A		ESTATE MASTER KLIPPAGGREGAT		ESTATE MASTER MOWER DECK		Sida Page  52	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2511								
1	1				1136- 1261- 01	Klippagggregatskåpa .....	Mower deck casing .....		Inkl. pos 2 - 4
2	1				1136- 0120- 01	• Vattenslangnippel .....	• Water hose connection.....		
3	1				1136- 0068- 01	• O- ring.....	• O- ring .....		
4	1				1136- 0012- 01	• Nit.....	• Rivet.....		
5	1				1136- 0372- 01	Utkasttratt.....	Conveyor inlet .....		Inkl. pos 10 - 14
6	6				9898- 0620- 16	Skruv .....	Screw .....		
7	6				9699- 0060- 02	Planbricka .....	Flat washer .....		
8	6				9747- 0631- 02	Låsmutter .....	Lock nut .....		
9	1				1136- 0573- 01	Lagerbox kpl.....	Bearing box assy.....		
10	1				1136- 0364- 01	• Knivaxel .....	• Blade shaft .....		
12	2				1136- 0069- 01	• Kullager .....	• Ball bearing .....		
13	1				1136- 0176- 01	• Dammskydd .....	• Dust cover.....		
14	1				9650- 0020- 04	• Spårring.....	• Circlip .....		
15	4				9898- 0825- 16	Skruv .....	Screw .....		
17	4				9739- 0831- 22	Mutter.....	Nut .....		
18	1				1136- 0221- 01	Knivfäste.....	Blade hub .....		
19	1				9600- 0014- 00	Kil .....	Key .....		
20	1				1136- 1295- 01	Kniv .....	Blade .....		
21	1				1136- 0083- 01	Fjäderbricka .....	Elastic washer .....		
22	1				1136- 0015- 01	Bricka .....	Washer .....		
23	1				9987- 5238- 12	Knivbult .....	Blade bolt.....		
24	1				1136- 1272- 01	Remskiva.....	Belt pulley .....		
25	1				1136- 0001- 01	Kil .....	Key .....		
26	1				9997- 0820- 16	Skruv .....	Screw .....		
27	1				1136- 0307- 01	Bricka .....	Washer .....		
28	1				9683- 0030- 02	Låsbricka .....	Lock washer .....		
29	1				1136- 0399- 01	Luftintag .....	Air intake grill.....		
30	4				9898- 0616- 16	Skruv .....	Screw .....		
31	4				9699- 0028- 02	Planbricka .....	Flat washer .....		
32	4				9747- 0631- 02	Låsmutter .....	Lock nut .....		
33	1				9997- 1090- 12	Skruv .....	Screw .....		
34	2				1136- 0015- 01	Bricka .....	Washer .....		
35	1				1136- 0002- 01	Mutter.....	Nut .....		
36	1				1136- 0226- 01	Ledbult .....	Pivot bolt.....		
37	1				9799- 1031- 02	Mutter.....	Nut .....		
38	1				9747- 1031- 02	Låsmutter .....	Lock nut .....		
39	1				9683- 0040- 02	Låsbricka .....	Lock washer .....		
51	1				1136- 0377- 01	Utkaströr .....	Conveyor .....		
52	1				1136- 0384- 01	Deflektor .....	Deflector .....		
53	8				9836- 9618- 12	Skruv .....	Screw .....		
54	1				1136- 0401- 01	Axel .....	Pin .....		
55	2				1136- 0095- 01	Låsnål.....	Hair pin .....		

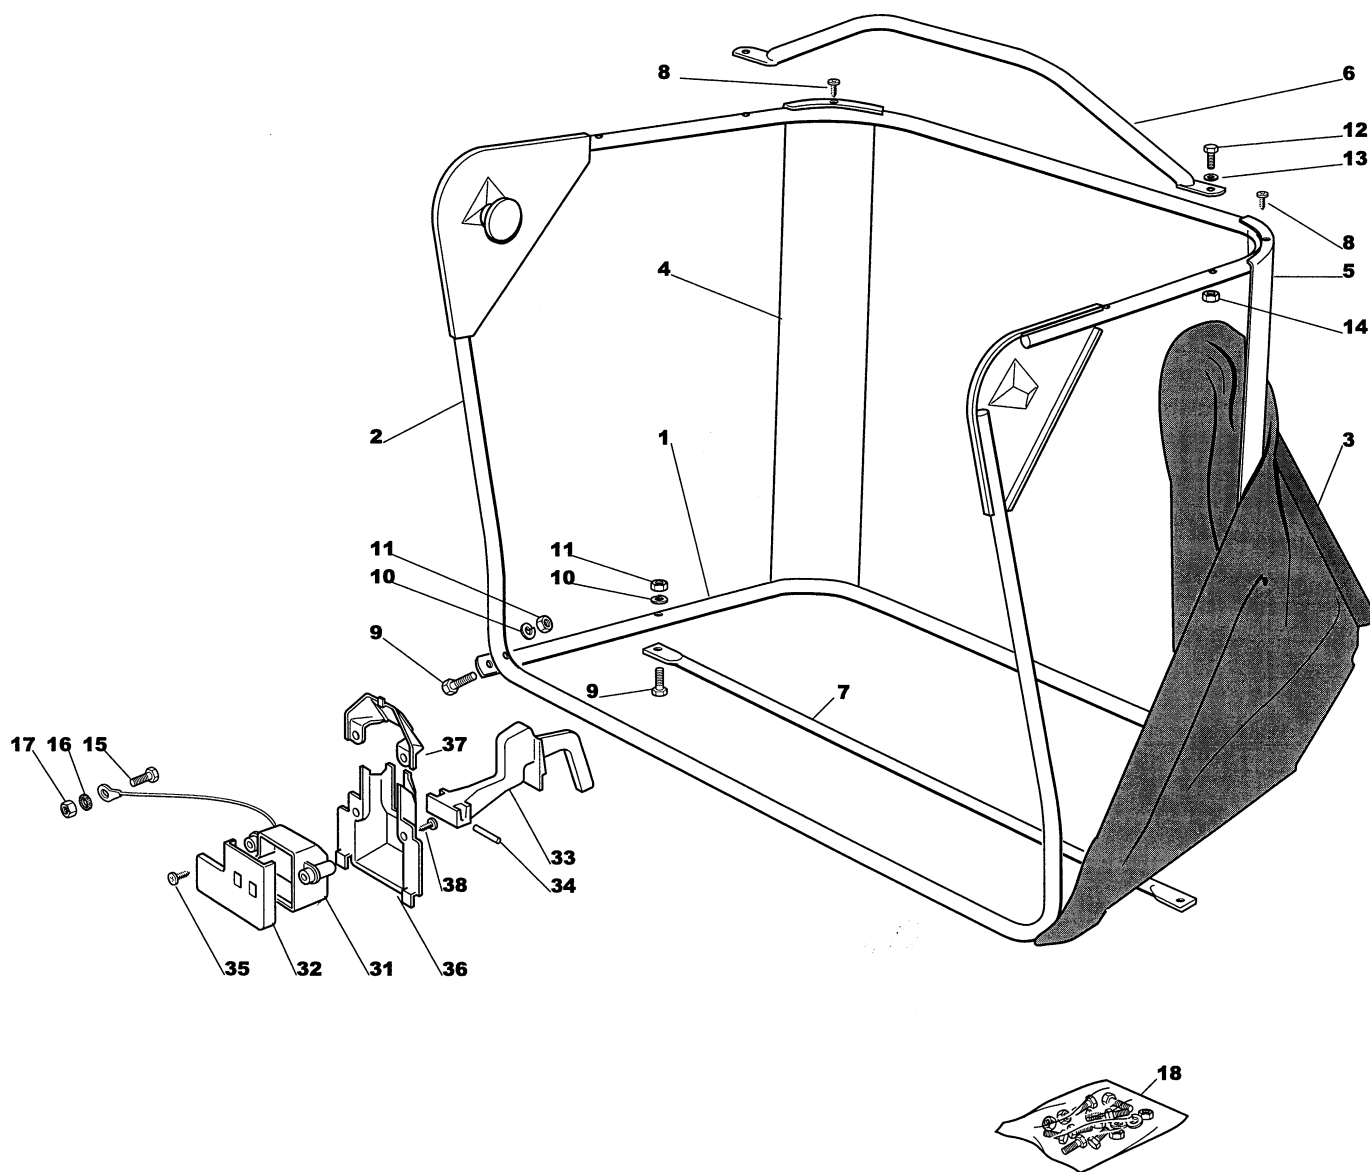

Utgåva Issue  2003- 11		Bildnr Picture No  1235A		ESTATE MASTER UPPSAMLARE		ESTATE MASTER GRASS CATCHER		Sida Page  54	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2511 2512								
1	1				1136- 0593- 01	Ram- nedre.....	Frame- lower .....		Inkl. pos 8 - 17
2	1				1136- 0594- 01	Ram- övre.....	Frame- upper.....		
3	1				1136- 0569- 01	Uppsamlingsäck .....	Grass bag.....		
4	1				1136- 0362- 01	Vinkelstöd- hö.....	Angle support- RH.....		
5	1				1136- 0363- 01	Vinkelstöd- vä.....	Angle support- LH.....		
6	1				1136- 0264- 01	Stag.....	Rod .....		
7	1				1136- 0587- 01	Förstärkningsstag.....	Reinforcement rod .....		
8	4				9847- 8116- 16	• Skruv .....	• Screw .....		
9	4				9997- 0630- 12	• Skruv .....	• Screw .....		
10	4				9683- 0010- 02	• Bricka .....	• Washer .....		
11	4				9799- 0631- 02	• Mutter.....	• Nut .....		
12	2				9997- 0635- 12	• Skruv .....	• Screw .....		
13	2				9699- 0035- 02	• Planbricka.....	• Flat washer.....		
14	2				9747- 0631- 02	• Låsmutter .....	• Lock nut .....		
15	1				9997- 0612- 16	• Skruv .....	• Screw .....		
16	1				9678- 0008- 02	• Låsbricka .....	• Lock washer.....		
17	1				9739- 0631- 22	• Mutter.....	• Nut .....		
18	1				1136- 1216- 01	Skruvsats.....	Screw set .....		
31	1				1136- 0280- 01	Brytarskydd .....	Micro protection .....		
32	1				1136- 0281- 01	Skyddslock.....	Protection cover.....		
33	1				1136- 0186- 01	Brytarm .....	Switch lever .....		
34	1				1136- 0007- 01	Axel .....	Pin .....		
35	3				9847- 8013- 16	Skruv .....	Screw.....		
36	1				1136- 0282- 01	Brytarskydd .....	Micro protection .....		
37	1				1136- 0283- 01	Skyddslock .....	Protection cover.....		
38	4				9847- 8013- 16	Skruv.....	Screw.....		


X

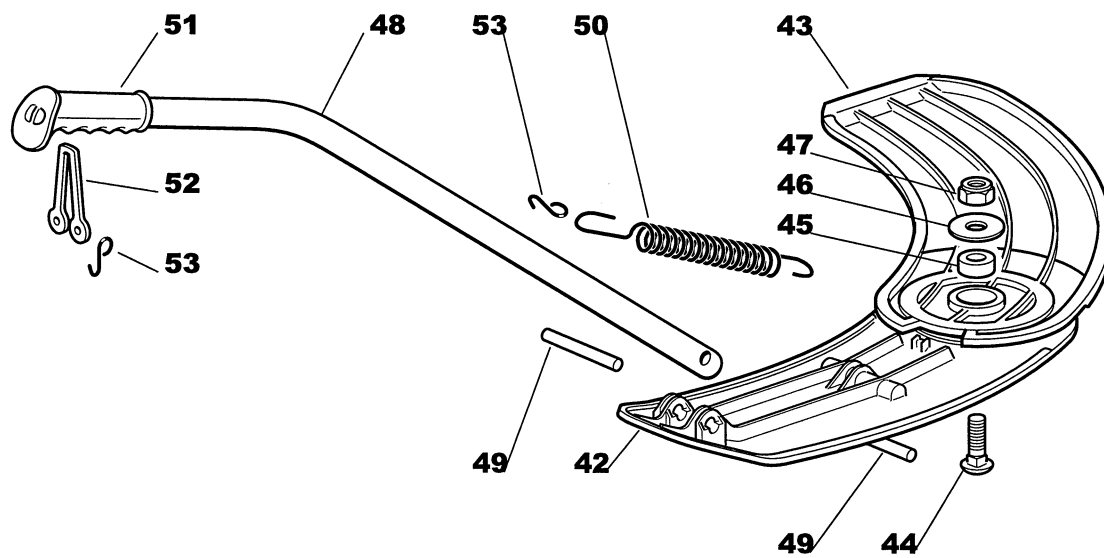




Utgåva Issue 2003- 11		Bildnr Picture No 1558		MULCHINGSATS ART.NR 13- 0934- 11		MULCHING KIT ART.NO 13- 0934- 11		Sida Page 152	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	0934								
K 42	1				1136- 1259- 01	Deflektor- bakre .....	Deflector- rear .....		
K 43	1				1136- 1258- 01	Deflektor- fram.....	Deflector- front.....		
K 44	1				9898- 0825- 16	Skruv .....	Screw .....		
45	1				1136- 1255- 01	Bussning .....	Bushing.....		
46	1				1136- 0089- 01	Bricka .....	Washer.....		
47	1				9747- 0831- 02	Mutter.....	Lock nut.....		
48	1				1136- 1263- 01	Handtagsrör.....	Handle tube.....		
49	2				1136- 1269- 01	Sprint.....	Pin .....		
50	1				1136- 0214- 01	Fjäder.....	Spring .....		
51	1				1136- 0882- 01	Handtag .....	Handgrip .....		
52	1				1136- 0927- 01	Elastiskt band .....	Elastic tie.....		
53	3				1136- 0877- 01	Krok.....	Hook .....		


# Estate Master

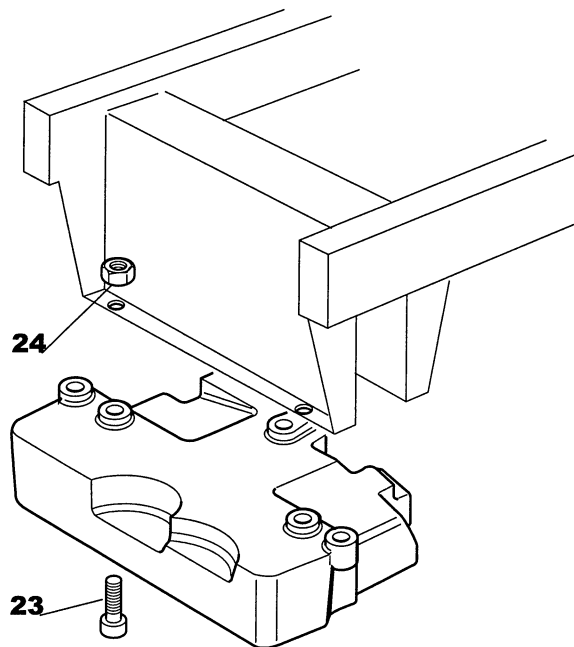

# Estate Senator - President - Royal - Pro 20

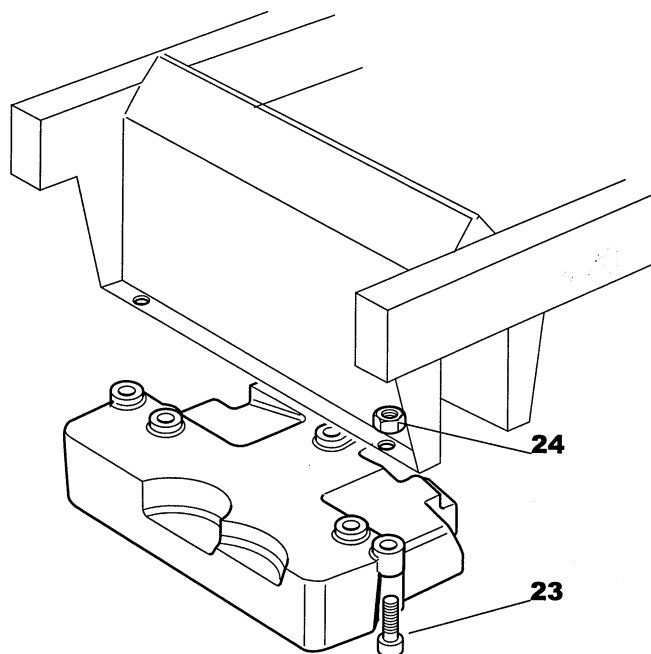


Utgåva Issue 2003- 11		Bildnr Picture No 1253A		FRONTVIKT ART.NR 13- 0912- 11		FRONT WEIGHT ART.NO 13- 0912- 11		Sida Page 142	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	0912								
23	3				9939- 0850- 12	Skruv .....	Screw .....		
24	3				9747- 0831- 02	Mutter.....	Lock nut.....		

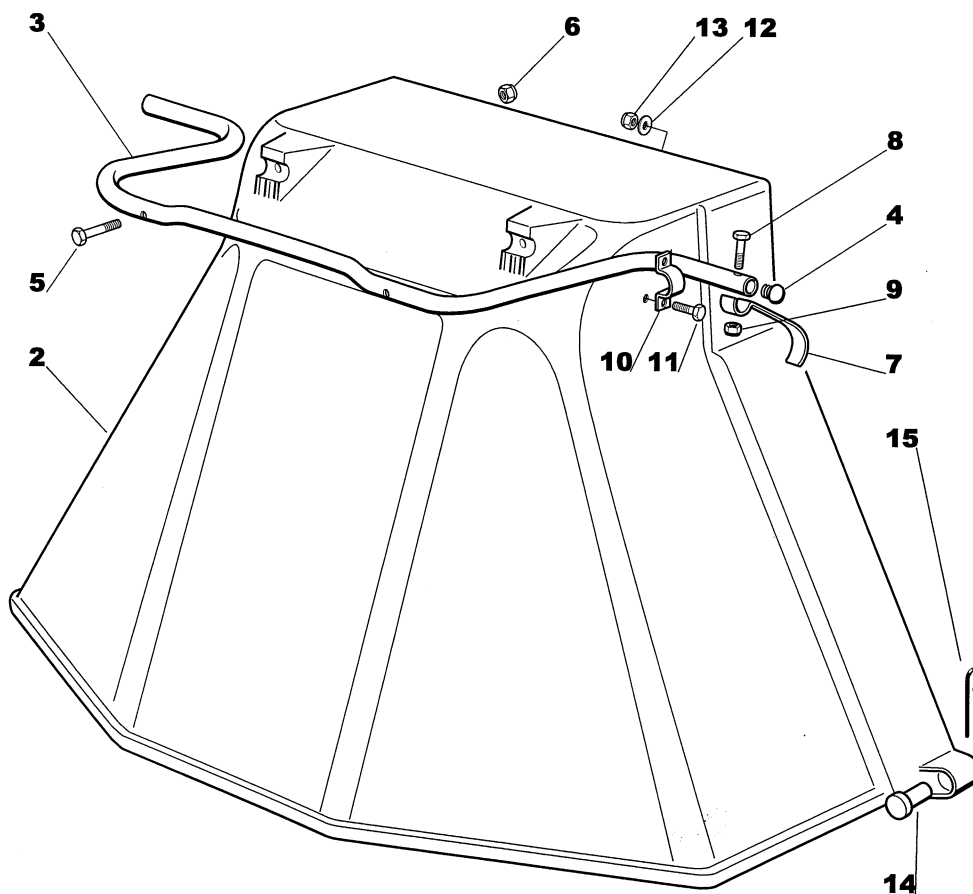

Utgåva Issue  2003- 11		Bildnr Picture No  1248		DEFLEKTOR ART.NR 13- 0916- 11		DEFLECTOR ART.NR 13- 0916- 11		Sida Page  144	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	0916								
2	1				1136- 0584- 01	Utkastskydd .....	Ejection guard .....		
3	1				1136- 0425- 01	Stödrör .....	Support .....		
4	2				1136- 0062- 01	Plugg .....	Cap .....		
5	2				9997- 0635- 12	Skruv .....	Screw .....		
6	2				9747- 0631- 02	Låsmutter .....	Lock nut .....		
7	1				1136- 0257- 01	Bygel .....	Plate .....		
8	1				9997- 0625- 16	Skruv .....	Screw .....		
9	1				9747- 0631- 02	Låsmutter .....	Lock nut .....		
10	2				1136- 0256- 01	Bygel .....	Plate .....		
11	4				9997- 0516- 16	Skruv .....	Screw .....		
12	4				9699- 0018- 02	Bricka .....	Washer .....		
13	4				9747- 0531- 02	Mutter .....	Nut .....		
14	2				1136- 0229- 01	Sprint .....	Pin .....		
15	2				9598- 0002- 02	Låsnål .....	Pin lock .....		

A

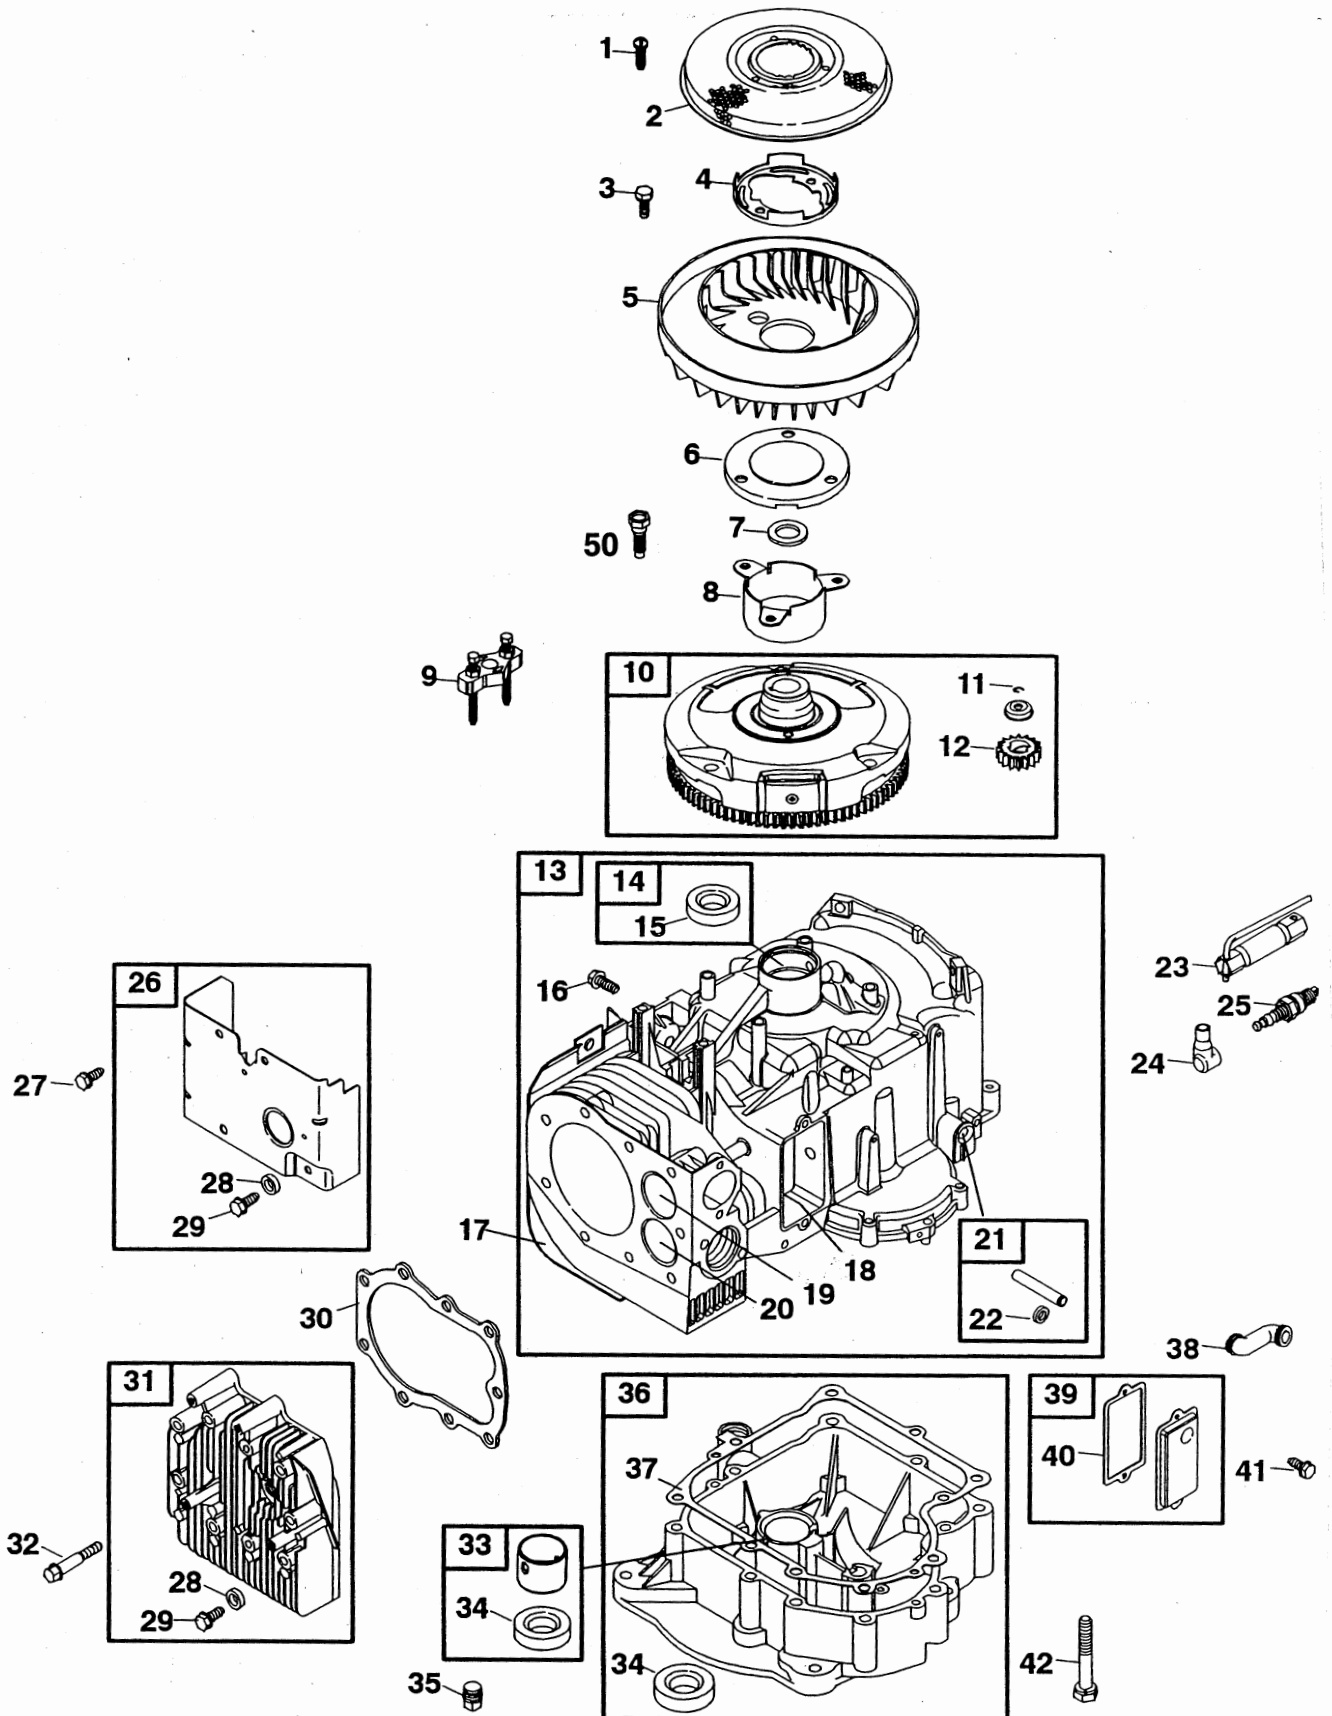


Utgåva Issue  2003- 11		Bildnr Picture No  1182A		BRIGGS & STRATTON 286707, 28M707 CYLINDER (A) VEVHUS (A)		BRIGGS & STRATTON 286707, 28M707 CYLINDER (A) CRANKCASE (A)		Sida Page  206	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	286 707- 1185	28M 707- 1194							
A01	3	3			691655	Skruv .....	Screw .....		
A02		1			690492	Skyddsnät .....	Rotating screen .....		
A02	1				691748	Skyddsnät .....	Rotating screen .....		
A03	2	2			691058	Skruv .....	Screw .....		
A04	1				690452	Fläkthållare .....	Fan retainer .....		
A05	1				691905	Fläkt .....	Flywheel fan .....		
A05		1			695056	Fläkt .....	Flywheel fan .....		
A06	1	1			691323	Distans .....	Spacer .....		
A07	1	1			690582	Bricka .....	Washer .....		
A08	1	1			691173	Svänghjulskopp .....	Flywheel cup .....		
A09	1	1			19203	Avdragare .....	Puller .....		
A10	1	1			693556	Svänghjul .....	Flywheel .....		
A11	1	1			691265	• Låsring .....	• Retaining ring .....		
A12	1	1			693713	• Drev .....	• Pinion gear .....		
A13	1	1			496413	Cylinder .....	Cylinder .....		
A14	1	1			399265	• Bussning .....	• Bushing .....		
A15	1	1			391086	• • Tätningsring .....	• • Seal .....		
A16	1	1			691003	• Skruv .....	• Screw .....		
A17	1	1			690459	Cylinderskydd .....	Cylinder shield .....		
A18	1	1			231218	• Ventilstyrning- insug .....	• Valve guide- intake .....		
A18	1	1			261961	• Ventilstyrning- utblås .....	• Valve guide- exhaust .....		
A19	1	1			691802	• Ventilsåte- insug .....	• Valve seat- intake .....		
A20	1	1			691844	• Ventilsåte- utblås .....	• Valve seat- exhaust .....		
A21	1	1			491986	• Bussning .....	• Bushing .....		
A22	1	1			692407	• • Tätning .....	• • Seal .....		
A23	1	1			89838	Tändstiftsnyckel .....	Spark plug wrench .....		
A24	1	1			66538	Tändstiftsskydd .....	Spark plug elbow .....		
A25	1	1			9400- 0225- 00	Tändstift .....	Spark plug .....		
A26	1	1			491490	Skydd .....	Cover .....		
A27		2			690960	Skruv .....	Screw .....		
A27	2				692198	Skruv .....	Screw .....		
A28	1	1			690510	• Distans .....	• Spacer .....		
A29	1	1			691681	• Skruv .....	• Screw .....		
A30	1	1			271866	Packning .....	Gasket .....		
A31	1	1			494240	Topplöck .....	Cylinder head .....		
A32	8	8			690904	Skruv .....	Screw .....		
A33	1	1			490666	Bussning .....	Bushing .....		
A34	1	1			291675	• Tätningsring .....	• Oil seal .....		
A35	1	1			690946	Avtappningsplugg .....	Oil drain plug .....		
A36	1	1			494238	Vevhus .....	Oil sump .....		
A37	1	1			692405	Packning .....	Gasket .....		
A37	1	1			692406	Packning .....	Gasket .....		
A37	1	1			692226	• Packning .....	• Gasket .....		
A38		1			691328	Ventilationsrör .....	Breather tube .....		
A38	1				692253	Ventilationsrör .....	Breather tube .....		
A39	1	1			495735	Vevhusventilation .....	Breather .....		
A40	1	1			27803	• Packning .....	• Gasket .....		
A41	2	2			691666	Skruv .....	Screw .....		
A42	10	10			692125	Skruv .....	Screw .....		
A50		1			691658	Skruv .....	Screw .....		











.009"  
.005"  
.015" Standard

.009"  
.005"  
.015" Standard

A

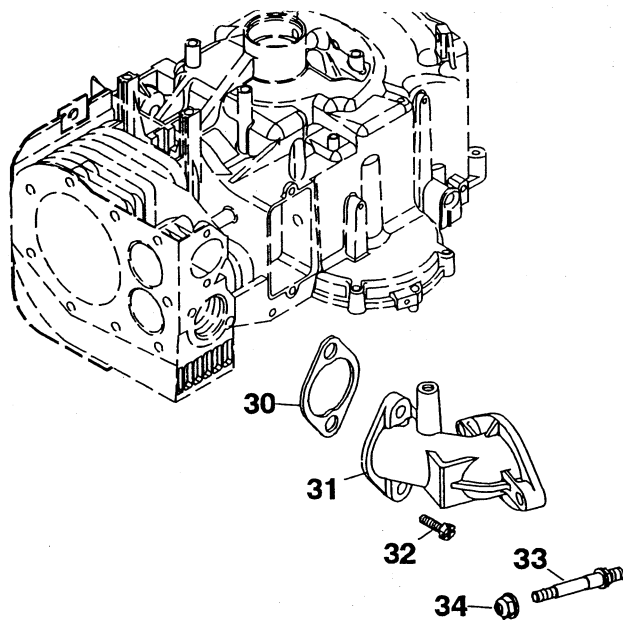


B

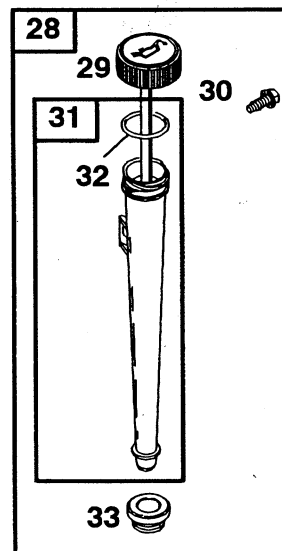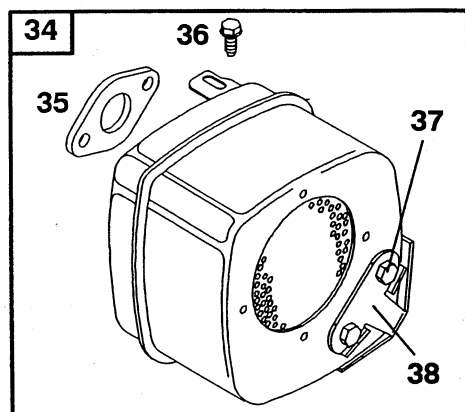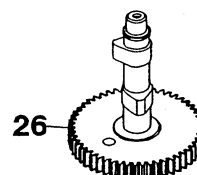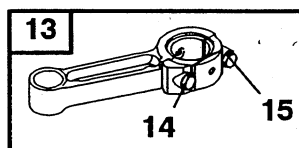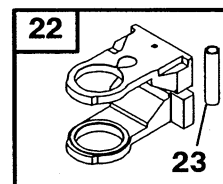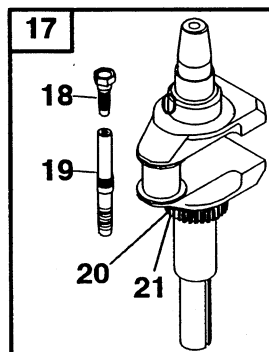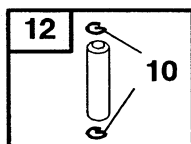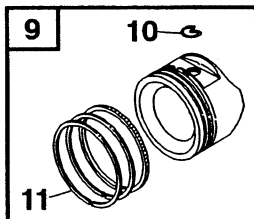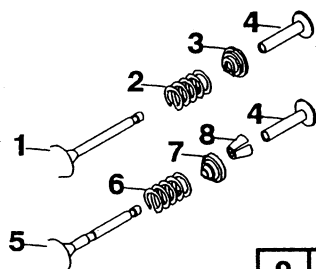




Utgåva Issue		Bildnr Picture No		BRIGGS & STRATTON 286707, 28M707 INSUGNINGSRÖR (A) VEVAXEL (B)		BRIGGS & STRATTON 286707, 28M707 INTAKE TUBE (A) CRANKSHAFT (B)		Sida Page	
2003- 11		1183						208	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	286 707- 1185	28M 707- 1194							
A30	1	1			272554	Packning.....	Gasket.....		
A31	1	1			691711	Insugningsrör.....	Intake manifold.....		
A32	2	2			690953	Skruv.....	Screw.....		
A33	2	2			691098	Pinnbult.....	Stud.....		
A34	2	2			690958	Mutter.....	Nut.....		
B01	1	1			262247	Insugningsventil.....	Intake valve.....		
B02	1	1			691605	Ventilfjäder- insug.....	Valve spring- intake.....		
B03	1	1			690656	Ventilhållare.....	Valve retainer.....		
B04	2	2			691811	Ventilyftare.....	Valve tappet.....		
B05	1	1			262246	Utblåsningsventil.....	Exhaust valve.....		
B06	1	1			691597	Ventilfjäder- utblås.....	Valve spring- exhaust.....		
B07	1	1			691939	Ventilhållare.....	Valve retainer.....		
B08	1	1			494553	Hållare.....	Retainer.....		
B09	1				499284	Kolv kpl.....	Piston assy.....		Standard
B09	1				499288	Kolv kpl.....	Piston assy.....		.010" O.S.
B09	1				499292	Kolv kpl.....	Piston assy.....		.020" O.S.
B09	1				499296	Kolv kpl.....	Piston assy.....		.030" O.S.
B09		1			696397	Kolv kpl.....	Piston assy.....		Standard
B09		1			696398	Kolv kpl.....	Piston assy.....		.010" O.S.
B09		1			696399	Kolv kpl.....	Piston assy.....		.020" O.S.
B09		1			696400	Kolv kpl.....	Piston assy.....		.030" O.S.
B10	2	2			691299	• Låsring.....	• Piston pin lock.....		
B11	1				392331	• Kolvringsats.....	• Ring set.....		Chrome standard
B11	1				499996	• Kolvringsats.....	• Ring set.....		Standard
B11	1				499997	• Kolvringsats.....	• Ring set.....		.010" O.S.
B11	1				499998	• Kolvringsats.....	• Ring set.....		.020" O.S.
B11	1				499999	• Kolvringsats.....	• Ring set.....		.030" O.S.
B11		1			696403	• Kolvringsats.....	• Ring set.....		Standard
B11		1			696404	• Kolvringsats.....	• Ring set.....		.010" O.S.
B11		1			696405	• Kolvringsats.....	• Ring set.....		.020" O.S.
B11		1			696406	• Kolvringsats.....	• Ring set.....		.030" O.S.
B12	1	1			498319	Kolvbult.....	Piston pin.....		Standard
B12	1	1			498320	Kolvbult.....	Piston pin.....		.005" O.S.
B13	1	1			494504	Vevstake.....	Connecting rod.....		Standard
B13	1	1			495490	Vevstake.....	Connecting rod.....		.020" U.S.
B14	1	1			690348	• Skruv.....	• Screw.....		
B15	1	1			690356	• Skruv.....	• Screw.....		
B16	1	1			222698	Kil.....	Key.....		
B17	1	1			693944	Vevaxel.....	Crankshaft.....		
B18	1	1			691658	• Skruv.....	• Screw.....		
B19	1	1			691779	• Vevaxelförlängning.....	• Crankshaft extension.....		
B20	1	1			691639	• Kil.....	• Timing key.....		
B21	1	1			691284	• Drev.....	• Timing gear.....		
B22	1	1			692423	Motvikt.....	Counter weight.....		
B23	1	1			691239	• Axel.....	• Pin.....		
B24	1	1			691714	Länk.....	Link.....		
B25	1	1			691096	Skruv.....	Screw.....		
B26	1	1			692123	Kamaxel.....	Camshaft.....		
B27	1	1			691968	Oljekastardrev.....	Oil slinger.....		
B28	1	1			496415	Oljesticka kpl.....	Oil filler group.....		
B29	1	1			692014	• Oljesticka.....	• Oil dipstick.....		
B30	1	1			691002	• Skruv.....	• Screw.....		
B31	1	1			691398	• Påfyllningsrör.....	• Dipstick tube.....		
B32	1	1			691870	• Tätningsring.....	• Seal.....		
B33	1	1			281370	• Tätning.....	• Seal.....		
B34	1				691874	Ljuddämpare.....	Muffler.....		
B35	1				692236	• Packning.....	• Gasket.....		
B36	1				692198	• Skruv.....	• Screw.....		
B37	1				691416	• Skruv.....	• Screw.....		
B38	1				690420	• Värmskydd.....	• Heat shield.....		
B39	2				690661	Skruv.....	Screw.....		Deflector

A

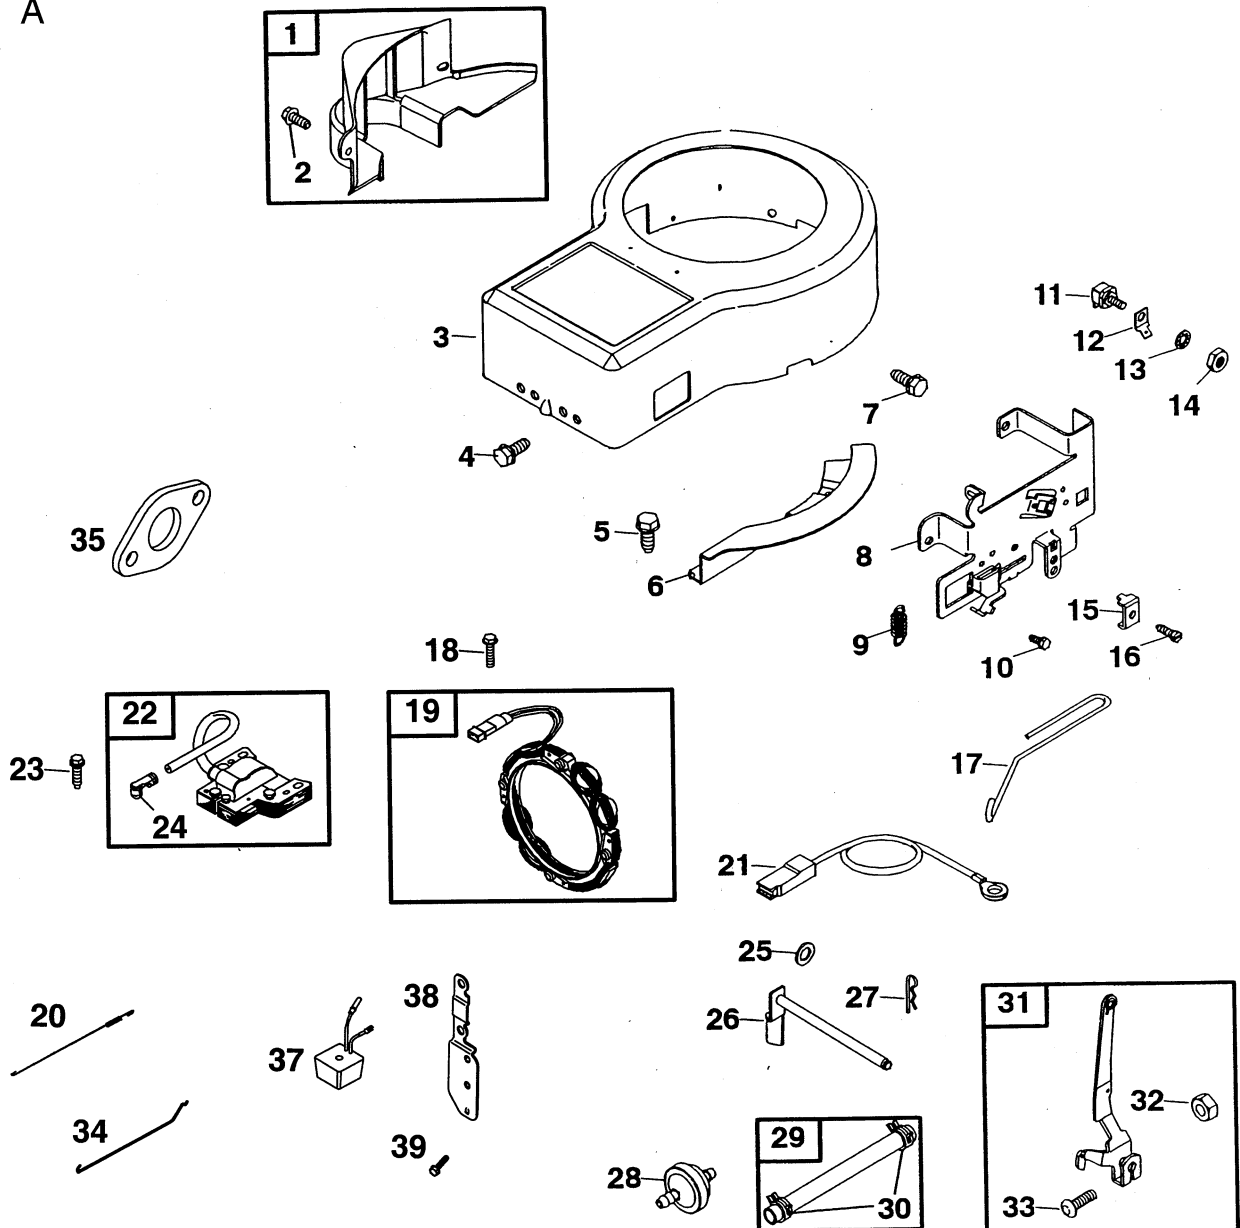



B

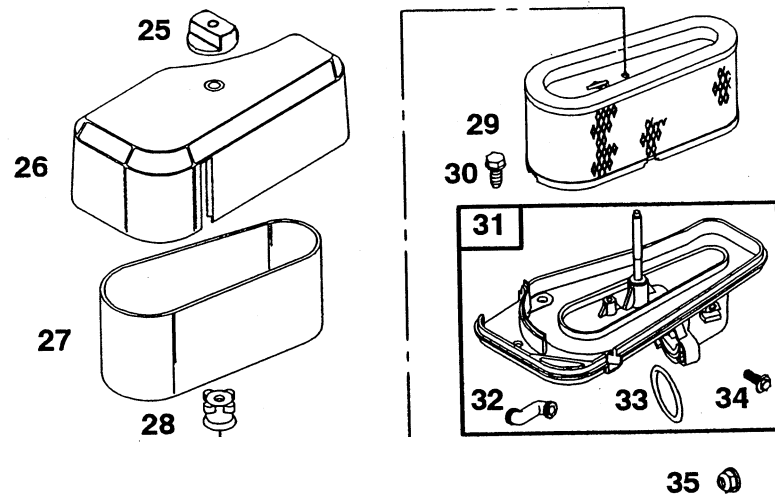

Utgåva Issue  2003- 11		Bildnr Picture No  1184A		BRIGGS & STRATTON 286707, 28M707 REGULATOR (A) LUFTFILTER (B)		BRIGGS & STRATTON 286707, 28M707 GOVERNOR (A) AIR CLEANER (B)		Sida Page  210	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	286 707- 1185	28M 707- 1194							
A01	1	1			490324	Skyddskåpa .....	Cover .....		
A02	2	2			691002	• Skruv .....	• Screw .....		
A03	1				690485	Fläkthus .....	Blower housing .....		
A03		1			691399	Fläkthus .....	Blower housing .....		
A04		1			690960	Skruv .....	Screw .....		
A04	1				692198	Skruv .....	Screw .....		
A05	2	2			690661	Skruv .....	Screw .....		
A06	1	1			690456	Svänghjulsskydd .....	Flywheel guard .....		
A07	2	2			692127	Skruv .....	Screw .....		
A08	1	1			694042	Reglageplåt.....	Control bracket .....		
A09	1	1			691795	Regulatorfjäder .....	Governor spring .....		
A10	2	2			691693	Skruv .....	Screw .....		
A11	1	1			691972	Isolator .....	Insulator.....		
A12	1	1			691084	Anslutningsbleck .....	Ground terminal .....		
A13	1	1			691077	Bricka .....	Washer .....		
A14	1	1			691612	Mutter.....	Nut .....		
A15	1	1			691024	Klämma .....	Clamp .....		
A16	1	1			690804	Skruv .....	Screw .....		
A17	1	1			691840	Chokelänk.....	Choke link .....		
A18	2	2			691183	Skruv .....	Screw .....		
A19	1				691065	Generator.....	Alternator .....		
A19		1			696457	Generator.....	Alternator .....		
A20		1			691842	Fjäder.....	Spring .....		
A21	1	1			398808	Kortslutningskabel.....	Ground wire .....		
A22	1	1			492341	Tändsystem .....	Armature magneto .....		
A23	2	2			691061	Skruv .....	Screw .....		
A24	1	1			493880	• Anslutningshylsa .....	• Terminal .....		
A25	1	1			691691	Bricka .....	Washer .....		
A26	1	1			692012	Regulatoraxel.....	Governor crank .....		
A27	1	1			691620	Låsnål .....	Cotter pin .....		
A28	1	1			394358	Bränslefilter .....	Fuelfilter .....		
A29	1	1			691050	Bränsleslang .....	Fuel line.....		
A30	2	2			95162	• Slangklämma.....	• Hose clamp .....		
A31	1	1			691374	Regulatorarm.....	Governor lever .....		
A32	1	1			691119	• Bult .....	• Bolt .....		
A33	1	1			691251	• Mutter .....	• Nut .....		
A34		1			691841	Regulatorlänk .....	Governor link .....		
A35		1			692236	Packning.....	Gasket .....		
A37		1			691188	Regulator.....	Regulator .....		
A38		1			694475	Fäste .....	Mounting bracket.....		
A39		2			694476	Skruv .....	Screw .....		
B25	1	1			691668	Låsratt .....	Air cleaner knob .....		
B26		1			691332	Lock.....	Cover .....		
B26	1				691916	Lock.....	Cover .....		
B27	1	1			272403	Filterelement.....	Air cleaner element .....		
B28	1	1			692297	Tätning .....	Seal .....		
B29	1	1			496894	Pappersfilter .....	Cartridge .....		
B30	2	2			692126	Skruv .....	Screw .....		
B31	1	1			696129	Luftrenarfäste .....	Air cleaner base .....		
B32	1	1			691328	• Ventilationsrör .....	• Breather tube .....		
B33	1	1			691917	• O- ring.....	• O- ring .....		
B34	1	1			693675	• Skruv .....	• Screw .....		
B35	2	2			690958	Mutter.....	Nut .....		

A


WALBRO

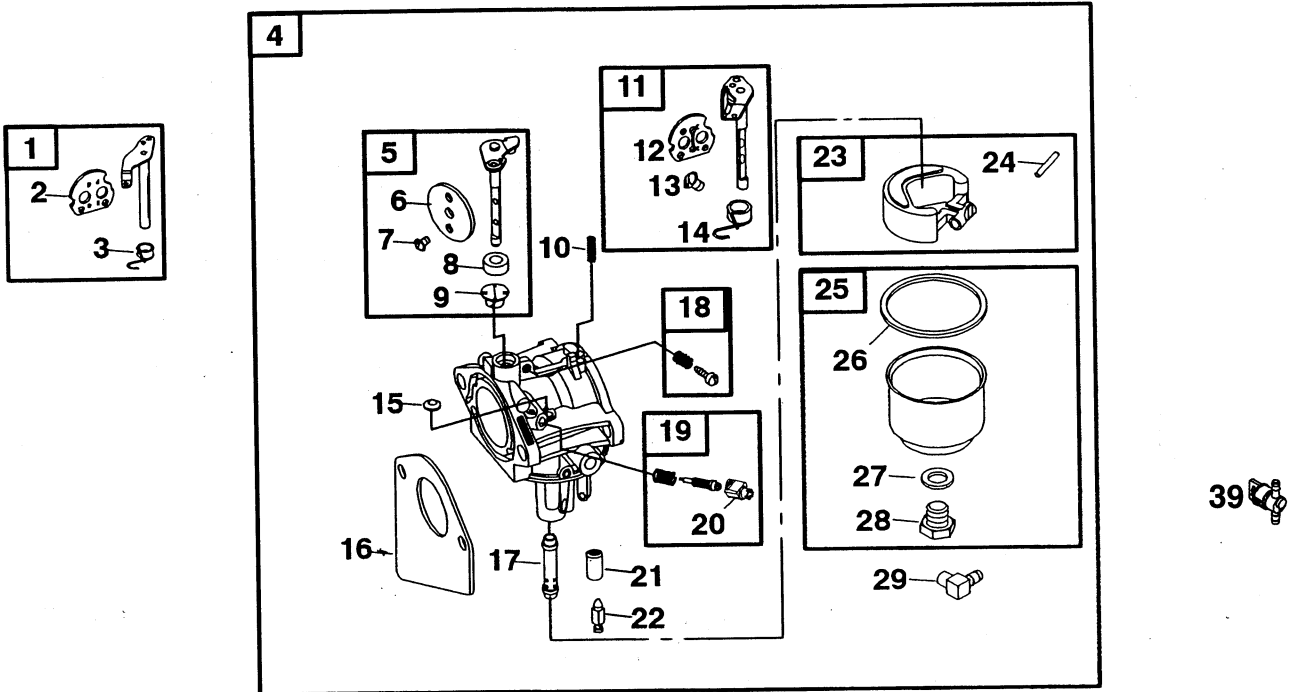


B



NIKKI


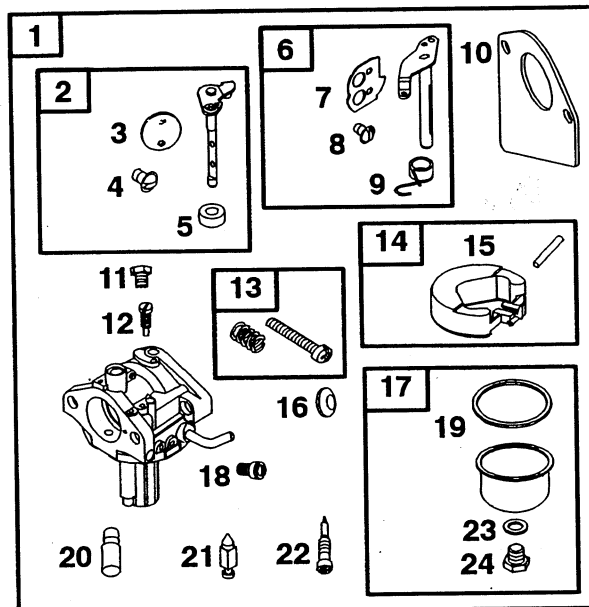


Utgåva Issue  2003- 11		Bildnr Picture No  1185A		BRIGGS & STRATTON 286707, 28M707 FÖRGASARE WALBRO (A) FÖRGASARE NIKKI (B)		BRIGGS & STRATTON 286707, 28M707 CARBURETOR WALBRO (A) CARBURETOR NIKKI (B)		Sida Page  212	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	286 707- 1185	28M 707- 1194							
A01	1	1			495931	Chokeaxel .....	Choke shaft .....		Choke A Matic
A02	1	1			692344	• Chokespjäll .....	• Choke valve .....		
A03	1	1			690802	• Fjäder o tätning .....	• Spring and seal .....		
A04	1				498027	Förgasare kpl .....	Carburettor assy .....		Walbro
A04		1			697594	Förgasare kpl .....	Carburettor assy .....		
A05	1	1			494379	• Spjällaxel .....	• Shaft .....		
A06	1	1			691750	• Spjäll .....	• Throttle valve .....		
A07	1	1			691636	• Skruv .....	• Screw .....		
A08	1	1			691326	• Axeltätning .....	• Shaft seal .....		
A09	1	1			690602	• Axelbussning .....	• Shaft bushing .....		
A10	1	1			690572	• Fjäder .....	• Spring .....		
A11	1	1			495097	• Chokeaxel .....	• Choke shaft .....		Manual Choke
A12	1	1			690464	• Chokespjäll .....	• Choke valve .....		
A13	1	1			691636	• Skruv .....	• Screw .....		
A14	1	1			690801	• Fjäder o tätning .....	• Spring and seal .....		
A15		1			694524	• Plugg .....	• Welch plug .....		
A15	1				695005	• Expansionsplugg .....	• Welch plug .....		
A16	1	1			692284	• Packning .....	• Gasket .....		
A17	1				497737	• Munstycke .....	• Nozzle .....		High Altitude
A17	1				691434	• Munstycke .....	• Nozzle .....		Standard
A17		1			697592	• Munstycke .....	• Nozzle .....		Standard
A18	1	1			495800	• Justerskruv .....	• Idle adjust screw .....		
A19	1	1			498030	• Nålventil .....	• Needle valve .....		
A20	1	1			691333	• Begränsningshuv .....	• Limiter cap .....		
A21	1	1			690577	• Säte .....	• Inlet seat .....		
A22	1	1			231855	• Nålventil .....	• Inlet needle valve .....		
A23	1	1			494381	• Flottör .....	• Float .....		
A24	1	1			690525	• Flottöraxel .....	• Float hinge pin .....		
A25	1	1			495933	• Flottörhus .....	• Bowl .....		
A26	1	1			281165	• Packning .....	• Gasket .....		
A27	1	1			692255	• Tätningsbricka .....	• Sealing washer .....		
A28	1	1			691657	• Skruv .....	• Float bowl screw .....		
A29	1				692317	• Nippel .....	• Hose connector .....		
A39		1			494768	Bränslekrän .....	Shut-off valve .....		
B01	1				694941	Förgasare kpl .....	Carburettor assy .....		Nikki
B02	1				694909	• Spjällaxel .....	• Throttle shaft .....		
B03	1				694917	• Spjäll .....	• Throttle valve .....		
B04	1				690718	• Skruv .....	• Screw .....		
B05	1				690998	• Tätning .....	• Shaft seal .....		
B06	1				694913	• Chokeaxel .....	• Choke shaft .....		
B07	1				694923	• Chokespjäll .....	• Choke valve .....		
B08	1				690718	• Skruv .....	• Screw .....		
B09	1				694912	• Fjäder o tätning .....	• Spring and seal .....		
B10	1				692284	• Packning .....	• Gasket .....		
B11	1				694921	• Plugg .....	• Carburettor plug .....		
B12	1				694927	• Munstycke .....	• Pilot jet .....		
B13	1				694907	• Justerskruv .....	• Idle speed kit .....		
B14	1				694914	• Flottör .....	• Float .....		
B15	1				694918	• Flottöraxel .....	• Float hinge pin .....		
B16	1				694916	• Expansionsplugg .....	• Welch plug .....		
B17	1				694908	• Flottörhus .....	• Float bowl .....		
B18	1				690880	• Huvudmunstycke .....	• Main jet .....		Standard
B18	1				694925	• Huvudmunstycke .....	• Main jet .....		High Altitude
B19	1				694920	• Packning .....	• Gasket .....		
B20	1				694924	• Förgasarplugg .....	• Carburettor plug .....		
B21	1				694922	• Nålventil .....	• Float needle valve .....		
B22	1				694926	• Tomgångsventil .....	• Idle mixture valve .....		
B23	1				690997	• Tätningsbricka .....	• Sealing washer .....		
B24	1				694919	• Skruv .....	• Float bowl screw .....		




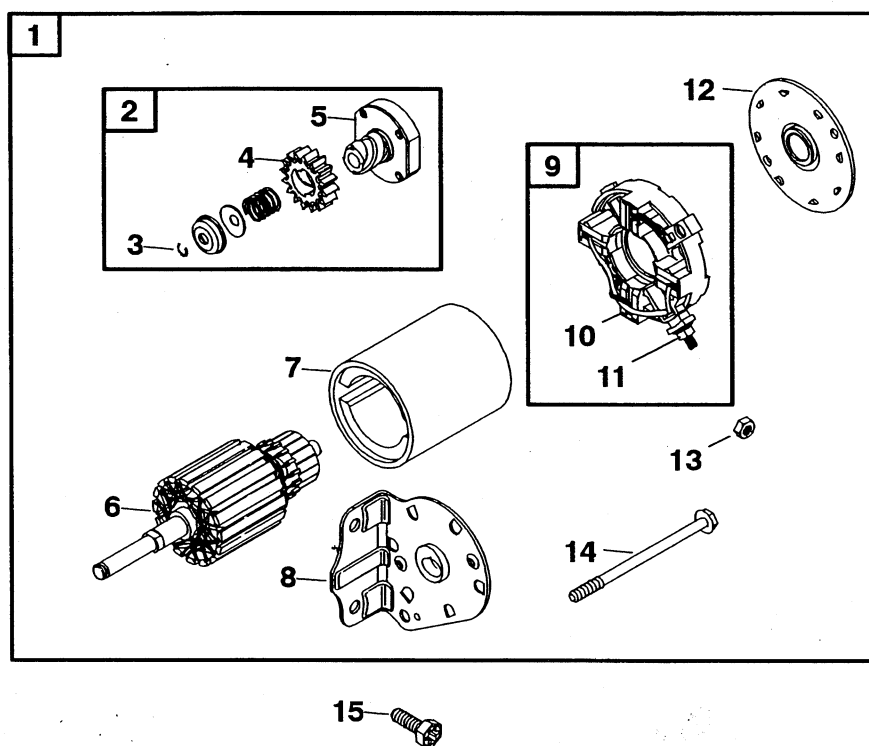


Utgåva Issue 2003- 11		Bildnr Picture No 1186		BRIGGS & STRATTON 286707, 28M707 STARTMOTOR (A)		BRIGGS & STRATTON 286707, 28M707 STARTER MOTOR (A)		Sida Page 214	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	286 707- 1185	28M 707- 1194							
A01	1	1			693551	Startmotor kpl .....	Starter motor assy .....		
A02	1	1			693699	• Startdrev .....	• Starter drive .....		
A03	1	1			691265	•• Låsring .....	•• Retaining ring .....		
A04	1	1			693713	•• Drev .....	•• Pinion gear .....		
A05	1	1			692024	•• Koppling .....	•• Drive clutch .....		
A06	1	1			692034	• Rotor .....	• Armature .....		
A07	1	1			693757	• Startmotorhus .....	• Starter housing .....		
A08		1			691283	• Lock .....	• Drive cap .....		
A08	1				691429	• Lock .....	• Drive cap .....		
A09	1	1			691293	• Borsthållare .....	• Brush retainer .....		
A10	1	1			497608	•• Släpkolssats .....	•• Brush set .....		
A11	1	1			693167	•• Mutter .....	•• Nut .....		
A12	1	1			691286	• Botten .....	• End cap .....		
A13	1	1			691029	• Mutter .....	• Nut .....		
A14	2	2			690323	• Bult .....	• Bolt .....		
A15	2	2			690372	Skruv .....	Screw .....		

A

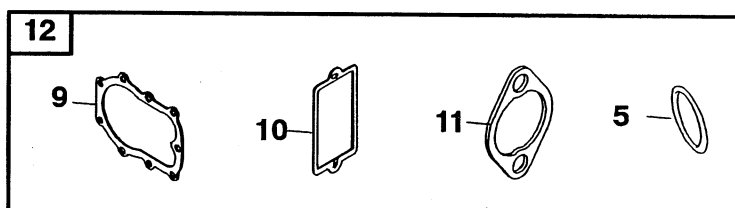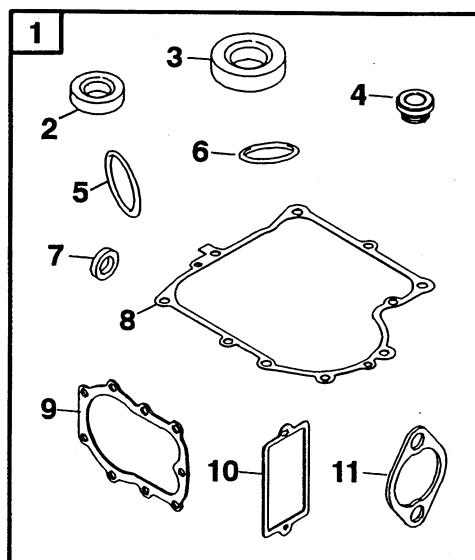

B

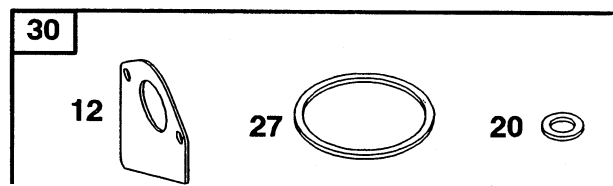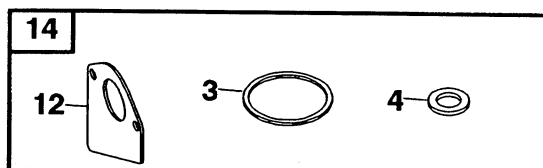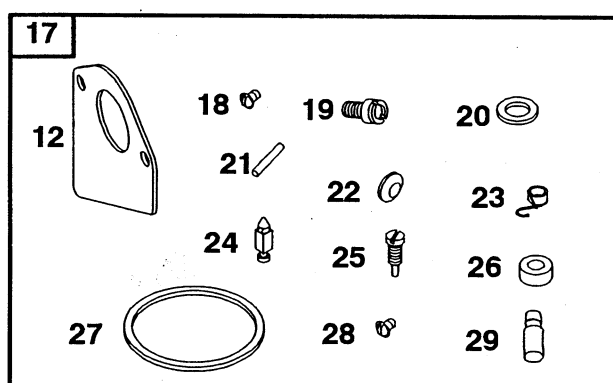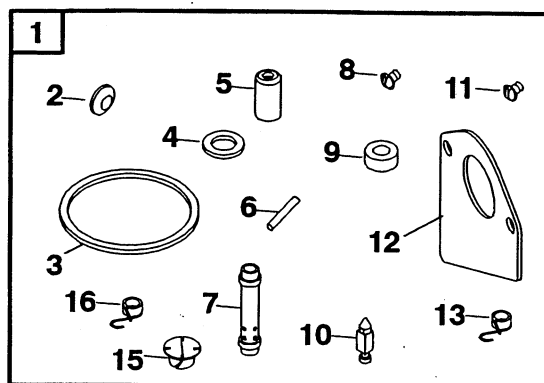



Utgåva Issue		Bildnr Picture No		BRIGGS & STRATTON 286707, 28M707 PACKN.SATS MOTOR (A) PACKN.SATS FÖRG. (B)		BRIGGS & STRATTON 286707, 28M707 GASKET SET ENGINE (A) GASKET SET CARB. (B)		Sida Page  216	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	286 707- 1185	28M 707- 1194							
A01	1	1			494241	Packningssats- motor.....	Gasket set- engine.....		.015" Standard .009" .005"
A02	1	1			391086	• Tätningsring .....	• Seal .....		
A03	1	1			291675	• Tätningsring .....	• Oil seal .....		
A04	1	1			281370	• Tätning .....	• Seal .....		
A05	1	1			691917	• O- ring.....	• O- ring .....		
A06	1	1			691870	• Tätningsring .....	• Seal .....		
A07	1	1			692407	• Tätning .....	• Seal .....		
A08	1	1			692226	• Packning .....	• Gasket .....		
A08	1	1			692405	• Packning .....	• Gasket .....		
A08	1	1			692406	• Packning .....	• Gasket .....		
A09	1	1			271866	• Packning .....	• Gasket .....		
A10	1	1			27803	• Packning .....	• Gasket .....		
A11	1	1			692236	• Packning .....	• Gasket .....		
A12	1	1			498539	Packningssats- ventil.....	Gasket set- valve .....		
B01	1				499220	Reparationssats- förg. ....	Overhaul kit- carb. ....	Walbro	
B01		1			697884	Rep.sats- förgas. ....	Carb. overhaul kit .....		
B02		1			694524	• Plugg .....	• Welch plug .....		
B02	1				695005	• Expansionsplugg .....	• Welch plug .....		
B03	1	1			281165	• Packning .....	• Gasket .....		
B04	1	1			692255	• Tätningsbricka .....	• Sealing washer .....		
B05	1	1			690577	• Säte .....	• Inlet seat .....		
B06	1	1			690525	• Flottöraxel.....	• Float hinge pin.....		
B07	1				691434	• Munstycke .....	• Nozzle .....	Standard	
B07		1			697592	• Munstycke .....	• Nozzle .....		
B08	1	1			691636	• Skruv .....	• Screw .....		
B09	1	1			691326	• Axeltätning .....	• Shaft seal .....		
B10	1	1			231855	• Nålventil.....	• Inlet needle valve.....		
B11	1	1			691636	• Skruv .....	• Screw .....		
B12	1	1			692284	• Packning .....	• Gasket .....		
B13	1	1			690802	• Fjäder o tätning.....	• Spring and seal .....	Choke A Matic	
B14	1	1			494385	Packningssats- förg. ....	Gasket set- carb. ....	Walbro	
B15	1	1			690602	• Axelbussning .....	• Shaft bushing.....		
B16	1	1			690801	• Fjäder o tätning.....	• Spring and seal .....	Manual Choke	
B17	1				694930	Reparationssats- förg. ....	Overhaul kit- carb. ....	Nikki	
B18	1				690718	• Skruv .....	• Screw .....		
B19	1				690880	• Huvudmunstycke.....	• Main jet .....	Standard	
B19	1				694925	• Huvudmunstycke.....	• Main jet .....	High Altitude	
B20	1				690997	• Tätningsbricka .....	• Sealing washer .....		
B21	1				694918	• Flottöraxel.....	• Float hinge pin.....		
B22	1				694916	• Expansionsplugg .....	• Welch plug .....		
B23	1				694912	• Fjäder o tätning.....	• Spring and seal .....		
B24	1				694922	• Nålventil.....	• Float needle valve.....		
B25	1				694927	• Munstycke .....	• Pilot jet .....		
B26	1				690998	• Tätning .....	• Shaft seal .....		
B27	1				694920	• Packning .....	• Gasket .....		
B28	1				690718	• Skruv .....	• Screw .....		
B29	1				694924	• Förgasarpplugg.....	• Carburettor plug .....		
B30	1				694931	Packningssats- förg. ....	Gasket set- carb. ....	Nikki	